precision dots

VERMES MICRODISPENSING

USER MANUAL

29.07.2025 Rev. 1

Microdispensing System MDS 3581-V







User Manual for Microdispensing Systems of the MDS 3581-V

System		Valve
MDS 3581-V	MDC 3500-V	MDV 3581-V

Tab. 1: Available products

1	Intro	duction.	•••••	••••••	7
2	Safet	y Notes.	•••••	••••••	8
	2.1	Obligat	ions and Lia	bility	8
		2.1.1	Obligation	ons of the Customer	8
		2.1.2	_	ons of the Operator	
	2.2	Residua	_	·	
	2.3	Contrac	ted Use		9
	2.4	Specific	ation and T	echnical Notes	10
	2.5	Warnin	gs		10
	2.6		_	perators and Maintenance Personnel	
	2.7	Protect	ive Equipme	ent and Safety Clothing	12
3	Gene	ral Instru	ıctions		13
	3.1	How to	Use this Ma	nual	13
	3.2				
		3.2.1		evels	
		3.2.2		on Convention	
		3.2.3		tions	
	3.3	Tools			
		3.3.1		- Universal Tool	
		3.3.2		- Nozzle Insert Changing Tool	
		3.3.3		- Adjust Tool TA Hot Melt Handle	
		3.3.4		- Nozzle Insert Cleaning Tool	
		3.3.5		- Nozzle Insert – Squeezing Out Tool TA	
		3.3.6		- Nozzle Insert Cleaning Holder	
		3.3.7		- Multi-Function Tool	
		3.3.8	MDT 328	- Tappet Sealing Changing Tool	18
		3.3.9		Key Set	
		3.3.10	_	- Torque Wrench Tool VM black	
		3.3.11		(in cN.m)	
4	Cont	rol Unit N	/DC		20
	4.1				
	4.2				
	4.3				
	4.4				
	4.5		,		
		4.5.1	Main Me	nu	28
		4.5.2		u "Pulse Parameters"	
		4.5.3	Submeni	u "Cooler/Heater"	30
			4.5.3.1	Submenu Cooler	
			4.5.3.2	Submenu Heater	
		4.5.4	Submeni	រ "Status"	34
		4.5.5	Submeni	u "Scenario"	35
		4.5.6	Submeni	u "Service-Option"	37
	4.6	Memor		DC	
5	Micro			***************************************	
-	5.1	-		Valve	
	5.1 5.2	•		/e	
	5.3	•		ve	
	ر.ر	recinite	.u. Data		

	5.4	Special F	eatures of	the Valve	45
6	Initia	l Operatio	on		47
	6.1	Delivery			47
		6.1.1	Unpackir	ng	47
		6.1.2	Content		47
	6.2	First Ass	embling of	the Valve	48
	6.3	Installati	ion of the N	Aicrodispensing System	52
		6.3.1	Installati	on of the Control Unit	52
		6.3.2	Installati	on of the Valve as Part of a Machine	52
		6.3.3	Wiring of	f the MDS	53
			6.3.3.1	Actuator Cable	53
			6.3.3.2	Sensor Cable	55
			6.3.3.3	Power Supply	56
			6.3.3.4	Connecting a Heater	
			6.3.3.5	Connecting a Cooler	
			6.3.3.6	Connection Diagram	
	6.4			ling	
	6.5	•			
	6.6			y	
	6.7		_	sions from the Fluid Box	
	6.8	Paramet	er Input an	d Start	66
7	Opera	ation	•••••	••••••	67
	7.1	Triggerii	ng a Disper	nse Sequence	67
	7.2	Dispens	Dispensing and Positioning of Dots (Modes)6		
	7.3	Paramet	Parameters for the Dispensing Process68		
	7.4		Minimum and Maximum Parameter Limits7		
	7.5	Input of	Values		71
	7.6	_		ets	
	7.7		•	er Sets	
	7.8				
	7.9				
				out Scenarios	
		7.9.2	_	Scenarios	
		7.9.3		Selection with Select Pins	
	- 40	7.9.4		t Mode	
	7.10	•	•		
	7.11	•			
	7.12	•		Leater	
	7.13	7.13.1	•	Heater nd MDC	
		7.13.1 7.13.2		on of the Heater	
	7.14			Cooling Valve	
	7.14	7.14.1	•	and MDC	
		7.14.1	_	ffset	
	7.15			Microdispensing System	
8				ICES	
J					
	8.1			232C: 9-Pin Sub-D	
		8.1.1		Commands	
		8.1.2	NO-232C	Commands	90



			8.1.2.1	Explanation of trigger commands	90
			8.1.2.2	Overview	92
			8.1.2.3	Explanations	95
	8.2	PLC-Int	erface: 15- _ا	oin, Sub-D	127
		8.2.1	Pin Fun	ctions	128
		8.2.2	PLC-Sig	nals	129
			8.2.2.1	Single-Shot Mode	129
			8.2.2.2	Burst Mode (Example with Three Shots)	129
			8.2.2.3	External Mode	130
			8.2.2.4	Infinite Mode	130
			8.2.2.5	Comparison of the signals DosOK and SingleDosOK for Scenario ON and Scenario O	FF131
		8.2.3	Remote	Adjust	132
			8.2.3.1	What is the Remote Adjust?	132
			8.2.3.2	Advantages	132
			8.2.3.3	Procedure	132
	8.3	AUX so	cket		135
9	Clean	ing	•••••	•••••	136
	9.1	Prelimi	nary Notes		136
	9.2	Heat Re	sistance of	f Sealing Materials	137
	9.3	Compa	tibility betv	ween Sealing Materials and Selected Media	138
	9.4	Cleanin	g Methods	· · · · · · · · · · · · · · · · · · ·	139
		9.4.1	Pre-puri	ifying	139
		9.4.2	Rinsing	with a purifying agent	140
		9.4.3	Demou	nt the Valve	142
		9.4.4	Fine Pu	rification	144
		9.4.5	Assemb	ling of the Fluid Box and the Tappet	149
10	Main	tenance	•••••	••••••	153
	10.1	Maintei	nance Indio	cator	153
	10.2			appet, Tappet Sealing and Nozzle Insert	
		10.2.1		nance of the Tappet	
		10.2.2		nance of the Tappet Sealing	
		10.2.3		nance of the Nozzle Insert	
		10.2.4	Exchang	ge of the Tappet, the Tappet Sealing and the No:	zzle
			Insert		155
11	Error	Message	2S	•••••	156
	11.1	Table o	f Error Mes	sages	157
	11.2			ror Messages	
	11.3	Status N	Messages		171
12	Trans	port, Sto	orage an	d Disposal	172
	12.1	•	•		
	12.1	•			
	12.3	_		oosal	
13		•	-	•••••	
	13.1				
	13.1			ıts	
	13.2				
	13.4	_			
	13.4	Juppiy	UIIIL		ı/ɔ

	13.5	Heaters and Heater Controllers	
	13.6	Cleaning Tools	177
	13.7	Tools	178
	13.8	Nozzle Inserts	
	13.9	Other Parts	180
14	Attac	hments	181
	14.1	EU Declaration of Conformity	181
	14.2	Dimensional Drawing MDC 3500-V	
	14.3	Dimensional Drawing MDV 3581-V	183
	14.4	Connection Diagram PLC-interface	184
	14.5	Overview of the MDC Menu	185
	14.6	Overview of the Command Functions	186
	14.7	Connection Diagram MDS 358x	189
	14.8	Declaration Concerning Decontamination of Shippe	d Equipment 190
15	List o	f Figures	191
16	List o	f tables	194
17	Index	ζ	196



1 Introduction

With a micro dispensing system of the MDS line from VERMES Microdispensing, you have bought a high quality product. Due to the longstanding experience of the team in regards to electronic devices and piezo controls, these products provide highest functionality and reliability.

Thank you very much for your trust in us.

We will now show you how to assemble and use the microdispensing system. In order not to impair the inherent safety concept of the system, you have to follow the procedures described in this manual consequently during installation and operation.

Read this manual before you start the assembly and always consult it during the use of the microdispensing system.

Start with the chapter "Safety Notes" (see chapter 2, page 8). This will help to prevent any problems for the user or the equipment. In the case of further questions, consult our Technical Support.

Technical Support	VERMES Microdispensing GmbH
	Rudolf-Diesel-Ring 2
	83607 Holzkirchen
	Tel.: +49 (0) 80 24 6 44-26
	Fax.: +49 (0) 80 24 6 44-19
	support@vermes.com
	www.vermes.com

Service hours Monday - Friday 9.00 to 17.00 (CET). We recommend checking the relevant serial numbers (e.g. MDC and MDV) and the firmware revision before contacting the support.

The MDS 3000 Product Family

The MDS models are members of the MDS 3000 product family, specialized in most accurate dispensing and designed for flexible use with substances of medium and high viscosity (up to 2000000 mPas). Applications can be found in the fields of SMT and in the production of electronics, semiconductors and photovoltaic modules and many more.

Each microdispensing system belonging to the MDS 3000 product family is composed of a high precision valve based on a piezoelectric element (MDV series), a control unit (MDC series) and an optional selectable supply unit.

Due to its compact modular design, the system can be integrated quickly into any existing production environment without major preparatory work. A change in the production line (e.g. a modification of the liquid to be processed) is easily possible, since all of the dispensing parameters are adjustable in a large range. Finetuning of the sequence is therefore possible at any time. The system allows for reproducible proportioning of hundreds of identical single dots or beads within a few seconds.

A comprehensive choice of accessories is available, e.g. nozzle inserts, tappets, seals and supply units, so that the system can easily be adapted to new challenges any time, without giving rise to major investment.

2 Safety Notes

This chapter summarizes the general safety aspects of the system. Further points to observe are emphasized in the corresponding subchapters.

2.1 Obligations and Liability

In order to protect the health of personnel and to avoid unnecessary damage, all of the recommendations of the manufacturer concerning safety must be explained to every member of the team taking part in installation, operation or maintenance of the system.

VERMES Microdispensing does not accept any liability for material damages or personal injury originating from inappropriate use, violation of safety prescriptions, or any procedure inconsistent with the instructions of this manual. The general rules for prevention of accidents as well as local environmental regulations must be in place and thoroughly followed by the personnel.

2.1.1 Obligations of the Customer

In view of a trouble-free operation of the microdispensing system, the customer has to select his personnel carefully:

- Unauthorized use must be prevented. Persons ignoring the fundamental requirements of industrial safety, environmental protection and prevention of accidents are not allowed to work with the system.
- New operators must correspondingly be instructed and trained, so that they can understand and put into practice the instructions of this manual. For certain measures, a particular qualification may be required.
- The manual must remain accessible at any time.

2.1.2 Obligations of the Operator

All persons in charge of the system must:

- Continuously respect the general rules for prevention of accidents.
- Be aware of the safety notes of this manual. This is necessary also for operators trained by the manufacturer or experienced in work with similar systems.
- Consult the manufacturer in any case of doubt. Applications beyond the scope of the specification and improvised repair work must be avoided.

2.2 Residual Risks

The microdispensing system has been developed and designed with the common requirements of safety in mind, and corresponds to the current state of technology. In the delivered layout, it complies with the following regulations and directives:

- 2014/30/EU Electromagnetic Compatibility
- 2011/65/EU Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS 2013-01-03)
- DIN EN 61010-1 (VDE 0411) Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory
- DIN EN ISO 12100-1 and DIN EN ISO 12100-2 Safety of the Machinery, Fundamental Terms
- DIN EN 60204-1 (VDE 0113) Safety of the Machinery, Electric Installations of Machinery, Part 1 General Requirements
- DIN EN 982 Safety Requirements for Fluid Power Systems and their Components Hydraulics



Despite this comprehensive inherent safety structure, the operation of the microdispensing system may entail danger

- · For the health of the operator or a third party,
- · For the system itself,
- Or give rise to another material damage.

Therefore, the use has strictly to be limited:

- To the intended application.
- To a state in which the technical safety of the system can be guaranteed (i.e. it is strictly forbidden to start or continue the operation whenever a defect has become obvious).

You have to solve problems immediately, if they have a potential to impair safety aspects. For this reason, it is imperative that this manual remains accessible any time without delay. In an emergency, a short reaction time may be crucial.

If you transmit the system to any other department or institution, this manual must accompany it.

2.3 Contracted Use

The systems of the MDS 358x Series have been designed for ultra-precise contactless dispensing of fluids in a large range of viscosity (up to 2000000 mPas), in unfilled or filled state (also with abrasive extenders), to be operated in a conveniently equipped industrial or laboratory environment.

Deviations from the instructions of this manual must explicitly be authorized by the manufacturer (in writing); otherwise his liability with regard to the guarantee becomes null and void.

This includes:

- Extensions and changes of design
- Modifications of the system, or spare parts not recommended by the manufacturer
- Inappropriate material selection (lack of compatibility between parts and dispensed fluids)
- Operation with damaged parts or after improvised repair
- Dispensing of fluids able to affect the functionality of the system (in case of doubt, consult manufacturer)
- Manipulation or absence of integrated safety devices or sealings
- Repair by persons or enterprises not authorized by the manufacturer
- Operation beyond the scope of the specification
- · Auxiliary equipment not recommended by the manufacturer
- The system is not admitted for applications in hazardous locations (ATEX zones)

In no event shall we be liable under our guarantee or any other provision of the agreement for damages resulting from a violation of the instructions of this manual.

For further questions concerning current applications and modifications of the system with respect to new requirements, contact the manufacturer, the responsible sales partner or the Technical Support.

2.4 Specification and Technical Notes

- The system is designed for interior use only. Maximum altitude: 2000 m.
- The relative air humidity shall not surpass 80 % rH at 31 °C or 50 % rH at 50 °C (with a linear decline).
- Temperature: 10 °C till 50 °C
- Admissible mains voltage fluctuations: Within the range of \pm 10 % of rated voltage.
- Transient overvoltage tolerated acc. to IEC 60364-4-443, max. degree of soiling: 2
- Mains cables must feature a protective conductor. In the case of cables not delivered by Vermes Microdispensing, the guarantee for the MDS is valid only up from the interface.
- Power outlets must comply with common safety prescriptions.
- During the application, you must guarantee sufficient air circulation. For further details, refer
 to Installation chapter (see paragraph 6.3.1 "Installation of the Control Unit", page 52).
 For exact dispensing results, the temperature of the actuator system should stay below 80 °C.
 Therefore, you might need cooling. Cooling is achieved by compressed air, free of fine

particles, dust, oil and condensate, quality classes 3, 4, 3 acc. to DIN/ISO 8573-1:2010.

- Solid particles: Quality class 3 max. number of particles/m³: 0.5 – 1 μm: < 90000, 1 – 5 μm: < 1000
- Water content: Quality class 4 max. pressure dew point +3 °C
- Residual oil: Quality class 3
 1 mg/m³ max.

2.5 Warnings

- Handle the mains cables correctly: Always seize the cable at the plug. Never touch it with wet hands.
- Under no circumstances connect a schuko-plug (type F, CEE 7/4) with a socket build for an unearthed plug (type C, CEE 7/17). The system would not be grounded.
- The cable should never be squeezed or kinked. Never place the instrumentation (or any other object) on the cable.
- Damaged cables may give rise to fire and danger caused by electricity. Inspect them visually in regular intervals. You should exchange damaged parts at once.
- In the case of a major disturbance, disconnect the equipment immediately from the mains.
- Spare parts not delivered or recommended by the manufacturer could affect the inherent safety of the system. The same problem arises, if the customer attempts to process substances not admitted for the dispensing system.
- Unqualified repair work often causes major damages, sometimes even personal injuries. Therefore, repair is reserved to our Technical Support and authorized subcontractors.
- Before removing the actuator and sensor cable, the system must be switched OFF.
- For longer interruptions, switch OFF the control unit.
- Before disconnecting the control unit from the mains, switch it OFF.
- Repeatedly switching ON and OFF the equipment may reduce the lifetime of the power unit.
- Before charging the fluid system with an aggressive, reactive or toxic substance, you have to verify that it is compatible with all of the contacting components inside the system.
- The supply pressure at the cartridge or in the pressure tank of 7 bar resp. 100 bar (according to the system configuration) should never be exceeded.



- If you use the valve with a heater for the nozzle unit, the temperature in that area can reach up to 180 °C. Do not touch it during operations and afterwards only once it had enough time to cool down.
- When cleaning the components in contact with the transported substance, you should place the device in a safe and stable position, without being subjected to vibrations.
- To clean the actuator, a cloth not fluffy and lightly moistened (e.g. by Isopropanol) is recommended. During the cleaning procedure, no liquid should penetrate into the actuator itself (e.g. through the plug).
- The valve is designed according to the Normally Open principle. Therefore, the valve is normally open and the transported liquid can flow. Before switching OFF the microdispensing system, do not forget to lower the supply pressure to atmospheric pressure.

2.6 Qualifications of Operators and Maintenance Personnel

The microdispensing system together with all attached accessories should only be used by competent personnel with an adequate qualification. They must know and understand the content of the manual. We do suppose that the department head is aware of possible dangers, and correspondingly assigns the tasks to persons able to execute their work in a responsible manner.

According to DIN VDE 0105 and IEC 364 qualified personnel refers to members of the team with a sufficient knowledge of relevant norms, directives and rules for prevention of accidents. They need the qualification and experience necessary, so that they are in a position to realize and to prevent possible dangers already at an early stage. Knowledge in First Aid and a direct contact to the local emergency units is required as well.



Protective Equipment and Safety Clothing

You should always wear suitable protective equipment, whenever handling or dispensing aggressive, reactive or toxic substances. The same is valid in the presence of a high supply pressure.

Safety Clothing	Safety Icon
Safety glasses	
Breathing apparatus	
Overall and gloves resistant to the corresponding chemical fluid	
When you work in the direct vicinity of the MDS for a prolonged period, you should also wear ear protection.	

Tab. 2: Protective Equipment and Safety Clothing



3 General Instructions

This chapter summarizes the content of this manual and contains general information for the user. Some pictures might differ slightly from the actual product.

3.1 How to Use this Manual

- Each step of installation, operation and maintenance has to be performed in accordance with this manual.
- You can find information about safety aspects and an efficient use of the system in the concerning chapters.
- This manual represents an integral part of the delivery and must be made available to every user working with this system. Always keep it in close vicinity.
- It must be preserved until the end of the lifetime of the system.

3.2 Legend

3.2.1 Danger Levels

Instruction	Possible Consequences
DANGER!	The damage is imminent! If the operating procedure is not strictly observed, this situation may result in death, considerable material damage or environmental contamination.
WARNING!	Warn of a potentially dangerous situation! The danger of death and serious injuring cannot be excluded.
CAUTION!	Cautions about a potential problem! Danger of minor or medium injuries.
IMPORTANT NOTE!	Warns about potential damage to the equipment! An operating procedure which, if not strictly observed, may result in damage to the equipment, unexpected interruptions or shutdown.
INFORMATION!	Supplementary recommendation for an economical and timesaving use of the equipment.

Tab. 3: Danger levels

3.2.2 Illustration Convention

Symbol	Explanation
Step 1:	The sequence must be followed in correct order
Step 2:	
-	Each step of this sequence is mandatory, none of them should be omitted
——	Direction of movement
•	Lists
[]	Symbol for a key on the keypad

Tab. 4: Illustration convention

3.2.3 Abbreviations

Abbr.		
CTF	Ceramics Tappet Flat	
CTK	Cleaning Tool Kit	
MDC	Controller (MicroDispensingControl unit)	
MDF	Fluid box (MicroDispensingFluid box)	
MDS	MicroDispensingSystem	
MDT	MicroDispensing Tool	
MDV	Valve (MicroDispensingValve)	
MDX	Supply unit	
MFC	Multifunctional Controller	
NFN	Nozzle Fixation Nut	
NI	Nozzle Insert	
PLC	Programmable Logic Controller	
POD	Point of Dispensing	
RTC	Real-time clock	
TTF	Tungsten carbide Tappet Flat	

Tab. 5: Abbreviations



3.3 Tools

The following tools are required to install and to operate the MDS:

- MDT 301 Universal Tool (Order no. 1010208)
- MDT 303 Nozzle Insert Changing Tool (Order no. 1007083)
- MDT 306 Torque Wrench Tool VM black (Order no. 1015062)
- MDT 307 Adjust Tool TA (Order no. 1014143)
- MDT 316 Nozzle Insert Cleaning Tool (Order no. 1013324)
- MDT 323 Nozzle Insert Squeezing Out Tool TA (Order no.1014283)
- MDT 324 Nozzle Insert Cleaning Holder (Order no.1014310)
- MDT 327 Multi-Function Tool (Order no.1014440)
- MDT 328 Tappet Sealing Changing Tool (Order no.1014503)
- Hexagon Key Set (Order no. 1012993)

When you order tools, always specify the order number of the required item.

IMPORTANT NOTE

No foreign tools

Do not use auxiliary tools or foreign products, otherwise damages to the equipment might be possible.

3.3.1 MDT 301 - Universal Tool

The tool MDT 301 comprises two subcomponents screwed to each other:

- "Sealmounter" with a mandrel to insert and to remove the tappet sealing (1.)
- "Adjustment grip" with a receptacle for the adjust screw (2.)

Intended Purpose:

- 1. Fixing of tappet sealing and tappet centering piece
- 2. It may also be used to execute the general adjust (alternatively to tool MDT 327)



Tab. 6: MDT 301 - Universal Tool (Order no. 1010208)

3.3.2 MDT 303 - Nozzle Insert Changing Tool

The MDT 303 is required for the exchange of the nozzle insert. The 3 pins of the MDT 303 grip into the receptacle bores of the tappet centering screw in order to unscrew the tappet centering screw from the fluid box.

Intended Purpose:

1. Screwing apart/together fluid box body and tappet centering screw



Tab. 7: MDT 303 - Nozzle Insert Changing Tool (Order no. 1007083)

3.3.3 MDT 307 - Adjust Tool TA Hot Melt Handle

The MDT 307 can be used in combination with the bit BitVM-A Tightening Screw, magnetic (order no. 1014519) to perform the adjust with a valve capable of the top adjust function.

Intended Purpose:

1. Performing the top adjust



Tab. 8: MDT 307 - Adjust Tool TA Hot Melt Handle (Order no. 1014143)



3.3.4 MDT 316 - Nozzle Insert Cleaning Tool

The MDT 316 is used to clean clogged nozzle inserts made of carbide metal, ceramics or diamond (series N11 to N22). This is achieved by pumping a fat or grease with high pressure through the nozzle channel. Additional information is in the Quick Reference Guide MDT 316 Nozzle Insert Cleaning Tool. You can download it from the VERMES homepage (www.vermes.com). The necessary password you can get from our sales (sales@vermes.com).

Intended Purpose:

1. Cleaning of clogged nozzle inserts



Tab. 9: MDT 316 - Nozzle Insert Cleaning Tool (Order no. 1013324)

3.3.5 MDT 323 - Nozzle Insert - Squeezing Out Tool TA

The MDT 323 has a thin and a wide end. Both are meant for different applications.

Intended Purpose:

- 1. Detaching the nozzle insert from the fluid box (thin end)
- 2. Detaching the tappet sealing (wide end)

Tab. 10: MDT 323 - Nozzle Insert – Squeezing Out Tool TA (Order no. 1014283)

3.3.6 MDT 324 - Nozzle Insert Cleaning Holder

The MDT 324 has a receptacle, in which the nozzle insert is placed to be held tight. Then you can clean the nozzle insert with compressed air without the danger of blowing it away accidently. Additional information is in the Quick Reference Guide "Nozzle Insert Cleaning Holder MDT 324". You can download it from the VERMES homepage (www.vermes.com). The necessary password you can get from our sales (sales@vermes.com).

Intended Purpose:

1. For holding a nozzle insert during cleaning with compressed air



Tab. 11: MDT 324 - Nozzle Insert Cleaning Holder (Order no. 1014310)



3.3.7 MDT 327 - Multi-Function Tool

The knobs of the MDT 327 grip into the slots of the adjust screw or into the slots of the tightening screw (gearing VM-A). The other end holds open-ended wrenches (size 7) and (size 8). They are needed for mounting the system.

Intended Purpose:

- 1. Performing the adjust
- 2. Fixing the tightening screw to the fluid box
- 3. Fixing the Nozzle Fixation Nut
- 4. Opening/closing Luer-Lock connector
- 5. Picking up a nozzle insert

Tab. 12: MDT 327 - Multi-Function Tool (Order no. 1014440)



3.3.8 MDT 328 - Tappet Sealing Changing Tool

The MDT 328 is used to mount and demount the tappet sealing and the tappet centering piece.

Intended Purpose:

- 1. Squeezing out of the tappet sealing from the fluid box
- 2. Squeezing out of the tappet centering piece from the fluid box
- 3. Pushing the tappet sealing into the fluid box




Tab. 13: MDT 328 - Tappet Sealing Changing Tool (Order no. 1014503)


3.3.9 Hexagon Key Set

The set includes three hexagon keys (sizes 2, 2.5 and 3) for hex-screws, with blades made of hardened steel and ergonomic grips.

Intended Purpose:

- 1. Mounting and demounting the fluid box (2)
- 2. Mounting and demounting the tappet guard (2)
- 2. Mounting and demounting the isolation body (2)
- 4. Mounting and demounting the cartridge holder (2 or 2.5, depending on type)

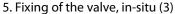

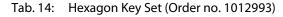





3.3.10 MDT 306 - Torque Wrench Tool VM black

The MDT 306 allows you to screw tight screws with an exactly set tightening torque. The value can be adjusted continuously at the torque wrench tool.

You can order the necessary bits separately or together with the torque wrench as a set in a tool box (MDTS 1 - Torque Wrench Tool Set TA, order no. 1013521). Additional information is in the Quick Reference Guide "Torque Wrench Tool VM MDT 306". You can download it from the VERMES homepage (www.vermes.com). The necessary password you can get from our sales (sales@vermes.com).

Intended Purpose:

- 1. Tightening screw
- 2. Tappet Centering Screw BY
- 3. Cartridge holder
- 4. Fluid box connector Luer-Lock
- 5. Nozzle Fixation Nut
- 6. MDC front panel
- 7. Valve screws



Tab. 15: MDT 306 - Torque Wrench Tool VM (Order no. 1015062)

3.3.11 Torques (in cN.m)

Element	Gearing	Bit	Torque	(cN.m)	Cross Reference
		Order No.			
Nozzle Fixation Nut		1014204	150	180	Page 40
(hexagon screw, size M7)					
Screws for MDC front panel		1013373	30	40	Page 52
(cross recess screw, size M3)					
Screws for cartridge holder M 3 x 5		1013294	40	50	Page 48
(hexagon socket, size 2)					
Screws for isolation body M 3 x 5		1013294	40	50	Page 42
(hexagon socket, size 2)					
Tightening screw		1014519	120	140	Page 48
(gearing VM-A)					
Tappet centering screw BY	0	1014521	100	140	Page 40
(gearing VM-B)					
Connector BY		1016631	70	80	Page 48
(into mounting body PEEK, hexagon					
socket, size 2.5)		1016631	120	140	Page 48
Connector BY		1010031	120	140	i age to
(into mounting body metal, hexagon socket, size 2.5)					

Tab. 16: Torques (in cN.m)

4 Control Unit MDC

This chapter contains relevant information about the control unit. It describes the menu structure, keypad and functions of the control unit.

4.1 Technical Data

	Value
Dimensions	128 mm H x 102 mm W x 173 mm D (w/o Kabel) (see dimensional drawing, Page 182) 3 RU x 20 HP
Weight	ca. 1500 g
Supply Voltage	48 V DC
Current Consumption	Max. 8 A
	During start-up, this value can increase by a factor of 5 (start-up peak).
Ambient Temperature	10 °C - 50 °C
Air Humidity	The relative humidity rH might not surpass 80% at 31 °C or 50% at 50 °C (connect linearly for other temperatures).
Casing Type	Plug-in case for 19" rack
Color of Casing	Black, with lighter front panel
Ventilation	Convection
Internal Storage Locations:	10
Display Lines	2 lines with 16 characters each
Display Color	White with background lighting
Keypad	12 softkeys
Color of Keys	Blue, beige
Control Lamps (Front)	1x Heating circuit (red)
	1x Maintenance (red)
	1x Cooling/Adjust OK (green)
	1x Attention/Adjust not OK (red)
Control Lamps (Back)	1x Illuminated power lamp
Plug Contacts (Back)	1x Mains plug (48 V DC)
	1x 9 pin Sub-D RS-232C
	1x 15 pin Sub-D PLC
	1x AUX-socket 24V
	1x Sensor socket
	1x Actuator socket
	1x Socket for heating
	1x Socket for cooling

4.2 Front Side

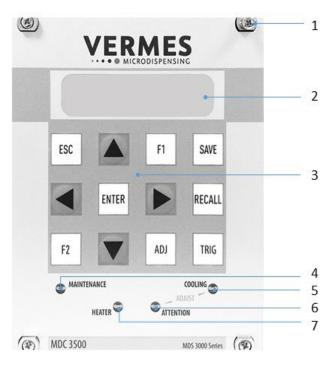


Fig. 1: Front Side

- 1 Mounting hole
- 2 LC display
- 3 Keypad with 12 soft keys
- 4 Control lamp for maintenance "red"

- 5 Control lamp for cooling/adjust "green"
- 6 Control lamp for attention/adjust "red"
- 7 Control lamp for status of heating "red"

LC display:

Data, service intervals and menu options are shown in the two lines of the illuminated LC display (LCD = "liquid crystal display"). The current menu option appears in the upper line. The lower line contains the current parameter value for dispensing, according to numerical data to be modified.

Keypad with 12 softkeys:

Menu options to control the system are selected by means of these keys.

Details for changing parameters etc. are explained in a following chapter (see paragraph 4.4, page 25).

Control lamp for maintenance:

As soon as this lamp lights up, it is recommended to return the valve to the manufacturer (or licensed subcontractor) for regular periodic maintenance.

Control lamp for cooling/adjust (green):

This green LED has two purposes.

During the adjust, as soon as the LED is ON, the adjust value is OK and can be confirmed by **[enter]**.



Outside of the adjust, it indicates the intensities of cooling (for details, see paragraph 4.5.3.1, page 31).

- More effective cooling, once the actuator temperature goes over 10 °C above the target temperature - LED flashes
- "normal" cooling, if the actuator temperature is within 10 °C above the target temperature -LED ON

Control lamp for attention/adjust (red):

This red LED has two purposes.

During the adjust, the LED lights up, if you screw the adjust screw too far. You have to screw it out according to the instructions of this manual (see paragraph 6.5 "The Adjust Process", page 60).

Outside of the adjust, the LED is ON, whenever the MDC has detected an error.

Control lamp for status of heating:

This red LED indicates the activity of the heating (for more details, see paragraph 4.5.3.2, page 31).

The heater is ON, and the target temperature is reached and stable – LED ON

The heater is deactivated - LED OFF

The heater is ON, but the target temperature is not yet reached – LED flashes

4.3 Back Side

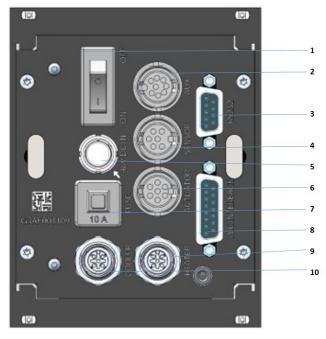


Fig. 2: Back Side

- 1 ON/OFF switch
- 2 AUX socket
- 3 RS-232C interface (9-pin)
- 4 Sensor socket
- 5 Power connection

- 6 Actuator socket
- 7 10 A fuse
- 8 PLC interface (15-pin)
- 9 Socket for cooling
- 10 Socket for heating

ON/OFF switch:

By means of this switch, the unit is switched ON and OFF.

AUX socket:

This connector can be used for supply of an external device (e.g. an optocoupler) or to control certain parameter setups or scenarios (see paragraph 7.8 "Select Pins", page 72). It is one of the three interfaces of the control unit (see paragraph 8.3, page 135 for the pin assignments).

RS-232C interface (9-pin):

Since the system offers the possibility of external programming of dispensing parameters via PC, a local RS-232C is integrated to receive the data. For the communication protocol, refer to paragraph 8.2.1, page 128.

Sensor socket:

For the connection of the sensor cable.

Power connection:

Connects the control unit to power via an external power supply. The MDC needs 48 V DC. For information regarding the pin functions, see Fig. 3.





Fig. 3: Connection for power supply 48 V DC – pin functions

Actuator socket:

For the connection of the actuator cable.

10 A fuse:

For the protection of the electronic parts inside of the control unit.

PLC interface (15-pin):

Different inputs and outputs may be connected. For the communication protocol, refer to paragraph 8.1.1, page 89.

Socket for cooling:

The connection cable for FCV (for the valve cooling) has to be connected here.

Socket for heating:

The heater cable has to be connected here.



4.4 Function Keys

Function Key	Function
trig	Manual trigger key Pressing the [trig] -key instantaneously launches a dispensing procedure according to the selected parameter settings.
save	The [save] -key opens the menu for storing current parameters. Ten storage locations are available for distinct configuration sets. Each set contains values for all pulse parameters.
	Select the desired storage location by means of arrow keys.
	Press [enter] to confirm.
	Press [esc] to cancel without saving the selection.
	Parameter sets saved in the internal memory can be retrieved any time with the
recall	[recall]-key.
	Here you can load the settings stored with [save].
	Use the arrow keys to select one of the ten internal storage locations.
	Press [enter] to confirm the selection.
	Press [esc] to abort.
adj	The [adj]-key is used to start the adjust (see paragraph 6.5, page 60). It is required during each initial operation and after an exchange of the nozzle unit. With this procedure, the position of the nozzle insert with respect to the tappet is preselected.
	Pressing the [enter]-key confirms the menu selection and opens the corresponding
enter	submenu.
	or
	The entry of a value is confirmed. The screen changes to the next-higher menu level.
	Pressing the [esc]-key aborts the current action. Values just entered are deleted.
	The next-higher menu level opens.
esc	or
	Direct access to the next-higher menu level.
	[↑]-key
	Access to the next-higher menu level.
	or
	Increasing of a numerical value.
	[‡]-key
177	Access to the next-lower menu level.
	or
	Reduction of a numerical value.



Function Key	Function
	[←]-key The screen moves one menu step back.
	or
	The cursor is shifted one position to the left.
	or
	A parameter is modified.
	[→]-key The screen moves one menu step ahead.
	or
	The cursor is shifted one position to the right.
	or
	A parameter is modified.
F1	The [F1] -key opens the valve, taking into consideration the current values for "Rising" and "Falling". The Needle Lift used is capped at 80 %. The valve remains opened until the key is released. Maximum length: 2 min. Then the valve closes automatically in order to protect the actuator.
F2	If you start the control unit, while holding the [F2] -key, you have the option to format the EEPROM. With [enter] you agree, with [esc] you skip this point and reach the main menu just as normal. This function will only be necessary in exceptional cases.
	Important Note!
	Settings for Scenarios will not be reset back to the factory settings. That is only possible with the options "Scenario" and "Reset ALL" after entering the service code 1000 (see paragraph 4.5.6 "Submenu "Service-Option"", page 37).



4.5 Menu Structure

The main menu of the control unit MDC 3500-V contains five submenus: "Pulse Parameters", "Cooler/Heater", "Status", "Scenario" and "Service-Option". With the [enter]-key you can reach the level of the submenus. There you can switch around with the keys [\rightarrow] and [\leftarrow]. Another option from the main menu is to use [\rightarrow] or [\leftarrow], which allows you to gather some information about the system, like maintenance situation or ID numbers. The items are "Tappet", "Nozzle", "Date/Time", "MDC ID", "Valve ID" and "Firmware Rev." "Firmware Rev." will give you the current revision of the firmware on your MDC. "Date" gives the current date and time (as UTC), as the MDC has a real time clock (RTC). Menu levels are always "wrap-around", i.e. you can move on from the last item in a menu directly on to the first. With [esc] or [\uparrow] you can change from a sub menu into the next higher menu level.

The information shown in the display differs, depending on the menu level (see paragraph 4.5.1, page 28).

- Dispensing parameters for a particular process can be recalled and modified in the submenu "Pulse Parameters".
- "Cooler/Heater" select the settings for the heating and the valve cooling, if set up.
- You can use the submenu "Status" to decide on individual cycles for the replacement of tappet and nozzle insert (see paragraph 10.1 "Maintenance Indicator", page 153). The current state of the system with respect to the maintenance interval can be verified by the function "Maint. Cycle" (see paragraph 10.1 "Maintenance Indicator", page 153). With "Maint. Message" you can decide to show maintenance messages or not. Error messages concerning the system are shown with the function "Error".
- In the submenu "Scenario" you can enter values for pre-defined scenarios. Here you can also set the option to work with these scenarios.
- The submenu "Service-Option" is used to enter service codes and to change the baud rate.

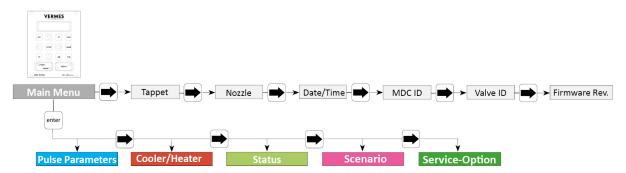


Fig. 4: Main menu

4.5.1 Main Menu

When you switch ON the MDC, you always start in the "Main Menu". The display shows "Ready" (position 1, see Fig. 6, page 29). With [**enter**] or [\downarrow] you can reach the submenus. For the information on the main level use [\rightarrow] or [\leftarrow]. All levels are "wrap-around", i.e. you can circle around between the items with both keys.

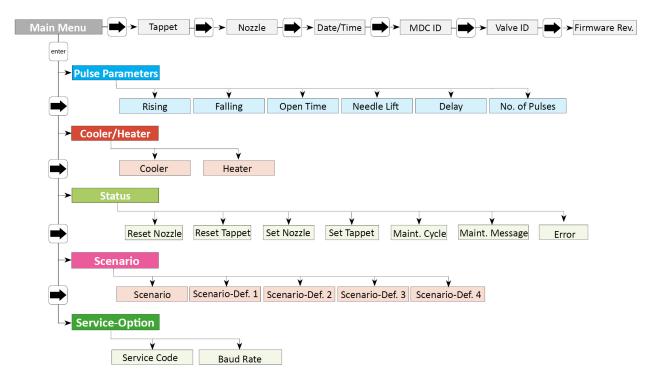


Fig. 5: Menu structure

INFORMATION

Automatic change back to the main menu

On this level, the display jumps automatically back to "Ready", if you do not press any button for longer than about 10 sec. From the submenus, the display will jump back as well, if no buttons are pressed, but the wait is a bit longer.

In the upper right corner of the display a frequency is shown (position 2, see Fig. 6). This is the dispensing frequency resulting from your current parameter settings. While "Scenario" is "ON", the word "Scenario" is shown instead (only while entering parameters in the submenu, the frequency is always shown). Next to the frequency, on position 3, one or two letters show the submenu you are in (PP = Pulse Parameters, CH = Cooler/Heater, S = Status, Sc = Scenario, SO = Service-Option).

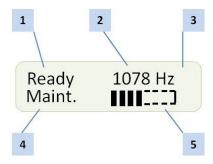


Fig. 6: Display main menu

In the lower line, a maintenance bar is shown (position 5). If all eight sections are filled, maintenance is recommended. Though be aware that this bar is only updated when starting the MDC!

In "Tappet" and "Nozzle" you can see the current values as well as the respective reference value. If a heater is used, instead of "Ready" the current temperature is displayed.

4.5.2 Submenu "Pulse Parameters"

In the submenu "Pulse Parameters", you can recall and modify dispensing parameters for a particular process. The limits for these parameters you can find in the diagram. You cannot enter values outside these ranges. The values for Rising and Falling are for 80 % Needle Lift. If the Needle Lift is smaller, the values might be lower. The dispensing frequency based on the current parameters is shown in the main menu in the display (position 2, see Fig. 6, page 29), but only, if "Scenario" is "OFF".

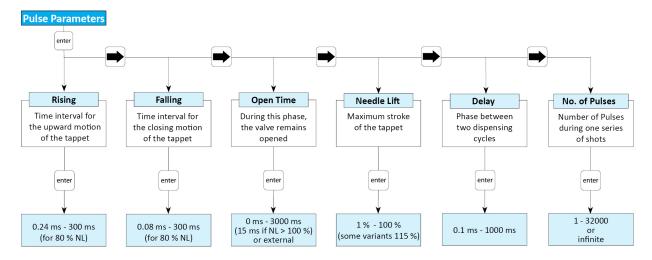


Fig. 7: Submenu "Pulse Parameters"

4.5.3 Submenu "Cooler/Heater"

A Microdispensing System MDS can be equipped with a heater or a cooling valve. For heating, you can use a 48 V heater (e.g. Heater MDH-48-BY, order no. 1014231). For cooling, you can use a flow control valve (e.g. Flow Control Valve FCV-AC 6.0 M12, order no. 1016265).

INFORMATION

MDC detects the heater and the cooler during start-up

During start-up, the MDC also checks if a heater and/or a flow control valve is connected. The messages "Heater connected" (or "Heater is disconnected!") and "Cooler connected" (or "Cooler is disconnected!") will be displayed. When a heater is connected, the display switches between the message "Heater connected" and the message "press enter" (see Fig. 8). You need to press the [enter]-key to confirm it.





Fig. 8: Message "Heater connected - press enter"

A CAUTION

Danger of burns through high temperatures!

The heater can reach temperatures of up to 180 °C.

- Do not touch this area during operation.
- And afterwards only touch it once it has cooled down.

By using a heater, the dynamical viscosity of the fluid to be dispensed can be controlled. For some liquids, dispensing without heating is impossible. Heating may also be required to ensure a constant process temperature, or when the dispensing has to take place above room temperature.

To reach a certain target temperature takes time. This time is influenced by many different circumstances, e.g. the outer temperatures.

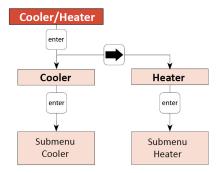


Fig. 9: Submenu "Cooler/Heater"

All relevant functions of the heater and the cooling valve can be set in this submenu. With "Cooler" you can reach the submenu for the cooling settings (see paragraph 4.5.3.1, page 31). With "Heater" you can reach the submenu for the heater settings (see paragraph 4.5.3.2, page 31).



4.5.3.1 Submenu Cooler

This submenu has three menu items.

A CAUTION

Avoid uncontrolled compressed air release

An uncontrolled release of compressed air can cause damages and injuries. Therefore, your controlling machine needs to have a stopcock with air vent. Additionally, your XY-machine needs to follow the directives for working with compressed air.

To reach a certain target temperature takes time. This time is influenced by many different circumstances, e.g. the outer temperatures.

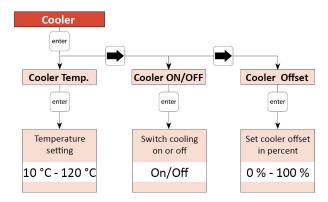


Fig. 10: Submenu "Cooler"

All relevant functions of the cooling system can be set in this submenu. With "Cooler Temp.", you can set the temperature with an accuracy of 0.1 °C. With "Cooler ON/OFF", you can switch the cooling valve ON or OFF. "Cooler Offset" allows you to set a cooler offset in percent (see paragraph 7.14.2 "Cooler Offset", page 87). This cooler offset provides an offset value for the flow control valve, which is independent from the regulation system. The value is given as a percentage value.

In case the cooler is turned ON, if the actuator temperature is more than 10 °C above the target temperature, the systems starts a more effective cooling. During this fast cooling phase, the green Cooling LED flashes. Once the actuator temperature falls within 10 °C above the target temperature, the green Cooling LED no longer flashes, but is ON. For exact dispensing results, the actuator temperature should stay below 80 °C. If the Error 502 appears (see paragraph 11.2, page 158), dispensing is only again possible after the actuator temperature falls below 80 °C.

To check information about the cooler (e.g. status, temperatures) via RS-232C interface, send the command "COOLER:?" (for details see paragraph 8.1.2.3, page 95).

4.5.3.2 Submenu Heater

This submenu has two menu items.

A CAUTION

Danger of burns through high temperatures!

The nozzle heater can reach very high temperatures.

- Do not touch this area during operation.
- And afterwards only touch it once it has cooled down.

If possible, wear heat resistant gloves.

To reach a certain target temperature takes time.

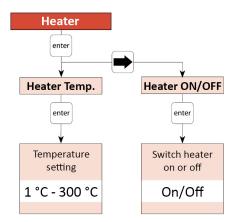


Fig. 11: Submenu "Heater"

All relevant functions of the heater can be set in this submenu. With "Heater Temp.", you can select the temperature values with an accuracy of 0.1 $^{\circ}$ C. The maximum temperature you can set at the MDC is 300 $^{\circ}$ C, but the effective maximum depends on the connected heater (e.g. a maximum of 180 $^{\circ}$ C with MDH-48-BY). With "Heater ON/OFF", you can switch the heater ON and OFF.

For an example of the display see Fig. 12, when the heater is switched ON, but the target temperature is not reached yet. The target temperature is shown instead of "Ready" in the upper left corner of the display. Instead of dispensing frequency, the current temperature is refreshing in the upper right corner of the display. During this phase, the red Heater LED flashes.





Fig. 12: Before reaching the target temperature

When the target temperature is reached and stable, the dispensing frequency is shown in the upper right corner of the display (as an example, see Fig. 13, page 32). The red Heater LED no longer flashes, but stays ON.





Fig. 13: The target temperature is reached

IMPORTANT NOTE

Target temperature must be above ambient temperature

The target temperature you set must be higher than the ambient temperature. Otherwise, the heater works continuously without reaching the target. E.g. a target temperature of 25 °C can



make sense, if the ambient temperature is 20 °C. But with an ambient temperature of 30 °C, a target temperature of 25 °C would be too low.

To check information about the heater (e.g. status, temperatures) via RS-232C interface, send the command "HEATER:?" (for details see paragraph 8.1.2.3, page 95).

4.5.4 Submenu "Status"

"Maint. Cycle" refers to the unit as a whole and cannot be modified by the user. For the nozzle and the tappet however, it is possible to determine a fix number of cycles before replacing the concerning items and to reset the counters after exchange. In "Maint. Message" you can decide to show or hide the maintenance messages (for more information regarding all aspects maintenance, see paragraph 10.1, page 153).

"Error" shows the latest error messages of the system (up to 50), with date and time (UTC). Help to solve error messages you will find in paragraph 11.2, page 158.

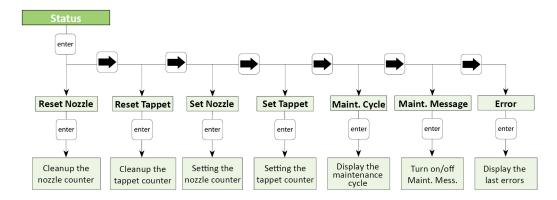


Fig. 14: Submenu "Status"



4.5.5 Submenu "Scenario"

In the submenu "Scenario" you decide if you want to work with scenarios (see paragraph 7.9.1 "Basics about Scenarios", page 74). You can also enter parameters for pre-defined scenarios. Each of the four potential scenarios has its own submenu, where you can set those parameters. The second diagram explains the structure of these submenus. Check there to find the possible limits for those parameters.

With $[\rightarrow]$ and $[\leftarrow]$ you can switch between the four scenarios.

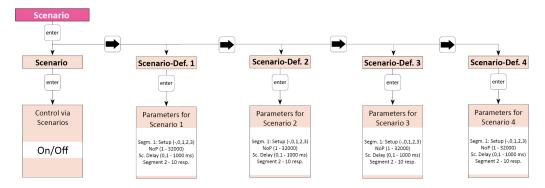


Fig. 15: Submenu "Scenario"

To enter the parameters for a scenario, press [enter] on the respective submenu "Scenario-Def." The structure of these submenus is explained in the picture below (see Fig. 16, page 36).

In "Sc:1.1 Setup" you can enter "0", "1", "2" or "3" to select a setup or "-", to decide that no further segment will follow. "0" is the working configuration, "1" to "3" are the parameters of the respective setups 1 to 3. Then the scenario will end with this segment and the menu will stop here as well. (If you later change the "-" to the number of a setup, the following segment will be unlocked again in the menu.) If you set the blank directly in the first segment, the system will simply use the working configuration instead of the scenario.

After entering a setup and $[\rightarrow]$, you can select the Number of Pulses next. This NP replaces the one from the setup, which would be otherwise used. Another $[\rightarrow]$ gives the option to enter a scenario delay. Standard value is 10 ms.

Another [→] brings you to the second segment in your scenario ("Sc:1.2 Setup"), where you have the same options as with the first. All in all you can combine up to ten segments (though only four different setups, since only setups 0 to 3 are available), each with its own NP and scenario delay, unless you stop your scenario beforehand by selecting "-" instead of a setup. After the last segment, another [→] brings you the option to set the PLCStop "ON" or "OFF". With "ON" a scenario always ends automatically, once the trigger signal drops to "low". No further segments of the scenario will be performed. With the PLCStop "OFF", the trigger signal only matters, if the NP in a setup is set as "infinite". With these parameters will be dispensed until the trigger signal drops to "low". If the trigger signal is already "low" when reaching the signal, only one pulse will be shot. Then the next segment of the scenario will follow after the scenario delay (unless, of course, it was already the last segment of the scenario).

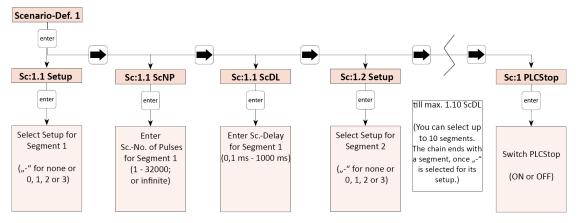


Fig. 16: Submenu "Scenario-Def. 1"

INFORMATION

Finding PLCStop quickly

If you just want to change the PLCStop setting, but not any of the segments in your scenario, it is quickest to use $[\leftarrow]$ once after entering the scenario, since this submenu is wrap-around, just like all other.



4.5.6 Submenu "Service-Option"

This menu has two sections. In "Service Code" you can enter a service code (see Tab. 17). "Baud Rate" is used to change the baud rate. There are five possible values: 9600, 19200, 38400, 57600 and 115200 (new MDCs are set to 115200).

Service Code	Explanation
33	If you enter 33, you can activate or change the adjust offset (see paragraph 7.12 "Adjust Offset", page 81).
1000	If you enter 1000, you enter a further submenu containing the options listed in the table below (see Tab. 18).
4000	If you enter 4000, you can de-/activate the multi dot mode in the Scenario Mode (see paragraph 7.9.4, page 76). Default setting is OFF.
	Information!
	You can only activate the Multi Dot Mode, while the Scenario Mode is ON.

Tab. 17: List of service codes

Option	Explanation	
SingleDosOK	You can select between the possibilities that the SingleDosOK signal is switched per pulse or per setup. (Default setting is per pulse. For the pin configuration of the PLC interface, see paragraph 8.2.1, page 128.)	
DosOK with Delay	You can select, if before switching the signal DosOK there should be one delay executed at the end. (Default setting is OFF.)	
Auxiliary Mode	Here the auxiliary mode can be switched ON or OFF (see paragraph 7.11 "Auxiliary Mode", page 80).	
Factory Settings	 Here any parameters can be returned to the default factory settings (see paragraph 7.10 "Factory Settings", page 79). You have got four alternatives: Setup 0 – 3 (the parameters of the working configuration and the setups 1 to 3 are returned to the factory settings) 	
	• Reset ALL (all parameters are returned, including the settings of the scenarios; also the heater will be turned OFF and the temperature set to 10°C, cooling will be turned OFF, set to 80 °C and the cooler offset will be set as 0 %)	
	• Scenario (the parameters and settings of the scenarios are returned to the factory settings)	
	 Setup ALL (the parameters of the working configuration and all setups are returned, setups 4 – 10 receive values of setup 0) 	

Tab. 18: Options in the submenu of service code 1000

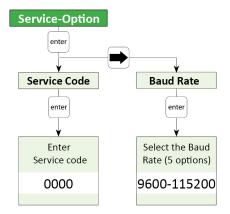


Fig. 17: Submenu "Service-Option"



4.6 Memories of the MDC

The MDC contains several memories to save parameter setups.

The first one is the RAM (Random Access Memory). Here the parameters of the current dispense process will be saved. This memory will be erased when the controller is switched of or disconnected from power. When starting again, the MDC will load the first of eleven parameter memory sets saved on the EEPROM (Electrically Erasable Programmable Read Only Memory) into the RAM. This first parameter setup is also called the "EEPROM current working parameter configuration", or short "working configuration" or "EEPROM working configuration".

The parameter set in the EEPROM working configuration is usually the same as the parameter set saved in the RAM memory. When using the keypad to program the controller, the two memories will always have the same contents. The only way to create a difference in the parameter set saved in the RAM and in the EEPROM working configuration is by using some special commands through the RS-232C.

The remaining ten EEPROM memory sets can be used to save different parameter setups when programming the controller through the keypad interface (use the command [save]).

In order to change the values saved in the EEPROM working configuration you may use the MDC keypad (enter the parameters in the menu "Pulse Parameters", then press [enter]).

Or you may use one of the following commands via RS-232C:

- TRIGGER:SET:<Rising>,<Open Time>,<Falling>,<Needle Lift>,<Number of Pulses>,<Delay>,1
- TRIGGER:ASET:<Rising>,<Open Time>,<Falling>,<Needle Lift>,<Number of Pulses>,<Delay>,1
- STRIGGER:SET:<Rising>,<Open Time>,<Falling>,<Needle Lift>,<Number of Pulses>,<Delay>,1
- STRIGGER:ASET:<Rising>,<Open Time>,<Falling>,<Needle Lift>,<Number of Pulses>,<Delay>,1

All values transmitted to the control unit by one of the following commands will not be saved in the EEPROM working configuration.

- TRIGGER:SET:<Rising>,<Open Time>,<Falling>,<Needle Lift>,<Number of Pulses>,<Delay>
- TRIGGER:ASET:<Rising>,<Open Time>,<Falling>,<Needle Lift>,<Number of Pulses>,<Delay>
- STRIGGER:SET:<Rising>,<Open Time>,<Falling>,<Needle Lift>,<Number of Pulses>,<Delay>
- STRIGGER:ASET:<Rising>,<Open Time>,<Falling>,<Needle Lift>,<Number of Pulses>,<Delay>

Instead it will remain in the RAM memory until erased by another RS-232C command, or when the control unit is switched OFF and the EEPROM is read out into the RAM during restart. The reason for having these two different types of commands (the distinction is the "1" at the end) is that it takes up to 1 sec to save the parameter set in the EEPROM.

On top of the working configuration and the ten parameter setups there is another parameter set-ting saved in the software on the EEPROM. This is called the "factory setting". It cannot be changed by the user. It may be loaded to the working configuration and the RAM memory after major disturbances of the system.

Additionally there is the possibility to save combinations of setups, so called "Scenarios" (see paragraph 7.9 "Scenarios", page 74).

5 Microdispensing Valve

This chapter contains relevant information about the valve. It describes the structure and the hardware configuration.

5.1 Composition of the Valve

The Microdispensing valves of Vermes Microdispensing are modular. A valve is composed of seven different modules:

- Valve body (includes Electronics module and Actuator system) (1)
- Tappet (not visible) (2)
- Tappet sealing (not visible) (3)
- Nozzle insert (not visible) (4)
- Nozzle fixation nut (5)
- Heater MDH-48-BY with fluid box (6)
- Media supply (7)

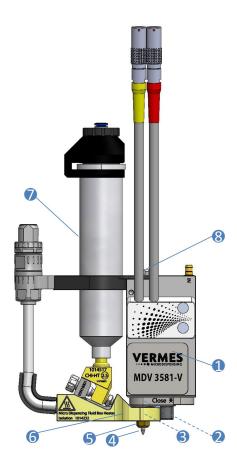


Fig. 18: Composition

The valve body (1) accommodates the electronics module, the actuator system, the adjust screw and the tappet (not visible in the picture). The electronics module holds the electronics to receive the actuator and sensor signals. Here are the connectors for sensor cable and actuator cable integrated in the surface of the case; they have to be linked to the control unit. The electronics module is connected to the actuator system, representing the core of the microdispensing valve. The actuator system houses the sensor, the piezoelectric element and the mechanics to drive the



tappet. Actuator case and mechanics are sealed for protection against dust and contamination. The adjust screw (8) is at the top end of the valve body.

At the bottom of the valve is the inlet where the tappet (2) runs. The tappet can be exchanged. Powered by the actuator the tappet moves with high speed back and forth. It hits the dispensing medium and presses it through the opening of the nozzle insert. Tappets can be made of ceramics, of carbide metal or of poly diamond. They can have different forms or sizes. A tappet should be checked and cleaned regularly or exchanged if necessary (see paragraph 10.2.1 "Maintenance of the Tappet", page 154).

The connection between valve body and fluid box is made up of the tappet sealing (3). There are different types of tappet sealings, e.g. the Tappet Sealings PE and Tappet Sealings PTFE, which have to be used together with a tappet centering piece.

A small but important module is the nozzle insert (4), which has to be considered as a wearing part. Thanks to the bayonet fluid box, it can easily be cleaned and exchanged in case of need. VERMES Microdispensing offers a large selection of different nozzle inserts to allow for optimum dispensing results, according to the current application. They can differ in form and material.

The nozzle fixation nut (5) contains the nozzle insert (NI).

The fluid box (6) is integrated into the heater MDH-48-BY. It is thermally isolated from the actuator system. Its purpose is to transport the liquid from the cartridge or the tank to the nozzle fixation nut. In order to simplify independent cleaning, this module can easily be disengaged from the valve, just by one click, thanks to the bayonet system. Information how to assemble a fluid box you can find in paragraph 9.4.5, page 149. In case you need no heating for your application, you can use the Mounting Body BY (order no. 1014369) instead of the heater MDH-48-BY.

The media supply (7) supplies the dispensing medium and is connected with the fluid box. VERMES Microdispensing GmbH has many different configurations available (see paragraph 13.4, page 175). For smaller amounts to be dispensed you can use a cartridge. They come in different sizes and types. For larger amounts, you can use a tube connector to connect a pressure tank with the fluid box.

5.2 Explosion View Valve

The explosion view of an MDV 3581-V. Usually the cable connections point upwards, but on request, they can be oriented differently, so that the cables point to the side. You can change the orientation of the compressed air connections according to your needs. To do so, you will need a hexagon key, size 1.5.

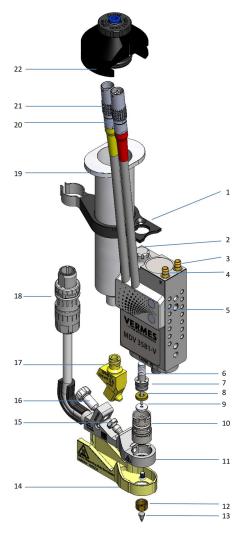


Fig. 19: Explosion view valve

- 1 Cartridge holder
- 2 Adjust screw
- 3 Connections for compressed air for valve cooling – in (use optional)
- 4 Connections for compressed air for valve cooling – out (use optional)
- 5 Microdispensing valve
- 6 Tappet rod with tappet spring
- 7 Tappet centering screw
- 8 Tappet centering piece

- 11 Heater MDH-48-BY
- 12 Nozzle fixation nut
- 13 Nozzle insert
- 14 Isolation body (optional)
- 15 Connector BY
- 16 Tightening screw
- 17 Cartridge base CHI
- 18 Connection for heater cable
- 19 Cartridge
- 20 Cable connection Actuator (red)



9 Tappet sealing PE10 Fluid box body with O-ring BY

- 21 Cable connection Sensor (yellow)
- 22 Connection for compressed air



5.3 Technical Data

Parameter	Value
Inlet Pressure Range	Depending on the supply unit (e.g. cartridge or pressure tank)
Dynamic Viscosity of Fluids	Medium to high viscosity up to 2000000 mPas
Response Time (PLC-interface)	ca. 130 µs
Dispensing Frequency (max.)	> 3 kHz
Dispensing Frequency (average)	> 1 kHz
Compatibility	all aqueous fluids, organic solvents, weak acids and bases
Dimensions (MDV 3581-V)	92.1 mm x 41.5 mm x 25 mm
Weight (MDV 3581-V)	ca. 420 g (depending on configuration)
Position of Tappet in Absence of Voltage	open



5.4 Special Features of the Valve

Normally Open

In its not energized state, i.e. in absence of voltage, the valve remains in open position, so that the tappet tip does not block the channel of the nozzle insert. The liquid in such a situation therefore may flow. In reality, this fact does not represent a problem, since for this model, usually high-viscous media are processed which in worst case drain off very slowly.

It is recommended however, that users bear this fact in mind, and reduce the supply pressure to atmospheric pressure during longer interruptions and before switching OFF the unit.

With PX2 Technology

The microdispensing valve uses PX2 technology (VERMES Piezo Xtreme 2), a new piezo technology developed and patented by VERMES Microdispensing. With PX2 technology, the valve is perfectly suited for high frequency and heavy duty applications. The piezo is encapsulated, which means it has a longer lifetime in humid or dusty environments.

With Bayonet Fluid Box

Thanks to the bayonet system, the fluid box can be removed easily with just one click from the valve. There are no screws. This allows for a very quick exchange of nozzle fixation nut and nozzle insert or of the tappet for cleaning or maintenance purposes. Afterwards you have to carry out the adjust, in order to establish a convenient position of the nozzle insert with respect to the tappet. This way a reproducible process remains ensured.

Highest Flexibility

Due to the modular design of the series, nozzle units and fluid boxes can be exchanged easily. This allows at any time for a quick adaption of the system configuration to new applications. A comprehensive choice of accessories is also available for special circumstances.

These modifications can be performed in no time, avoiding downtimes for the process. Ordering the equipment already at an early stage however is recommended; do not forget to specify the relevant data (Valve ID etc.). Consult our Technical Support beforehand, if special parameters have to be taken into consideration.

Functionality Independent of the Position

The functionality of the valves does not depend on the fitting position, considerably simplifying the integration into an existing process.

User-friendly Design

The control unit does not give rise to compatibility problems with respect to the other components of a complex process structure. Service is possible by keypad or, thanks to the integrated RS-232C, by remote PC.

Secure Wiring

The valves are equipped with high-quality Lemo connectors. Those can be connected and disconnected easily, but hold secure against any accidental opening.

Comprehensive Material Selection

Only the best materials are used for the production of Vermes Microdispensing valves.

 All parts in contact with the transported medium consist of high-alloy special steel, rust- and acid-resisting, or modifications of high-duty polymers of the PE (Polyethylene), PEEK (Polyetheretherketone) and PTFE (Polytetrafluoroethylene) family.



- Sealings can be made of different materials. You can find notes regarding heat resistance and chemical resistance in paragraph 9.2, page 137 and paragraph 9.3, page 138.
- For nozzle inserts, special steel, stainless steel, ceramics and PEEK options are permanently in store, allowing for perfect tailoring of the configuration to the needs of the particular application.



6 Initial Operation

6.1 Delivery

VERMES systems are shipped in carefully packed state. Transport damages however can never be totally excluded, and deadlines stated in insurance contracts should not be exceeded.

6.1.1 Unpacking

After receiving the merchandise:

Check the package visually for any kind of damage.

If yes:

Detected damages must be notified to the carrier. As soon as the complaint has been confirmed in writing, contact the responsible forwarder and inform VERMES Microdispensing.

If no damage is detected:

- Open the package.
- Remove any contained subcomponents and parts of the microdispensing system from the package and check the delivery for completeness.

6.1.2 Content

According to the purchase order, the following components may be included; some of them are already preassembled:

- 1 Control unit MDC
- 2 MicroDispensing Valve MDV
- 3 Fluid box*
- 4 Nozzle fixation nut*
- 5 Nozzle insert*
- 6 MDT 303 Nozzle Insert Changing Tool

- 7 MDT 329 L-Shape hexagon Key 2 mm
- 8 MDT 327 Multi-Function Tool
- 9 Tappet Grease TF 1 ml syringe
- 10 MDT 323 Nozzle Insert Squeezing Out Tool TA
- 11 Actuator cable (red)*
- 12 Sensor cable (yellow)*

^{*}These parts are included only, if ordered explicitly.

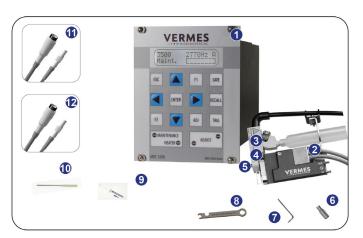


Fig. 20: Content



Options	Recommended options
Different models of fluid boxes	Cleaning set
Different fluid box connectors	MDT 301 - Universal Tool
Nozzle heating	MDT 306 - Torque Wrench Tool
	MDT 324 - Nozzle Insert Cleaning Holder

If the intended application needs particular accessories (e.g. seals made of special material), consult our Technical Support at once (see Page 7). Do not start the system in incomplete state.

6.2 First Assembling of the Valve


This chapter describes how to ready your microdispensing system for the first dispensing session. Always make sure all screw couplings sit tight (torque values in paragraph 3.3.11, page 19).

INFORMATION

Some parts preassembled

Some elements of the equipment are usually delivered in preassembled state. In those cases, you can omit the respective steps.

Proceed as follows:

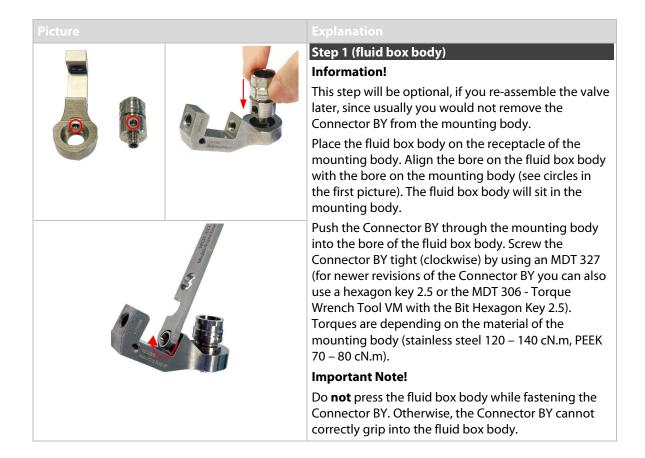



Step 2 (O-ring)

In case that you received the O-ring separately, you have to mount it onto the fluid box body. Pull the O-ring over the fluid box body with a pair of tweezers. Be careful not to damage the O-ring.



Step 3 (tappet sealing)

Use MDT 328 - Tappet Sealing Changing Tool to press the Tappet Sealing PE/PTFE/HT into the fluid box body until it sits tight.



Step 4 (tappet centering piece)

Press the tappet centering piece into the fluid box body. Use the wide end of the MDT 323 - Nozzle Insert - Squeezing Out Tool TA. Make sure the tappet centering piece rests flat.



You do not need a tappet centering piece, if you use a 2G tappet rod.



Step 5 (tappet and tappet centering screw)

Screw the Tappet Centering Screw BY into the fluid box. Do not screw it tight yet. Screw it only for two rotations.



Important note!

Before mounting, please place a small droplet of Tappet Grease TF (Order no. 1014637; droplet size ca. 2 mm) on the tappet and another on the tappet spring (for placing see blue arrows in the picture). Make sure that the tappet tip is free of grease. Rotate the tappet and pull it in and out for three times to spread the grease.




Place the tappet spring over the Tappet Centering Screw BY.



Push the tappet rod through the tappet spring into the Tappet Centering Screw BY. Make sure that the tappet goes through the tappet sealing.



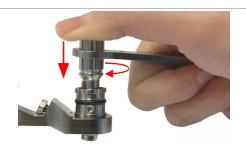

Screw the Tappet Centering Screw BY completely into the fluid box (torque 100 – 140 cN.m) with MDT 303 - Nozzle Insert Changing Tool.

Make sure the three pins of the MDT 303 fit exactly into the three holes of the Tappet Centering Screw BY. Turn the MDT 303 clockwise while pressing it down slightly to the fluid box.

Combine the MDT 303 with MDT 327 for a better leverage.



Step 6 (nozzle insert)

Clip the nozzle insert into the fluid box. Use the small hole of MDT 327 - Multi-Function Tool to pick up the nozzle insert and to place it. Make sure the nozzle insert sits flat.



Step 7 (nozzle fixation nut)

Screw the nozzle fixation nut clockwise onto the fluid box. Use MDT 327 Multi-Function Tool.



Step 8 (cartridge base)

Place the cartridge base onto the fluid box and fix it with the tightening screw. Screw the tightening screw clockwise with MDT 327 Multi-Function Tool (torque 120 – 140 cN.m).



Important note!

In case you use a Cartridge Base without integrated luer lock, you need to screw the Fluid Box Connector Luer Lock into the top bore of the cartridge base CH. Use the open-ended wrench of the MDT 327 (hexagon screw size M8, torque stainless steel 100 – 120 cN.m, PEEK 40 – 60 cN.m).



Optional (isolation body)

For thermally sensitive applications, you might use an isolation body. Pull it onto the fluid box, until it clips in. Screw it tight with the two screws for the isolation body (torque 40 – 50 cN.m). Use the MDT 329 - L-Shape hexagon Key 2 mm.



Step 9 (adjust screw)


Open the adjust screw completely. Screw counter-clockwise. Use MDT 327 Multi-Function Tool.



Step 10 (fluid box)


Turn the locking lever by 180° from "Close" to "Open" position.



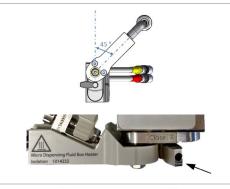

Push the fluid box carefully in a 45° angle onto the valve.

Straighten the fluid box and close the locking lever.

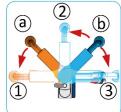

Optional positions

The bayonet fluid box has three different locking positions (1: 90°, 2: 0°, 3: +90°) in which the valve can be operated. To fix in locking position 1, mount the fluid box at position a. To fix in locking position 2 or 3, mount the fluid box at position b.



Step 11 (cartridge holder)

Screw the cartridge holder on top of the valve body (torque between 40 - 50 cN.m). Use the MDT 329 or a hexagon socket key size 2. Depending on the size of the cartridge, you have to select the correct cartridge holder. Hook the heater connection of the fluid box into the cartridge holder (see black arrow).



Step 12 (cartridge and compressed air adapter)

Push the cartridge through the cartridge holder and screw it clockwise into the thread of the cartridge base.

Finally, push the compressed air adapter onto the cartridge and screw it tight.

Tab. 19: Assembling of the valve

6.3 Installation of the Microdispensing System

Prior to installation, verify the conditions in the intended location, with respect to the specification of the system and information detailed in this chapter.

The control unit and the valve have to be installed strictly in conformity with the procedures described below. The system requires:

- Power supply
- Pneumatic supply

INFORMATION

Read chapter "Safety Notes" first

The entire procedure of installation is reserved to persons reliably informed about the safety considerations (see chapter 2, page 8).

6.3.1 Installation of the Control Unit

The control unit is designed as a 19" plug-in module, which has to be fixed in the corresponding rack by means of four pan-head screws at the front side. Leave sufficient space around the unit to simplify service. Ventilation should be available. Recommended are cases complying with enclosures according to EN 61010-1 with regard to fire protection.

IMPORTANT NOTE

Potential damage to the control unit

Do not close the four pan-head screws too tight; otherwise the front panel can be damaged (see torque table paragraph 3.3.11, page 19).

To avoid overheating and ensure the required ventilation, a minimum distance between the control unit and any other object should be maintained (at least 1.5 cm). Heat should neither be accumulated nor externally be introduced. Do not obstruct natural convection. Ventilation from the bottom side and air exhaust above is important. Minimum width of ventilation openings is 8 cm x 8 cm.

For high-duty applications (from ca. 300 Hz) or in the case of an air cooled model (AC variants), a rack with separate ventilation is advisable, since in these situations an airflow of 30 $\,\mathrm{m}^3/\mathrm{h}$ for each control unit is compulsory.

6.3.2 Installation of the Valve as Part of a Machine

Preferably, mount the valve on an automatic XYZ table or in a similar device (XYZ positioning system). Stable seat at the fixture of Z-axis is imperative, as the valve should not become loose during the dispensing process. For this purpose, insert two M4 hex screws to a depth of 4 mm, through the bores located at the narrow side of the valve. Their distance center to center amounts to 45 mm. To improve accuracy when positioning the valve on a receptacle, additionally use the alignment bore and the long hole, located on the narrow side of the valve as well.



Fig. 21: Distance of the bores 45 mm

IMPORTANT NOTE

Corrosion

In order to prevent corrosion, all parts used in connection with the valve (screws, fixing plates etc.) should consist of stainless steel, nonferrous metals or galvanized steel.

6.3.3 Wiring of the MDS

The valve is connected to the control unit by means of a four-pin actuator plug (red) and five-pin sensor plug (yellow). The plugs are protected by coding against interchanging by mistake.

A WARNING

Switch off before removing plug

Never attempt to attach or remove one of these plugs, when the system is connected to mains.

A CAUTION

Plan your cable connections carefully

Make sure to plan your cable run carefully, when considering the wiring, especially if the valve is included into a more complex system. Your cables cannot hang too loose, since then they might start to swing and get damaged, because of the vibrations of the valve. On the other hand, you need enough length in your cables, if the valve is moved in the z-axis.

IMPORTANT NOTE

Switch off for disconnection

Before you disconnect the valve from the control unit or connect it to it, switch OFF the whole system.

6.3.3.1 Actuator Cable

Power to the piezo element is supplied by the actuator cable, which is wrapped with a red antikink sleeve. The voltage range is -50 V to 150 V (bipolar operation).





Fig. 22: Connecting the actuator cable – step 1

 Step 1: Plug the cable into the corresponding connector on the rear side of the control unit and screw it in place.



Fig. 23: Connecting the actuator cable – step 2

 Step 2: The other end, equipped with a four-pin LEMO connector (corrugated sleeve), has to be connected to the red marked, looped cable attached to the valve.

INFORMATION

Connecting cables

Verify during the connecting procedure that the red dots on the plugs point towards each other.

INFORMATION

Release latch for disconnection

To secure the connectors there is a latch, which you have to release before disconnection. You have to grip the corrugated outhousing. Pull back the outhousing of the male connector to release the latch (see Fig. 24). Then pull both connectors apart without losing the grip and they will separate.

Do not pull at the cables!

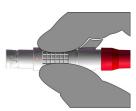


Fig. 24: Connector actuator cable - grip



6.3.3.2 Sensor Cable

This cable wrapped in yellow is provided to transfer data from the sensor integrated in the valve to the control unit. Connect it as described below.



Fig. 25: Connecting the sensor cable – step 1

Step 1: First, fix the sensor cable to the corresponding socket on the rear side of the control
unit.



Fig. 26: Connecting the sensor cable – step 2

 Step 2: The five-pin connector with a corrugated sleeve has to be connected to the yellow marked, looped cable attached to the valve.

INFORMATION

Connecting cables

Verify during the connecting procedure that the red dots on the plugs point towards each other.

INFORMATION

Release latch for disconnection

To secure the connectors there is a latch, which you have to release before disconnection. You have to grip the corrugated outhousing. Pull back the outhousing of the male connector to release the latch (see Fig. 27, page 56). Then pull both connectors apart without losing the grip and they will separate.

Do not pull at the cables!



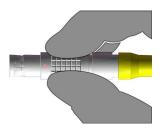


Fig. 27: Connector sensor cable - grip

6.3.3.3 Power Supply

Power to the control unit is supplied by the Switching Power Supply 48 V 4 A Push-Pull (order no. 1015251, see picture below).





Fig. 28: Switching Power Supply 48 V 4 A Push-Pull and its connector

- Step 1: Plug the Push-Pull connector into the socket at the bottom of the rear side of the control unit. You can find the figure of the rear side in paragraph 4.3, page 23.
- Step 2: Connect the Switching Power Supply to the power supply.
- Step 3: Switch on the control unit by pressing the ON/OFF button on the rear side of the control unit to the position "ON".

IMPORTANT NOTE

Valve not connected

If a valve is not connected when switch on the MDC, an error message ("101 wrong valve") appears on the screen.

INFORMATION

MDC detects the heater and the cooler during start-up

During start-up, the MDC also checks if a heater and/or a flow control valve is connected. The messages "Heater connected!" (or "Heater is disconnected!") and "Cooler connected!" (or "Cooler is disconnected!") will be displayed. If the setting is selected, that a heater is automatically activated during start-up, you need to confirm it by pressing the [enter]-key, when a heater is connected.

6.3.3.4 Connecting a Heater

As an example. the heater MDH-48-BY (order no. 1014231, see Fig. 29, page 57) is shown to demonstrate the connection of a heater.



Fig. 29: Heater MDH-48-BY

The Heater Cable 48 V is available in different length (e.g. 2 m, order no. 1014064, see Fig. 30, page 57). To connect the connector of the heater to the rear side of the control unit ("Heater"), use the heater cable.



Fig. 30: Heater cable 48 V

6.3.3.5 Connecting a Cooler

As an example. the Flow Control Valve FCV-AC 6.0 M12 (order no. 1016265, see Fig. 31) is shown to demonstrate the connection of a cooler.



Fig. 31: Flow Control Valve FCV-AC 6.0 M12

To connect a cooler to the MDC, you need the Connection Cable for FCV-AC/HF M12 to MDC (length 2 m, order no. 1016252, see Fig. 32, page 58).





Fig. 32: Connection Cable for FCV-AC/HF M12 to MDC

With the connection cable, you can connect the cooler connector of the FCV-AC 6.0 M12 to the rear side of the control unit. Connect the air outlet of the flow control valve to the inlet of the microdispensing valve (marked with "IN"). Use a suitable hose. Connect the air inlet of the flow control valve to the compressed air supply.

6.3.3.6 Connection Diagram

The picture below offers an overview of how to connection all parts with cables and hoses (using one flow control valve and one heater as example).

Connection diagram MDS 3581-V

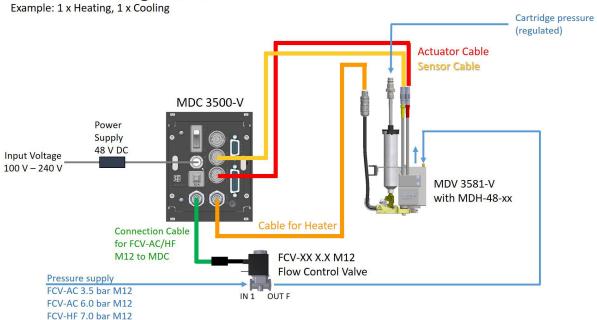


Fig. 33: Connection diagram of MDS 3581-V



6.4 Valves with Air cooling

If you want to air cool your valve with compressed air, you have to connect the air hoses after finishing the cable connections of the valve. Use 4 mm hoses.

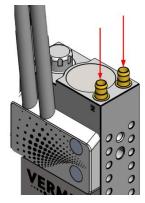


Fig. 34: Valve with air cooling connected

One end of the hose has to be pushed onto the air inlet of the valve (in); the other one is connected to the air supply.

The second connector (out) represents the outlet, evacuating the heated compressed air from the valve. You can extend this connection with an air hose. Push one end of the air hose onto the adapter. When running the hose to the air supply, take care not to impair functions of the system, or to disturb operators during their work.

For air cooling you should use a compressed-air pressure of about 2 bar. For a hot melt application or other high temperature applications, you should set the pressure higher, at up to 4 bar.

IMPORTANT NOTE

Quality of compressed air

Quality of compressed air should comply with DIN ISO 8573-1.

The pneumatic supply used for cooling of the valve should be free of fine dust and condensate, and correspond to classes 3, 4, 3 according to DIN/ISO 8573-1.

- Solid particles: Quality class 3 max. number of particles/m³: 0.5 1 μ m: < 90000, 1 5 μ m: < 1000
- Water content: Quality class 4 max. pressure dew point +3 °C
- Residual oil: Quality class 3
 1 mg/m³ max.



6.5 The Adjust Process

This chapter explains the adjust process, which is performed as a top adjust when using a valve of the MDV 358X Series, thanks to the adjust screw. A thoroughly performed adjust is the basis for clear and reproducible dispensing results.

The microdispensing system is unable to perform a regular repeatable process, if the nozzle insert is not properly positioned relatively to the tappet prior to dispensing. Therefore, you have to perform the adjust during initial operation and after each exchange of the nozzle fixation nut. This is especially important to avoid any leakage during dispensing.

Here, the adjust via keypad is described. You can also control the adjust via the serial interface as remote adjust (see paragraph 8.2.3 "Remote Adjust", page 132). For special applications you can set an adjust offset with service code 33 (see paragraph 7.12 "Adjust Offset", page 81).

IMPORTANT NOTE

Cleaning before adjust

The system has to be cleaned thoroughly before the adjust. The presence of dirt particles jammed between the tappet surface and the nozzle insert would compromise the results. For information how to remove the dirt read the cleaning chapter (see chapter 9, page 136).

IMPORTANT NOTE

Heating and adjust

In case your application uses a nozzle heater, you have to activate the heater before you start the adjust. Make sure to wait long enough for the heater to reach stable temperature, since the adjust could lead to an incorrect result otherwise.

While the heater is still heating up (red heater-LED is flashing), the message "Please wait for heating!" appears on the display. If necessary, you can start the Adjust ahead of time by pressing the [esc]-key during the heating phase, but you should be aware of the consequences for the accuracy of the Adjust.

Wear heat-resistant gloves while working with the valve!

INFORMATION

Time limit for the adjust

If you do not reach step 3 of the adjust after approx. two minutes, the adjust is cancelled. You have to start the adjust from the beginning.

Preparation for the adjust:

 Screw the nozzle fixation nut absolutely tight (see Fig. 35; torque for screwing it tight at least 150 cN.m).



Fig. 35: Screwing tight the nozzle fixation nut

Adjust, step 1 (Starting the adjust):

- Press the [ADJ]-key on the keypad of the control unit.



Fig. 36: Adjust – Press [ADJ]

The display shows the following message:

Adjust Screw OUT Press Enter

Fig. 37: Message Adjust Screw OUT

Screw open the adjust screw completely (see Fig. 38; torque for screwing it open approx. 50 – 60 cN.m).



Fig. 38: Screw open adjust screw

- Afterwards press the [ENTER]-key.



Fig. 39: Adjust – Press [ENTER]



The display shows the message "500 Shots – Please Wait". These shots help to prepare the valve for the adjust.

500 Shots Please Wait

Fig. 40: Message 500 Shots – Please Wait

INFORMATION

Adjust offset during 500 shots

In case you have an adjust offset activated, when you start the adjust, both adjust LEDs will blink during the 500 shots. At the same time, the adjust offset value is shown in the display.

A few seconds later, the display shows the message "Please wait ...".

Please wait ...

Fig. 41: Message Please wait ...

Wait until a new message on the display announces the next step.

Adjust, step 2 (Turn in adjust screw):

The screen shows the message "Adjust Screw IN until green LED".

Adjust Screw IN until green LED

Fig. 42: Message Adjust Screw IN – until green LED

INFORMATION

Support information for older valves

In exceptional cases, older valves may display the message "Please contact the support!" at this point. In this case, please contact the technical support of VERMES Microdispensing (see Page 7). They will explain how to proceed with this valve.

After one second, the initial message disappears from the display. Instead, the message "Screw further IN" appears.

Screw further IN

Fig. 43: Message Screw further IN

 Screw the adjust screw carefully clockwise. While screwing, you will see an increasing amount of arrows shown in the display (see Fig. 44).

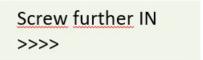


Fig. 44: Arrows displayed

Adjust, step 3 (Find adjust point and confirm it):

Keep turning the adjust screw slowly clockwise, until the display shows "press enter - 0".
 Meanwhile, the green adjust LED is ON (see Fig. 45).



Fig. 45: Message press enter – 0, the green adjust LED is ON

 Confirm the adjust with pressing [ENTER]. The adjust is finished successfully and you are send back to the main menu.



Fig. 46: Adjust – Press Enter

In case you had turned the adjust screw too far, the display shows "Adjust Screw OUT – X <<<<". Also, the red adjust LED is ON instead of the green one (see Fig. 47).



Fig. 47: Message Adjust Screw OUT – X <<<<, the red adjust LED is ON

- Unscrew the adjust screw (counter-clockwise) until the green adjust LED is ON. From there, screw further back, until both LEDs are OFF. Then screw back in, until the display shows "press enter! - 0" and the green adjust LED is ON.
- Press the [ENTER]-key.

IMPORTANT NOTE

Do not screw too far

Do not keep screwing the adjust screw further clockwise, if the red adjust LED is ON. Otherwise the tappet or the nozzle insert could get damaged.



INFORMATION

Confirming adjust

A correctly completed adjust can only be confirmed with **[ENTER]**, while the green adjust LED is ON.

INFORMATION

Abort and end of procedure

- The adjust can be aborted any time by pressing **[ESC]**. The display changes back to the main menu.
- After the adjust the green lamp dims within approx. 3 s.



6.6 Initial Liquid Supply

- Step 1: If not using a prefilled cartridge, fill an empty one with the required fluid, till up to 80 % of its capacity.
- Step 2: Insert the cartridge into the corresponding holder and screw it onto the Luer-Lock connector, rotating clockwise.
- Step 3: Place the compressed-air adaptor onto the cartridge and rotate clockwise until it latches in place.
- Step 4: Connect the PVC hose with coupler plug KS4-CK-6 to air supply. A coupler socket type KD4-1/2-A is required.
- Step 5: After establishing a convenient dispensing pressure, activate the pneumatic supply.

IMPORTANT NOTE

Check for leakage

All of the parts must be installed correctly, and the entire configuration must be leak-tight – otherwise the dispensing fluid can trickle out in an uncontrolled manner.

Valves designed by VERMES Microdispensing can be operated at a relatively low supply pressure, in the range between 0 bar and 7 bar. This upper limit should not be exceeded in normal applications; in most cases, even a value of 4 bar is sufficient.

Standard values:

- Low-viscous fluids (e.g. water): 0.5 1.5 bar
- Medium viscosity (e.g. SMT-adhesives): 1.5 2.0 bar
- High viscosity (e.g. pastes): 2.0 7.0 bar

IMPORTANT NOTE

Do not activate system without dispensing medium

Except for the adjust, do not activate the system "dry" (i.e. without dispensing medium). Otherwise, it might damage the system. For flushing the valve keep within the following limits:

- · Needle Lift max. 80
- Falling min. 0.13

6.7 Removing Air Inclusions from the Fluid Box

Air must be removed from the fluid box, for instance after the exchange of a cartridge.

Save the current dispensing parameters beforehand (see paragraph 7.6, page 71).

Confirm the following parameter selection:

Rising 0.5, Open Time 1.5, Falling 0.17, Delay 5–30, Needle Lift 75, Number of Pulses 500–2000

Dispense a quantity of ca. 500 to 2000 shots by pressing [trig].

When this measure is complete, retrieve the initial parameters stored beforehand (see paragraph 7.7, page 71) and start the dispensing process.



6.8 Parameter Input and Start

- Step 1: Enter the dispensing parameters (either recommended by the manufacturer or determined in your own experiments) into the submenu "Pulse Parameters" of the control unit (see paragraph 4.5.2, page 29).
- Step 2: Press [enter] to acknowledge the selection.
- Step 3: Return to the first level of the menu by pressing [esc] repeatedly.
- Step 4: Start the dispensing process by pressing [trig].

INFORMATION

Starting the dispensing process

A dispensing process can only be initiated in the first menu level by all the usual methods. Starting it in the other menu levels is only possible with the key [trig].



7 Operation

7.1 Triggering a Dispense Sequence

There are three different options to trigger a dispense sequence:

· via keypad on the control unit MDC

Press the [trig] button, a dispensing sequence with pre-set parameters will be triggered.

· via RS-232C command

Use the command "VALVE:OPEN" (further commands in paragraph 8.1.2, page 90).

via PLC-signal

Real time triggering by direct I/O (recommended length of signal: between 0.0001 ms and 35 ms; not relevant for Infinite Mode and External Mode)

7.2 Dispensing and Positioning of Dots (Modes)

To combine a multitude of dots to a predefined structure (e.g. a line or a circle), use one of the following modes:

Burst Mode

A single trigger impulse by PLC signal causes a predefined number of dispense cycles. Number of Pulses: predefined value (e.g. 1–32000)

Single-Shot Mode

Each dispense point is triggered by an individual PLC signal. When dispensing a continuous feature (such as a straight line or a circle), the frequency of the dispense trigger signal should be proportional to the trajectory speed of the axis system. This is necessary to achieve a continuous line width.

Number of Pulses: "1"

- · Infinite Mode
- Continuous dispensing as long as the PLC trigger input is "logic 1". Dispensing will stop when the signal is changed to "logic 0"
- Number of Pulses:
- "infinite" (when programmed through keypad)
- "0" (when programmed through RS-232C)

The parameters Rising, Falling, Delay, Needle Lift and Open Time use the values preset in the menu. Is the PLC trigger signal "logic 1", the MDC sends dispensing impulses, until the signal changes to "logic 0".

Scenario Mode

A complex set of shots is defined via a scenario. This allows the dispensing even of very complex structures, since up to ten different segments, each with their own set of parameters, can be combined. Four different scenarios can be saved.

The parameters are set according to the specifications of the scenarios.

External Mode

The "External Mode" will shift the responsibility of time control of the parameter "Open Time" to the higher-level machine control. (This may require a very precise time control of the higher level PLC.) As a result, the valve would function like a "Time-Pressure-Valve".

Activation of the control unit via RS-232C command by changing the pulse parameters. For the External Mode set the Open Time to "external".

Number of Pulses: Should be set to "1" (min delay still applies).

Open Time calculates according to: Length trigger impulse – length Rising = length Open Time



The parameters Rising, Falling and Needle Lift use the values preset in the menu. When the trigger signal is set to "logic 1", the valve will open. It will remain open as long as the trigger signal remains on "logic 1". It will start to close when the trigger signal is switched to "logic 0". After the valve has completely closed, the controller is ready to receive the next trigger signal to start the process again.

INFORMATION

Open Time and Needle Lift

The maximum value for the "Open Time" is limited to 15 ms, if the "Needle Lift" is set to more than 80 %. If not, the limit is 3000 ms. The length of the "Open Time" depends on the PLC-signal (logic 1).

7.3 Parameters for the Dispensing Process

The profile of the system behavior is illustrated below (Y axis = amplitude of the tappet).

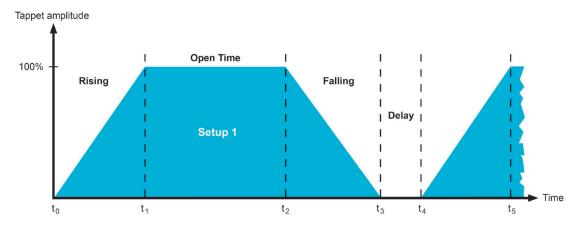


Fig. 48: System behavior

This diagram includes the following parameters.

		Description		
Rising (RI)	0.01 ms	This interval describes the time required until the valve is completely opened. It is adjustable in steps of 0.01 ms.		
Open Time (OT)	0.1 ms	During this phase, the valve remains in opened state. It is adjustable in steps of 0.1 ms. Max. open time = 3000 ms		
		Information!		
		In special applications, you can set the Needle Lift to up to 115 %. But at a NL $>$ 100 %, the Open Time is limited to 15 ms.		
		Caution!		
		When working in External mode, the cycle is initiated with following properties:		
		For rising, falling, delay and needle lift, the values determined beforehand are used. Open time however remains active until the signal returns to the state "logic 0".		

68 VTK-TR-BA-173e-1 - User Manual MDS 3581-V	
--	--



Falling (FA)	0.01 ms	The falling ramp of the curve illustrated above represents the time required for closing the valve. Residual fluid meanwhile is expulsed from the nozzle compression chamber (the cavity at the rear end of the nozzle insert). The interval is adjustable in steps of 0.01 ms.		
Delay (DL)	0.1 ms	This waiting phase between two cycles is adjustable in steps of 0.1 ms, but it is recommended to use at least 0.2 ms.		
Needle Lift (NL)	%	This parameter describes the stroke of the tappet, compared to its full value of 100 %.		
		Information!		
		In special applications, you can set the Needle Lift to up to 115 %. But with a NL > 100 % (in the bipolar mode), the Open Time is limited to 15 ms, since such a high Needle Lift has a stronger wear on the piezo because of the extra heat it causes.		
		A Needle Lift between 70 % and 80 % is the best working range.		

Tab. 20: Parameters for dispensing

7.4 Minimum and Maximum Parameter Limits

Parameters	Min. Value	Max. Value	Transform. Factor (serial interface)
Rising	NL 1% = RI 0.01 ms NL 10% = RI 0.03 ms NL 20% = RI 0.06 ms NL 30% = RI 0.09 ms NL 40% = RI 0.12 ms NL 50% = RI 0.15 ms NL 60% = RI 0.18 ms NL 70% = RI 0.21 ms NL 80% = RI 0.24 ms NL 90% = RI 0.27 ms NL 100% = RI 0.30 ms	300 ms	*100 e.g. RI = 0.05 ms ≙ 5
Falling	NL 1% = FA 0.01 ms NL 10% = FA 0.01 ms NL 20% = FA 0.02 ms NL 30% = FA 0.03 ms NL 40% = FA 0.04 ms NL 50% = FA 0.05 ms NL 60% = FA 0.06 ms NL 70% = FA 0.07 ms NL 80% = FA 0.08 ms NL 90% = FA 0.09 ms NL 100% = FA 0.10 ms	300 ms	*100 e.g. FA = 0.08 ms \(\text{\tinit}}\text{\tilite\text{\tinit}\\ \text{\texi}\text{\text{\text{\text{\text{\text{\text{\text{\texi{\text{\texi}\text{\text{\text{\texitilex{\text{\texi{\text{\texi}\texi{\texi{\til\texi{\texi{\texi{\texi{\texi{\texi{\texi{\texi{\texi{\texi{\til\tiint{\tii}\tiint{\tii}\tiint{\texi{\texi{\texi{\texi{\
Open Time	0 ms	3000 ms (NL>100 %: 15 ms)	*10 e.g. OT = 2 ms ≙ 20
Needle Lift	1 %	100 % (115 % in special applications)	*1 e.g. NL = 50 % ≙ 50
Number of Pulses (NP)	1 pulse	32000 pulses	*1 e.g. NP = 80
Delay	0.1 ms	1000 ms	*10 e.g. DL = 5 ms ≙ 50
Heater	Target temperature	Depends on the connected heater (a maximum of 300 °C can be set)	*1

Tab. 21: Minimum and maximum parameter limits



7.5 Input of Values

Modification of parameter values is simple. The name of the parameter appears in the upper, the assigned numerical value in the lower line of the screen. If the last digit before the decimal point is flashing, you can modify the value.

- Increase by one by using the [↑]-key.
- Correspondingly, the [↓]-key reduces the value by one.
- The [→]-key shifts the position of the active digit to the right.
- To shift the active position to the left, use the [←]-key.

Selection of other values (no numerical values) is performed similarly.

- Use the [→]-key or the [←]-key to change between ON and OFF.
- An input must be confirmed by [enter], to save the current selection. Then the control returns to the next-higher menu point.
- To cancel without saving the current selection, press [esc]. The screen returns to the next-higher menu level.

INFORMATION

Changing numbers

When modifying the first digit of a value from "1" to "0", the cursor automatically jumps one position to the right (if possible). The value in this position is set to 5, but you can modify it.

7.6 Saving Parameter Sets

Ten storage locations are available to save the pulse parameters from the menu.

- Step 1: Open the storage menu by pressing [save].
- Step 2: Select the desired storage location with the arrow keys.
- Step 3: Confirm the selection by pressing [enter].

INFORMATION

[esc] to abort

Pressing [esc] causes the saving procedure to be aborted. You can also use the submenu "Pulse Parameters" (see paragraph 4.5.2, page 29) to save parameters.

7.7 Retrieving Parameter Sets

Parameter combinations saved in the system can be recalled any time.

- Step 1: Press [recall] to activate the corresponding function.
- Step 2: Select the desired storage location with the arrow keys.
- Step 3: Confirm the selection by pressing [enter].

INFORMATION

[esc] for interrupt

[esc] interrupts the procedure at once.

7.8 Select Pins

Setups can be directly controlled via the select pins of the AUX socket (see Fig. 49), if "Scenario" in the submenu "Scenario" is turned "OFF". (In case "Scenario" is "ON" and you want to work with the scenarios, please refer to paragraph 7.9.3, page 75.) The select pins allow you to switch in real time between the setups 0 to 3.

INFORMATION

Setup 0 = working configuration

Please be aware that setup 0 is the working configuration and therefore is not programmed additionally.

With the pins Select_I (AUX socket Pin 5) and Select_II (AUX socket Pin 8) it is possible to switch rapidly between different sets of parameters. In their **blank state**, the select pins are on a high level (pull-ups to 24 V). You have to switch them to low (Gnd) to select a different setup (see Fig. 51, page 73 and see Tab. 22, page 73). For additional information regarding the AUX socket, see paragraph 8.3, page 135. You have to switch them before triggering.



Fig. 49: Select Pins

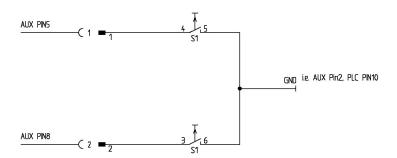


Fig. 50: Schematic of usage of select pins, example

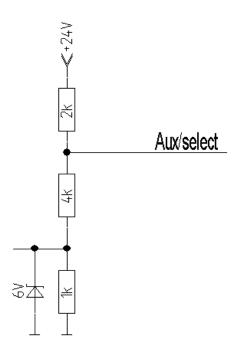


Fig. 51: Circuit diagram

INFORMATION

Select pins with other commands

Select pins will be checked for triggering via PLC interface, for the serial commands VALVE:AOPEN and SVALVE:AOPEN (in the versions without parameters) and when pressing the [**trig**]-key.

Setup	Select_II (Pin 8)	Select_I (Pin 5)
Setup 0	High	High
Setup 1	Low	High
Setup 2	High	Low
Setup 3	Low	Low

Tab. 22: Select Pin settings for the setups

7.9 Scenarios

The MDC does not only allow you to save setups of parameters, but also to define combinations of setups, so called scenarios.

7.9.1 Basics about Scenarios

Each scenario consists of up to ten segments, each with a setup, a specific scenario delay and a Number of Pulses (see Fig. 52). You can define up to four scenarios. You can only choose between the setups 0, 1, 2 and 3. A maximum of ten segments can be chained together, consisting of any possible combination of the four potential setups 0, 1, 2 and 3. As soon as you enter "-" when selecting a segment, the chain ends. No further segments will be shown in the menu. This is possible even for the first segment you select. In that case, the working configuration (setup 0) would be executed instead of the scenario.

Scenarios of an MDC

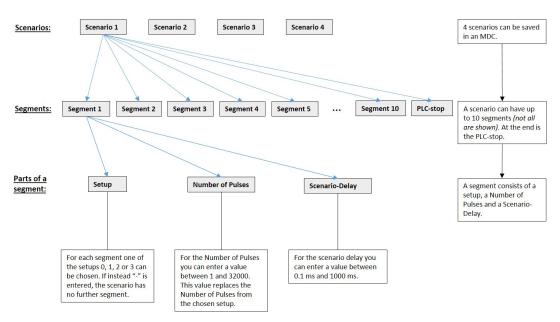


Fig. 52: Scenarios of an MDC

For each segment in a scenario, you can enter a Number of Pulses. For this segment, the number then replaces the Number of Pulses saved with the original setup. The value can be between 1 and 32,000 or "infinite". With "infinite", the trigger signal defines the end.

The scenario delay marks the time span between two segments. It can be set in the range of 0.1 ms and 1000 ms.

Each scenario has a scenario PLC-stop, which is either "ON" or "OFF". If it is "ON", you can end the scenario prematurely. The moment the trigger switches to "low", the scenario ends. When it is "OFF", the trigger only affects a segment on "infinite" number of pulses. In that case, once the trigger is switched to "low", the system moves on to the scenario delay, followed by any segments still to come. Unlike the "ON" situation, the scenario does not end immediately. Scenarios can be controlled in two ways:

via keypad (see next part)



with remote commands via the serial interface RS-232C (see paragraph 8.1.2, page 90)

Scenarios can also be controlled directly via select pins (see paragraph 7.8, page 72). You have to set item "Scenario" of the submenu "Scenario" to "ON". While this is the case, the display shows "Scenario" where it usually shows the frequency.

7.9.2 Entering Scenarios

To enter the parameters for a scenario you have to go to the submenu "Scenario" (see paragraph 4.5.5, page 35). To do so, you have to press **[enter]** in the main menu and then $[\leftarrow]$ twice. Confirm with **[enter]** to reach the item "Scenario". Press **[enter]** and use either $[\uparrow]$ or $[\downarrow]$ to switch between "ON" and "OFF". Select "ON" and confirm your choice with **[enter]**.

Now you can select the desired scenario with $[\rightarrow]$ (see paragraph 4.5.5, page 35, the diagram for the submenu "Scenario-Def"). Press **[enter]**. Enter the first setup ("0", "1", "2", "3" or "-") and confirm with **[enter]**. With $[\rightarrow]$ you reach "ScNP", where you can enter the Number of Pulses. For the scenario, this value will replace the one saved within the setup. Values can be between 1 and 32,000 or "infinite". Confirm with **[enter]**. With another $[\rightarrow]$ you reach "ScDL", where you can set the scenario delay. Afterwards confirm with **[enter]**.

Repeat with the second segment, and so on, until you have entered all segments you need or until you reached the maximum of ten defined segments. When you want to end the chain, enter "-" instead of the number of a setup. No further segment will be shown in the menu. If you replace a "-" on a given segment with a correct number, it is unlocked. The system starts with the setup NP and 10 ms as Scenario-Delay, but you can change these values individually.

With $[\rightarrow]$ after the last segment you reach "PLCStop" (Scenario-PLC-Stop). After pressing **[enter]** you can switch between "ON" and "OFF" (using any arrow key). Confirm your choice with **[enter]**. (If PLCStop is your only goal in this submenu, it is faster to click $[\leftarrow]$ once on this level. Like all other menus, this is "wrap-around".)

This process you have to repeat for each of the up to four scenarios you want to define.

Scenarios are started with a trigger event. This can be a trigger via keypad, a PLC interrupt or the "Valve Open" command (without parameters) via the serial interface.

INFORMATION

When no scenario is triggered

Valve-Up/-Down via serial interface and the [F1] key cannot trigger a scenario.

7.9.3 Scenario Selection with Select Pins

Scenarios can be directly controlled via the select pins of the AUX socket (see Fig. 53, page 76), if "Scenario" in the submenu "Scenario" is turned "ON". If that is not the case, they switch between the setups 0 to 3 instead.

With the pins Select_I (AUX socket Pin 5) and Select_II (AUX socket Pin 8) it is possible to switch rapidly between different sets of parameters. In their blank state, the select pins are on a high level (pull-ups to 24 V). You have to switch one or both to low (Gnd) to select a different setup (see Tab. 23, page 76). You have to switch them before triggering.





Fig. 53: Select Pins

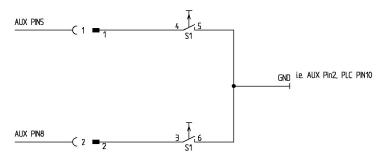


Fig. 54: Schematic of usage of select pins

INFORMATION

Select pins with other commands

Select pins will be checked for triggering via PLC interface, for the serial commands VALVE:AOPEN and SVALVE:AOPEN (in the versions without parameters) and when pressing the key [trig].

You can also simulate the select pin settings for these two commands by using the command extensions "S0", "S1", "S2" or "S3" (see paragraph 8.1.2.3 "Explanations", page 95).

Parameters	Select1	Select2	Scenario "OFF"	Scenario "ON"
SO	High	High	Setup 0 (working configuration)	Scenario 1
S1	Low	High	Setup 1	Scenario 2
S2	High	Low	Setup 2	Scenario 3
S3	Low	Low	Setup 3	Scenario 4

Tab. 23: Select Pin settings

7.9.4 Multi Dot Mode

The Multi Dot Mode allows you to dispense with scenarios on repeat (for information on scenarios, see paragraph 7.9, page 74).

To activate the Multi Dot Mode, you have two options (default is OFF):

- Use service code 4000 to activate/deactive it (see paragraph 4.5.6, page 37).
- Use the serial command SYSTEM:MULTIDOT:ON (and SYSTEM:MULTIDOT:OFF to deactivate it, see paragraph 8.1.2.3, page 95).

76	VTK-TR-BA-173e-1 - User Manual MDS 3581-V
----	---



INFORMATION

Scenario Mode must be ON

To use the Multi Dot Mode, Scenario Mode must be activated as well. Also make sure you have entered the parameters of the active scenario, i.e. the scenario you want to use. If you deactivate the Scenario Mode, the Multi Dot Mode is switched OFF as well.

In the Multi Dot Mode, you start the active scenario (usually scenario 1) with a trigger and it will be repeated as long as the trigger is active ("high"; for an example with activated Multi Dot Mode see Fig. 55 and with deactivated Multi Dot Mode see Fig. 56). Parameter limits are the same as usual in Scenario Mode.

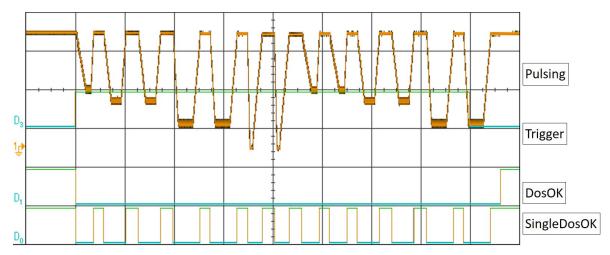


Fig. 55: Multi Dot Mode ON

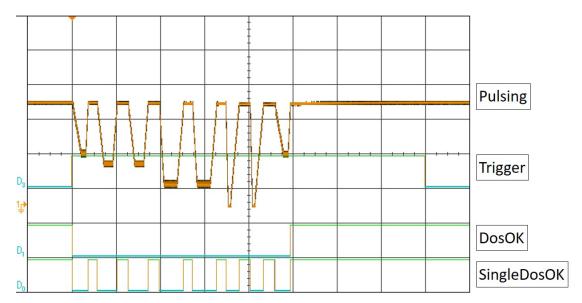


Fig. 56: Multi Dot Mode OFF

When you end the trigger (signal back to low), there are two options how the dispensing ends, depending on the setting of the PLC-Stop. If PLC-Stop is ON, the valve stops immediately after the current shot (see Fig. 57, page 78).

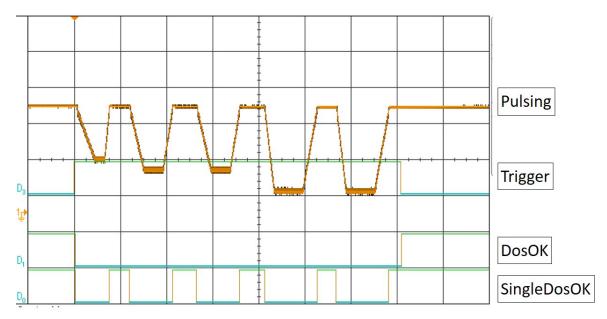


Fig. 57: Multi Dot dispensing – PLC-Stop ON

If the PLC-Stop is OFF, the current setup within the scenario is finished, before dispensing stops (see Fig. 58).

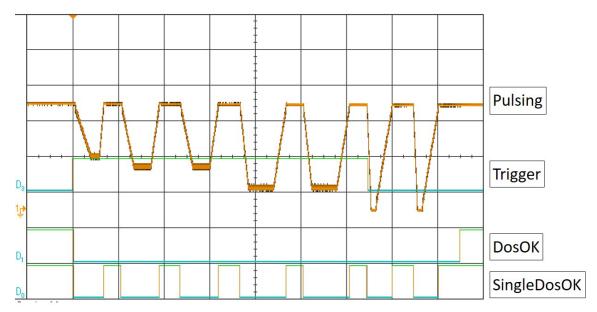


Fig. 58: Multi Dot dispensing – PLC-Stop OFF

To check the status of the Multi Dot Mode, use the serial command SYSTEM:SHOW:STATUS (see paragraph 8.1.2.3, page 95).



7.10 Factory Settings

By recalling the factory settings (implemented by the manufacturer), you return to a predefined starting position. This is useful to start the input of a new parameter set.

These are the values contained in the factory settings:

RI = 0.50 ms, FA = 0.20 ms, OT = 2.0 ms, NL = 80 %, DL = 10.0 ms and NP = 1.

- Step 1: Press [recall].
- Step 2: [↓] immediately opens this parameter set.
- Step 3: Confirm the selection with [enter].

INFORMATION

Aborting the process

The working configuration (setup 0) is changed to the factory settings. Press [esc] to abort at any time.

The following table lists the factory settings of the setups.

		OT [ms]				DL [ms]
Setup 0	0.50	2.0	0.20	80	1	10.0
Setup 1	1.00	4.0	0.12	80	1	10.0
Setup 2	0.50	2.0	0.20	80	10	10.0
Setup 3	0.40	0.6	0.16	80	1	10.0

Tab. 24: Factory settings of the setups

With Setup ALL (see paragraph 4.5.6 "Submenu "Service-Option"", page 37), Setup 4 – 10 get the same values as setup 0 (working configuration).

The factory settings for all four scenarios are the same. The PLCStop is "OFF", the other parameters are shown in the following table.

ScSegment	Setup used	ScNP	ScDelay
Segment 1	0	as setup NP	10.0 ms
Segment 2	1	as setup NP	10.0 ms
Segment 3	2	as setup NP	10.0 ms
Segment 4	3	as setup NP	10.0 ms
Segment 5	0	as setup NP	10.0 ms
Segment 6	1	as setup NP	10.0 ms
Segment 7	2	as setup NP	10.0 ms
Segment 8	3	as setup NP	10.0 ms
Segment 9	0	as setup NP	10.0 ms
Segment 10	1	as setup NP	10.0 ms

Tab. 25: Factory settings of the scenarios

You can use the menu to reset changed parameters to their factory settings. Go to the submenu "Service-Option" and press [enter] at "Service Code". You can enter the four-digit service code 1000. Confirm it with [enter]. Now you can use the keys [\leftarrow] or [\rightarrow] to choose between four options. You can either reset the setups 0 – 3, all setups, all scenarios or every parameter ("Reset



ALL", will also turn OFF the heater). You can move through the four options with the keys [\uparrow] and [\downarrow]. Confirm your choice with **[enter]** and confirm the whole process with another **[enter]**.

7.11 Auxiliary Mode

In this mode, you cannot dispense, since there is no internal communication with the valve. The valve might even be disconnected. But you can use most of the other functions of the MDC, e.g. check your parameters. While in auxiliary mode, the display shows the message "Auxiliary Mode" in the bottom line. Auxiliary mode is automatically deactivated when you switch off the MDC.

INFORMATION

Some menu items not shown in auxiliary mode

Some menu items are not shown, while the system is in auxiliary mode (the menu items "Tappet" and "Nozzle" in the main menu, the submenu "Cooler/Heater", and the menu items "Reset Nozzle", "Reset Tappet", "Set Nozzle" and "Set Tappet" in the submenu "Status").

You can enter the auxiliary mode through the menu. You have to enter service code "1000" in the submenu "Service Code" which is part of the menu "Service Option" (see paragraph 4.5.6, page 37).

After the error messages 101 (Incorr. Valve) and 199 (Valve Error), you also get the chance to switch to the auxiliary mode. This allows you to keep control of the information and most of the functions of the MDC in such a situation (see chapter 11, page 156).



7.12 Adjust Offset

If you have a problem with leakage despite a correct adjust (see paragraph 6.5, page 60), you can use service code 33 to add a little adjust offset. This adjust offset will make sure the valve is accordingly tighter than indicated by the display value. E.g. with an adjust offset of -4, the adjust still works at 0 %, but the valve is tighter at this value than it would be without the adjust offset.

To enter a service code, go to "Main Menu -> Service-Option -> Service Code" (see also the figure below and paragraph 4.5.6, page 37), press [enter] and enter 33. Once you have confirmed the service code with [enter], you reach a new submenu called "Adjust Offset". There you can enter a value between -5 and 10 (negative means tighter than normal, positive looser than normal). Confirm your value with [enter]. If you set an adjust offset of 0, the adjust offset is deactivated. It is advisable to test the system first with an adjust offset value near the default value of 0, e.g. -1

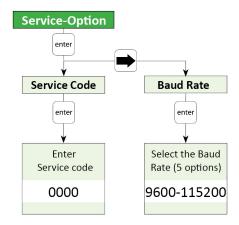


Fig. 59: Submenu Service-Option

Alternatively, you can use the serial command ADJUST:OFFSET:<value>, to set an adjust offset (see paragraph 8.1.2.3, page 95). The range is the same as if you set it via the keypad. You can also use the command ADJUST:OFFSET:? to check for an existing adjust offset.

It is important to know that this adjust offset value is only saved in the valve. You have to enter it again, if you change the valve. But as long as you use the same valve, you can switch off the control unit and the adjust offset value is kept.

INFORMATION

Adjust offset activated during adjust

In case you have an adjust offset activated, when you start the adjust, both adjust LEDs will blink in synchronocity during the 500 shots. At the same time, the adjust offset value is shown in the display.

7.13 Dispensing with a Heater

The Microdispensing System MDS 3581-V can optionally be equipped with a nozzle heater. One option is the MDH-48-BY (see Fig. 60). If a heater is connected to the system, the main menu shows the current temperature (in °C) instead of "Ready". More detailed information about the menu, while using a heater, you can find in paragraph 4.5.3.2, page 31 and paragraph 7.13.1, page 83.

IMPORTANT NOTE

Cartridge heater not compatible

Currently, only nozzle heaters are compatible with the MDC 3500-V. If you want to use a cartridge heater, e.g. the MCH30-48 Cartridge Heater, you need an external heater controller. We recommend the MFC 3000 (order no. 1014981) or the MHC 48-2 (order no. 1015680).



Fig. 60: MDH-48-BY

A CAUTION

High temperatures, danger of burns

The nozzle heater can reach very high temperatures (e.g. of up to 180 °C with MDH-48-BY). Do not touch this area during operation. Afterwards only touch it once it has cooled down.

With a heater, you can control the dynamical viscosity of the fluid to be dispensed. For some liquids, dispensing without heating is impossible. Heating may also be required to ensure a constant process temperature, or when the dispensing has to take place above room temperature.

Information how to mount a heater you can find in paragraph 6.2, page 48. You then need the heater cable 48 V, to connect the heater to the MDC (see paragraph 6.3.3.4, page 56).

INFORMATION

Wait with adjust for heater

If you are using a heater with your application, you should turn it on before you perform the adjust. The adjust is more accurate if it is performed at the same temperature that will be used for



the application. You have to wait until the heater has warmed up before you can perform the adjust. During this time, the heating-LED flashes and the display shows the message "Please wait for the heating!" However, you can skip this waiting time by pressing the [esc]-key.

If you do not skip the heating phase, the message "Adjust screw OUT Press Enter" will appear at some point and the heating-LED will light up permanently. Now you can start the adjust by pressing the [enter]-key.

7.13.1 Heater and MDC

You can activate the heater via the heater submenu in the MDC menu (see picture below). Use the **[enter]** and arrow keys to navigate down to the submenu "Heater" in the menu "Cooler/Heater". Here you can switch ON the heater (menu item "Heater ON/OFF") and set the temperature (menu item "Heater Temp."). The possible temperature range depends on the connected heater (e.g. for MDH-48-BY it lies between 10 °C and 180 °C). (Further information about the menu of the control unit you can find in paragraph 4.5.3.2, page 31.)

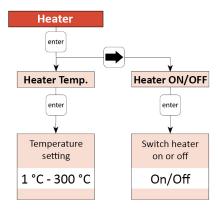


Fig. 61: Submenu Heater

INFORMATION

Control heater via serial commands

The heater can also be controlled via the serial interface. The relevant commands and information can be found in paragraph 8.1.2, page 90.

7.13.2 Calibration of the Heater

You should calibrate the temperature settings of your heater in regular intervals. We recommend to do the calibration once a year. VERMES Microdispensing offers a calibrator set (Calibrator set for MFC 3000, order no. 1015434, see Fig. 62, page 84). The set contains two calibrators for different temperatures:

Calibrator MFC3000 – 20°C (blue, as single product order no. 1015437)

Calibrator MFC3000 – 200°C (red, as single product order no. 1015436)



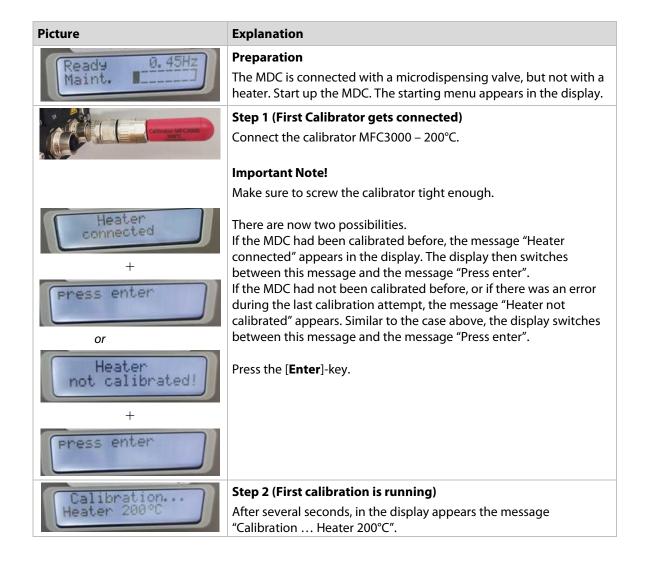


Fig. 62: Calibrator Set


You do not need the additional USB flash drive coming with the calibrator, if you work with an MDC 3500-V. The USB flash drive is only for other devices.

You have to calibrate your heater twice, once at 200 °C and once at 20 °C. You always have to calibrate at both temperatures, since the old values are deleted the moment you start a new calibration. It does not matter, in which order you perform the calibrations, as long as you use each calibrator exactly once.

The following table shows you how to perform the calibration.





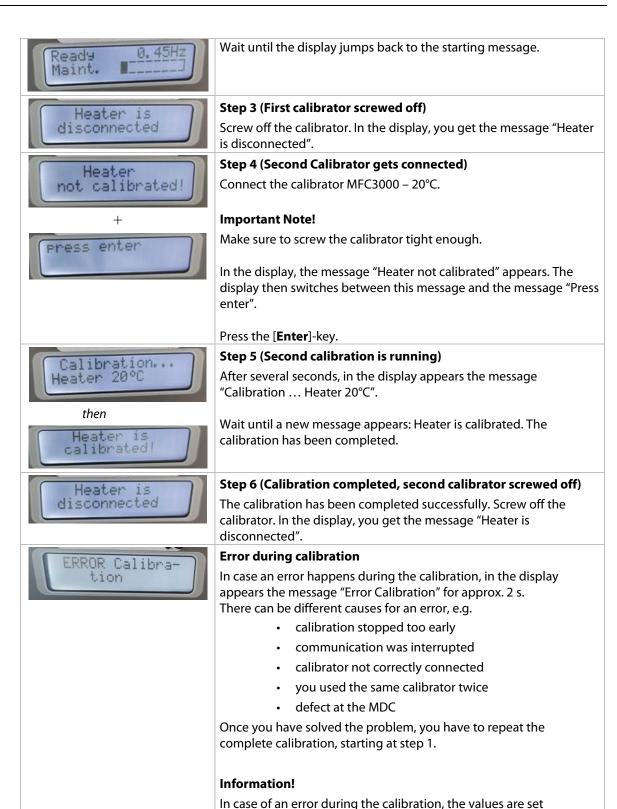

Tab. 26: Calibration of the heater

Once the full calibration is completed, you can proceed with the normal work at your application.

calibrated heater.

back to the default values. You will be able to work with these values, but the results will not be as precise as with a correctly

7.14 Dispensing with a Cooling Valve

The Microdispensing System MDS 3581-V can optionally be equipped with a flow control valve as a cooling valve (meaning: to cool the microdispensing valve). One option is the FCV-AC 6.0 M12 (see Fig. 63). More detailed information about the menu, while using a cooling valve, you can find in paragraph 4.5.3.1, page 31 and paragraph 7.14.1, page 86.



FCV-AC 6.0 M12 Fig. 63:

A VERMES Microdispensing Valve works best, if the temperature inside the valves stays below a certain limit. E.g. for the MDV 3581-V this limit is at 80 °C for the actuator system. For this reason, microdispensing valves can be fitted with an air cooling adapter (see Fig. 34, page 59).

With the MDC 3500-V, it is possible to control the airflow according to the temperature inside the valve. This improves the dispensing accuracy and allows you to save compressed air costs.

To regulate the compressed air flow, the MDC controls a flow control valve, e.g. the FCV-AC 6.0 M12 (see Fig. 63). It regulates the air flow between your compressed air supply and the microdispensing valve you want to cool.

At the same time, the MDC is connected with the sensor module of the microdispensing valve and receives the temperature values from inside the valve. This grants the MDC the information needed to keep the target temperature in the correct range by increasing or decreasing the cooling airflow as necessary. You can also set a cooler offset, which creates a minimum airflow, independent of the regulation (menu item "Cooler Offset", see paragraph 7.14.1, page 86).

The compressed air connectors of the VERMES flow control valves are marked on one side, "1" is "IN" and "F" is "out. These connectors have 6 mm diameter. If you want to connect the valve with a microdispensing valve with 3 mm connectors, you need a 6 mm to 3 mm adapter.

How to mount a flow control valve for cooling the MDV, you can find in paragraph 6.3, page 52. With the Connection Cable for FCV-AC/HF M12 to MDC, you connect the flow control valve to the MDC (see paragraph 6.3.3.5, page 57). Information on how to connect the compressed air supply onto the MDV and for the necessary minimum quality of the compressed air you can find in paragraph 6.4, page 59.

INFORMATION

Adjust-LED and cooling

The green adjust-LED indicates that cooling is activated when the Adjust is not running (see paragraph 4.2, page 21). If you run an adjust while cooling is active, the adjust-LED indicates the status of the adjust for this period of time. After that, it automatically returns to indicating the cooling status.

7.14.1 Cooling and MDC

You can activate the cooling via the cooler submenu in the MDC menu (see picture below). Use the [enter] and arrow keys to navigate down to the submenu "Cooler" in the menu



"Cooler/Heater". Here you can switch ON the cooling (menu item "Cooler ON/OFF"), set a cooler offset (menu item "Cooler Offset", see also paragraph 7.14.2, page 87) and set the target temperature (menu item "Cooler Temp."). The possible temperature range lies between 10 °C and 120 °C. (Further information about the menu of the control unit you can find in paragraph 4.5.3.1, page 31.)

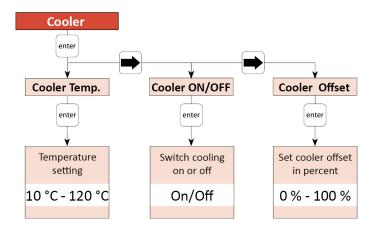


Fig. 64: Submenu Cooler

INFORMATION

Control cooling via serial commands

The cooling can also be controlled via the serial interface. The relevant commands and information can be found in paragraph 8.1.2, page 90.

7.14.2 Cooler Offset

The cooler offset sets an offset value for the flow control valve (in %), which is independent from the regulation system. The cooler offset allows for a constant airflow through the valve, even if the regulation system does not require an airflow yet. Only when the regulation system requires an airflow above the cooler offset, the regulation takes over. I.e. the cooler offset is not added to the normal value, but sets a minimum value.

Using a cooler offset can be helpful in some applications, e.g. if your application has many short but intense bursts. For such an application, the regulation could be a bit slow, if it always drops back to zero airflow.

Use the arrow keys to reach the menu item "Cooler Offset" within the submenu "Cooler" (see paragraph 7.14.1, page 86). Press the [enter]-key and then use the arrow keys to set the desired value. A value of 0 % means that the cooler offset is deactivated. A value of 100 % would mean that the flow control valve is always opened completely.



7.15 Switching OFF the Microdispensing System

- Step 1: The current dispensing cycle must be completed, so that the valve is in home position.
- Step 2: Lower the supply pressure to atmospheric pressure (because in initial position, the valve is still opened). Disengage the pneumatic supply. If required, close the cartridge by using locking pin MDT 309.
- Step 3: Switch OFF the control unit (ON/OFF button at the rear end). After switching OFF the control unit, please wait a few seconds.
- Step 4: Disconnect the valve from fluid supply.
- Step 5: Remove all cables from the valve.
- Step 6: Unscrew the screws used for fixing the valve in place.

After working with self-curing substances, immediate cleaning is advisable in order to avoid clogging. This concerns the valve itself and all parts in contact with the fluid. The valve and its subcomponents have to be dismantled and cleaned (see chapter 9, page 136).

8 Communication Interfaces

The control unit has three communication interfaces. There is a 9-pin serial interface, RS-232C, a 15-pin PLC-interface and an AUX socket.

8.1 Serial Interface RS-232C: 9-Pin Sub-D

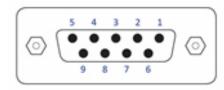


Fig. 65: Serial interface

The local interface is structured according to SCPI Standard.

These "Standard Commands for Programmable Instruments" represent a standardized set of instructions used for control and programming, transmitted in form of ASCII text. They can be generated by any selectable programming language in any environment. The serial interface operates by means of software handshake. The hardware handshake communications are not in use.

INFORMATION

Communication while triggering

Do not send instructions through this interface in the course of a running dispensing cycle. Communication is only possible between distinct sequences (signal DosOK on "high"). This is especially important during start-up of a heater.

After sending data or parameters to the control unit, you have to wait for the "OK" signal before you can start further actions. You only can send data while the MDC is in the main menu.

8.1.1 Pin Functions

PIN	Characteristics	Level	Function
1	Reserved		
2	Output	TX	Serial transmission signal
3	Input	RX	Serial reception signal
4			Connected to PIN 6
5	Ground		Ground
6			Connected to PIN 4
7	Reserved		
8	Reserved		
9	Reserved		

The RS-232C log of the control unit uses RS-232C standard and is designed for communication via a serial cable, connected 1:1, with a Sub-D nine pin connector.



The following parameter configuration is used for the communication with the control unit:

- Synchronous mode: Half-duplex
- Bits/s: 9600 115200 (5 different options available, see paragraph 4.5.6, page 37)
- Start bit: 1
- String length: 8 bit (ASCII)
- · Parity: None
- Stop bit: 1
- · Log: None

8.1.2 RS-232C Commands

The available commands are listed below. They are explained on the following pages, together with short examples. This list is according to firmware revision 4185AA1-F.

Each command has to be followed by a line feed (LF, \n , 0x0a) and then a carriage return (CR, \n , 0x0d). It is important to keep to this order!

INFORMATION

Response to commands

The control unit gives a response to every command send to her. Possible answers are:

- A value or set of value, asked for in the command
- OK, to acknowledge a command sent
- NAK ("not acknowledged"), if command sent was incorrect (e.g. incomplete set of values or a
 value outside the range, or after start-up a wrong command while the display shows the
 message "Please do Adjust")
- "Auxiliary Mode", if you send the command "SYSTEM:SHOW:VALVEID" while the system is in the auxiliary mode.

If there is no response to a command, either the connection is interrupted (e.g. malfunctioning cable or interface) or the command did not end in a carriage return (0x0d).

The reaction times for the commands are given in the table in the next chapter. The table lists the values for the highest and lowest baud rate, since these have a great influence on the times. The length of a response is also influential. There it makes e.g. a big difference with the ESR commands, if there are only a few errors reported or many of them. Please be aware that your hardware also influences the reaction times. Therefore, the given times are only guidelines.

8.1.2.1 Explanation of trigger commands

With the command TRIGGER:SET:<RI>,<OT>,<FA>,<NL>,<NP>,<DL>, you can change the pulse parameters (see paragraph 8.1.2.3, page 95). The result varies slightly, by adding specific characters in certain positions of the command (as shown below):

STRIGGER: ASET: <RI>, <OT>, <FA>, <NL>, <NP>, <DL>,1

The table below lists possible characters in each position.

Position 1	TRIGGER:	Position 2	SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>	Position 3
With "S", MDC		With "A",		With "1", save
returns the		"Rising" is		the changed
given		in 1/100 ms		parameters for
parameters				future use
Without "S",		Without "A",		Without "1",
MDC returns		"Rising" is		the changed
"OK"		in 1/10 ms		parameters



		will get lost
		once the MDC
		is OFF

Tab. 27: Characters in the command "TRIGGER:SET:<RI>,<OT>,<FA>,<NL>,<NP>,<DL>"

The explanation below will help you understand the characters in the command.

• If an "S" is added at the beginning of the command, MDC will return the given parameters. If without the "S", MDC will only return "OK".

Example:

Command to MDC: STRIGGER:SET:10,10,15,80,20,8

Return from MDC: 10,10,15,80,20,8

Result: the pulse parameters are changed as below and will be displayed.

Rising: 1.0 ms, Open Time: 1.0 ms, Falling: 0.15 ms, Needle Lift: 80%, Number of Pulses: 20,

Delay: 0.8 ms

• If an "A" is added between "TRIGGER:" and "SET:", "Rising" is specified in 1/100 ms. If without the "A", "Rising" is specified in 1/10 ms.

Example:

Command to MDC: TRIGGER:ASET:55,10,8,80,20,15

Return from MDC: OK

Result: the pulse parameters are changed as below.

Rising: 0.55 ms, Open Time: 1.0 ms, Falling: 0.08 ms, Needle Lift: 80%, Number of Pulses: 20,

Delay: 1.5 ms

• If a "1" is added at the end of the command, the changed parameters will be saved for future use. If without "1", the changed parameters will get lost, once the MDC is OFF.

Example:

Command to MDC: TRIGGER:SET:10,10,15,80,20,8,1

Return from MDC: OK

Result: the pulse parameters are changed as below and will be saved.

Rising: 1.0 ms, Open Time: 1.0 ms, Falling: 0.15 ms, Needle Lift: 80%, Number of Pulses: 20,

Delay: 0.8 ms

8.1.2.2 Overview

RS-232C commands	Reaction time (ms)		
	For baud rate:		
	9600 bits/s	115200 bits/s	
1. *ESR? (e.g. 50 errors)	1280	640	
2. *ESR2? (e.g. 50 errors)	2190	640	
3. *IDN?	110	70	
4. *OPC?	80	70	
5. ADJUST:?			
6. ADJUST:START	170	120	
7. ADJUST:OFFSET:?	90	70	
8. ADJUST:OFFSET: <offset value=""></offset>	90	70	
9. ADJUST:CALIBRATION:?	120	100	
10. ADJUST: CALIBRATION:ON	210	190	
11. HEATER:?	380	340	
12. HEATER:ID:?	90	70	
13. HEATER:OFF	130	120	
14. HEATER:ON	80	70	
15. HEATER:TEMP: <target temperature=""></target>	100	90	
16. HEATER:LIMITS: <upper>,<lower></lower></upper>	150	130	
17. COOLER:?	80	70	
18. COOLER:ID:?	90	70	
19. COOLER:OFF	130	120	
20. COOLER:ON	130	120	
21. COOLER:TEMP: <target temperature=""></target>	100	90	
22. COOLER:OFFSET: <offset></offset>	100	90	
23. KEY:ENTER	80	70	
24. KEY:ESCAPE	80	70	
25. HELP	1880	640	
26. LCD?	380	340	
27. MAINT:STATUS	690	340	
28. MAINT:MESSAGE:OFF	100	90	
29. MAINT:MESSAGE:ON	100	80	
30. SYSTEM:KLOCK:OFF	90	70	
31. SYSTEM:KLOCK:ON	90	70	
32. SYSTEM:SHOW:CYCLES	90	70	
33. SYSTEM:SHOW:VALVEID	90	70	
34. SYSTEM:SHOW:CONTROLLERID	100	70	



RS-232C commands	Reaction time (ms)		
	For baud rate		
	9600 bits/s	115200 bits/s	
35. SYSTEM:SHOW:STATUS	690	340	
36. SYSTEM:SHOW:ACTTEMP	90	70	
37. SYSTEM:DOSOKDELAY:OFF	110	90	
38. SYSTEM:DOSOKDELAY:ON	110	80	
39. SYSTEM:SINGLEDOSOK:SETUP	110	90	
40. SYSTEM:SINGLEDOSOK:PULSE	110	80	
41. SYSTEM:PASSWORD: <your password=""></your>	90	70	
42. SYSTEM:PASSWORD:OFF	100	80	
43. SYSTEM:PASSWORD:ON	100	90	
44. SYSTEM:PASSWORD:SET: <your password=""></your>	110	90	
45. SYSTEM:AUXILIARYMODE:OFF	100	70	
46. SYSTEM:AUXILIARYMODE:ON	100	70	
47. SYSTEM:MULTIDOT:OFF	160	140	
48. SYSTEM:MULTIDOT:ON	160	140	
49. TRIGGER:SET:?	390	340	
50. TRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>	130	90	
51. TRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl>,1</dl></np></nl></fa></ot></ri>	150	100	
52. TRIGGER:ASET:?	390	340	
53. TRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>	130	90	
54. TRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,<dl>,1</dl></np></nl></fa></ot></ri>	150	100	
55. STRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>	90	80	
56. STRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl>,1</dl></np></nl></fa></ot></ri>	120	110	
57. STRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>	400	350	
58. STRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,<dl>,1</dl></np></nl></fa></ot></ri>	430	370	
59. VALVE:UP	80	70	
60. VALVE:DOWN	80	70	
61. VALVE:AOPEN	80	70	
62. VALVE:AOPEN: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>	130	90	
63. VALVE:AOPENS <setup no.=""></setup>	90	70	
64. SVALVE:AOPEN	380	340	
65. SVALVE:AOPEN: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>	430	360	
66. SVALVE:AOPENS <setup no.=""></setup>	390	340	
67. WRITE:LCD: <text></text>	110	70	
68. TAPPET:SET: <value></value>	200	180	
69. TAPPET:CLEAR	190	180	
70. NOZZLE:SET: <value></value>	200	180	



RS-232C commands	Reaction time	Reaction time (ms)		
	9600 bits/s	115200 bits/s		
71. NOZZLE:CLEAR	190	180		
72. SCENARIO:STATUS	690	340		
73. SCENARIO:OFF	100	80		
74. SCENARIO:ON	100	80		
75. SCENARIO:PLCSTOP:1:OFF	140	120		
76. SCENARIO:PLCSTOP:1:ON	140	120		
77. SCENARIO:SAVE: <scenario no.="">:<values></values></scenario>	280	130		
78. SCENARIO:READ: <scenario no.=""></scenario>	690	340		
79. SETUP:ASAVE: <setup no.="">:<ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri></setup>	570	530		
80. SETUP:AREAD: <setup no.=""></setup>	390	340		
81. BAUDRATE:0/1/2/3/4	80	70		
82. GETTD	80	70		
83. MDC:RESTART	190	180		



8.1.2.3 Explanations

*ESR?	ESR? = Event Status Register Query			
Description:	with the latest Each error medate stamp. If "00:00:00 2014 Information!			
Example:	empty". Input:	*FSR?		
	Result:	List of the (up to 50) late	st error messages	
	Return:	8 199 valve error	08FU04 09:16:38 2018-01-21	
		9 101 wrong valve	08FU04 09:16:21 2018-01-21	

2	*ESR2?	ESR2? = Even	t Status Register Query 2	
	Description:	with the lates: Each error me stamp and the of the MDC is Additionally, t	I shows the latest error codes created by the system, starting event. There will be shown a max of 50 error messages. ssages also includes the valve ID (if known), a time and date value of the cycle counter at the time of the error. If the RTC defect, the time stamp will be given as "00:00:00 2014-01-01". he parameters of Setup 0 before the error are listed.	
		empty".	*FCD23	
	Example:	Input:	*ESR2?	
		1100 01111	List of the (up to 50) latest error messages with parameters	
		Return:	20 199 valve error 000000 09:16:38 2018-01-21	
			0, 0, 0, 0, 0	
			0, 0, 0, 0, 0	
			0, 0, 0, 0, 0	
			0, 0, 0, 0, 0	
			27 101 wrong valve 08FU04 09:16:21 2018-01-21	
			30, 5, 30, 80, 1, 20	
			50, 20, 20, 80, 1, 100	
			50, 20, 20, 80, 1, 100	
			50, 20, 20, 80, 1, 100	

3	*IDN?	IDN? = Identification Query		
	Description:	viscosity or lo	Device specific information, formatted as follows: type (hv or lv, high viscosity or low viscosity systems), software version. Important for contact with our Technical Support.	
	Example:	Input:	*IDN?	
		Result:	Micro Dispenser HV, 4185AA1-F	
		Return:	Micro Dispenser HV, 4185AA1-F	



4	*OPC?	OPC? = Opera	OPC? = Operation Complete Query	
Description: Monitoring the last trigger impulses. After this, the coun		e last trigger impulses. After this, the counter is cleared to		
		zero.		
	Example:	Input:	*OPC?	
		Result:	Number of the last pulses. Clears the counter to zero.	
		Return:	6699	

5	ADJUST:?			
	Description:	This command is used to read the adjust status. The result consists in one of the following options:		
		An adjust v	was not performed (Result: 0)	
		You need to perform the adjust during initial operation and after each exchange of the nozzle unit.		
		The adjust was aborted halfway (Result: 1)		
		The adjust must be repeated.		
		The adjust was successful (Result: 2)		
		The position	on of the nozzle insert relatively to the tappet is OK.	
		Information!		
			tus is only saved in the RAM. Therefore, the result will be reset starting the MDC.	
	Example:	Input:	ADJUST:?	
		Result:	The system informs about the current status of the adjust (here: the adjust was successful).	
		Return:	2	

6	ADJUST:START			
	Description:	procedure che tappet. It is re nozzle unit.	command causes the adjust to be executed at once. This ecks on the position of the nozzle insert with respect to the quired during each initial start-up and after replacing the formation read paragraph 8.2.3, page 132.	
	Example:	Input:	ADJUST:START	
		Result:	The adjust is initiated.	
		Return:	Adjust Screw OUT Press Enter	

ADJUST:OFFSET:?		
Description:	paragraph 7 The value ca deactivated.	nd gives the current value of the adjust offset (see .12, page 81). In be between -5 and 5. The value 0 means, the adjust offset is A negative value means, the system is tighter than normal. A
Example:	Input:	ADJUST:OFFSET:?
	Result:	The current value of the adjust offset is returned.
	Return:	5

8 ADJUST:OFFSET:<offset value>



	Description:	page 81). You can enter adjust offset. <i>I</i>	d sets the value for the adjust offset (see paragraph 7.12, integer values between -5 and 5. With 0 you deactivate the A negative value means, the system is tighter than normal. A means, the system is looser than normal.
	Example:	Input:	ADJUST:OFFSET:5
		Result:	The value of the adjust offset is set (here: to 5).
		Return:	OK

	ADJUST:CALIBRATION:?		
	Description:	adjust value. T values. You ca difference, ref there for our s The last paran given value is	d gives the status of the (remote) adjust and the current The response to this command contains seven numerical n ignore the first six parameters limit at 0 %, limit at 100 %, erence value, last mean value and total value). They are only upport, if there is an error with the (remote) adjust. neter sent is the adjust value in percent. Be aware that the the actual percentage value, multiplied by 10. Therefore, a 8 represents an adjust value of 0.8 %.
	Example:	Input:	ADJUST:CALIBRATION:?
		Result:	The status of the (remote) adjust is given, including the current adjust value.
		Return:	151285, 47623, 103662, 150836, 108654, 42182, 8

10	ADJUST:CALIBRATION:ON			
	Description:	This command activates the adjust, so that you can perform it as a remote adjust.		
	Example:	Input:	ADJUST:CALIBRATION:ON	
		Result:	The adjust is activated.	
		Return:	Adjust ON	

11 HEATER:?	HEATER:?				
Description:	This comma	and shows the state of the heater. This includes the following n.			
		T-point of the temperature calibration			
		M- point of the temperature calibration			
		Maximum temperature of the connected heater (°C)			
		the current target temperature (°C)			
		upper limit of allowed temperature range (°C x 10)			
	•	lower limit of allowed temperature range (°C x 10)			
	•	current temperature (°C)			
	•	calibration status $(0 = no, 1 = yes)$			
	•	current heater status (1 = ON, 2 = OFF, 4 = not calibrated, 5 = temperature settled in, 7 = plugged in, 8 = plugged out, 9 = calibration 20 °C, 10 = calibration 100 °C; XXXX communication error code)			
	In case ther	re is no heater connected, the response is "NAK".			
Example:	Input:	HEATER:?			
	Result:	Switched ON or OFF, current temperature and target temperature and other information are given.			
	Return:	1000, 20000, 180, 110, 30, 20, 109, 1, 5			



12	HEATER:ID:?		
Description: This command shows the type and		This command	d shows the type and serial number of the heater.
		In case there is no heater connected, the response is "NAK".	
	Example:	Input:	HEATER:ID:?
		Result:	Type and serial number of the heater are given.
		Return:	MDH-48-BY, 10UB1234

13	HEATER:OFF		
	Description:	The connected heater is turned off. In case there is no heater connected, the response is "NAK".	
	Example:	Input: HEATER:OFF	
Result: The connected		Result:	The connected heater is deactivated.
		Return:	OK

14	HEATER:ON		
Description: The connected heater is turned on. In case there is no heater connected, the response is "I Example: HEATER:ON		d heater is turned on.	
		s no heater connected, the response is "NAK".	
		HEATER:ON	
		Result:	The connected heater is activated.
		Return:	OK



15	HEATER:TEMP: <target temperature=""></target>		
	Description:	This command changes the target temperature of the heater.	
		The value has to be entered as degree centigrade, e.g. 100 = 100 °C. The	
		target temperature value has to be between 1 °C and 230 °C.	
		In case there is no heater connected, the response is "NAK".	
	Example: In	Input:	HEATER:TEMP:60
		Result:	The target temperature of the heater is set to 60 °C.
		Return:	OK

16	HEATER:LIMITS:<	upper>, <lower< th=""><th>></th></lower<>	>
	Description:	With this command you set the upper and lower limit for the temperature regulation. The parameters say, by how many degrees the current temperature might be above/below the target temperature, before the MDC shows an error message. The values have to be given in $1/10^{th}$ of a degree centigrade, i.e. $20 = 2.0$ °C. Both parameters have to be between 5 (= 0.5 °C) and 100 (= 10.0 °C).	
		Information!	
		does not appe	mperature moves out of the given range, the error message ear immediately. Instead it comes several seconds later. This I stopping the production too quickly because of a short fluctuation.
		In case there i	s no heater connected, the response is "NAK".
	Example:	Input:	HEATER:LIMITS:10,22
		Result:	The actual temperature may be 1.0 °C higher and 2.2 °C lower than the target temperature, before an error message is send.
		Return:	OK



17	COOLER:?			
	Description:	This command information.	d shows the state of the cooling. This includes the following	
		•	T-point of the temperature calibration	
		• 1	M- point of the temperature calibration	
		• 1	the current target temperature (°C)	
offset (%)current actuator temperature (°C)		offset (%)		
		• (current actuator temperature (°C)	
		• (calibration status (0 = no, 1 = yes)	
			current cooling status (1 = ON, 2 = OFF, 4 = not	
			calibrated, 7 = plugged in, 8 = error PT100, 9 = plugged out; XXXX communication error code)	
		In case there is	s no flow control valve connected, the response is "NAK".	
	Example:	Input:	COOLER:?	
		Result:	Switched ON or OFF, current actuator temperature and	
			target temperature and other information are given.	
Return: 1000, 2000		Return:	1000, 20000, 45, 0, 35, 1, 1	

18	COOLER:ID:?			
	Description:		This command shows the type and serial number of the flow control valve. In case there is no flow control valve connected, the response is "NAK".	
	Example:	Input:	COOLER:ID:?	
		Result:	Type and serial number of the flow control valve are given.	
		Return:	FCV-AC 6.0 M12, 101501	

19	COOLER:OFF		
	Description:	The connected flow control valve is deactivated.	
		In case there is no flow control valve connected, the response is "NAK".	
	Example:	Input:	COOLER:OFF
		Result:	The connected flow control valve is deactivated.
		Return:	OK

20	COOLER:ON		
	Description:	The connected flow control valve is activated.	
In case there is no flow control valve connected, the		s no flow control valve connected, the response is "NAK".	
	Example:	Input:	COOLER:ON
		Result:	The connected flow control valve is activated.
		Return:	OK

21	COOLER:TEMP:	target temperat	ture>
	Description:	The value has target tempe	This command changes the target temperature of the cooling. The value has to be entered as $1/10^{th}$ of a degree, i.e. $1000 = 100$ °C. The target temperature value has to be between 100 (10 °C) and 1200 (120 °C). In case there is no flow control valve connected, the response is "NAK".
	Example:	Input:	COOLER:TEMP:750
	'	Result:	The target temperature of the cooling is set to 75.0 °C
		Return:	ON,20°C,230V

22 COOLER:OFFSET:<offset>

100	VTK-TR-BA-173e-1 - User Manual MDS 3581-V
-----	---



Description:	connected to cooler offset a regulation do allowed are in This command the submenu	d sets the cooler offset for the flow control valve which is the MDC. The value has to be between 0 % and 100 %. The allows for a constant airflow through the valve, even if the es not require an airflow yet. The value is given in percent, i.e. tegers between 0 and 100. d has the same function as the menu item "Cooler Offset" in "Cooler". s no flow control valve connected, the response is "NAK".
		COOLER:OFFSET:10
•	Result:	The cooler offset is set to 10 %.
	Return:	OK



23	KEY:ENTER			
is only usable in case of errors, which produ		dgement signal is transferred to the control unit. This option in case of errors, which produce a message on the display of can respond with a serial command. Then the function is		
		identical to pressing the [enter] -key on the keypad.		
	Example:	Input:	KEY:ENTER	
		Result:	The ENTER signal is send.	
		Return:	OK (no other reaction of the MDC)	

KEY:ESCAPE		
Description:	usable in case MDC. You can	ignal is transferred to the control unit. This option is only of errors, which produce a message on the display of the respond with a serial command. Then the function is
	identical to pr	ressing the [esc] -key on the keypad.
Example:	Input:	KEY:ESCAPE
	Result:	The ESCAPE signal is send.
	Return:	OK (no other reaction of the MDC)

25	HELP			
	Description:	Shows a list with all RS-232C commands.		
	Example:	Input:	HELP	
		Result:	List with all RS-232C commands.	
		Return:	List with all commands	

26	LCD?	LCD? = Liquid-Crystal Display Query		
Description: Use this command to externally inspect the current conte		nand to externally inspect the current content of the screen.		
	Example:	Input:	LCD?	
		Result:	When sending this command immediately after switching	
			ON, the content of the screen will be "READY".	
		Return:	"READY"	



27	27 MAINT:STATUS MAINT = Maintenance		ntenance	
	Description:	This command provides the number of pulses in percent of the preset limits. It is useful, if you want to estimate the date of the next exchange or maintenance.		
		The answer will be send in one line.		
	Example:	Input:	MAINT:STATUS	
		Result:	Current percentage of the preset number of cycles (limit).	
		Return:	Maintenance: 10 %,Nozzle: 20 %,Tappet: 30 %,Maint.	
			Message: ON	

28	MAINT:MESSAGE:OFF (MAINT = Maintenance)		
	Description:	The message the red maint nozzle or tapp	d deactivates the maintenance message. "Maint." will no longer be shown in line 2 of the display. Also enance LED will not be switched on, if the maintenance, pet limits are reached. E maintenance message is activated.
	Example:	Input: Result: Return:	MAINT:MESSAGE:OFF The maintenance message is deactivated. OK

29	MAINT:MESSAGE:ON (MAINT = Maintenance)			
	Description:	The message ' maintenance limits are reac	This command activates the maintenance message. The message "Maint." will be shown in line 2 of the display. Also, the red maintenance LED will be switched on, if the maintenance, nozzle or tappet limits are reached. By default, the maintenance message is activated.	
	Example:	Input: Result: Return:	MAINT:MESSAGE:ON The maintenance message is activated. OK	



30 SYSTEM:KLOCK:OFF (KLOCK = Key Lock)			ey Lock)
Description: Access to keypad is permitted, the locking functi		oad is permitted, the locking function disabled.	
	Example:	Input:	SYSTEM:KLOCK:OFF
		Result:	The keypad of the control unit can be used.
		Return:	OK

31	SYSTEM:KLOCK:ON (KLOCK = Key Lock)			
	Description: This command locks the keypad of the control unit. This way, una			
	modification of parameters can be p		of parameters can be prevented.	
	Example:	Input:	SYSTEM:KLOCK:ON	
		Result:	The keypad is locked.	
		Return:	OK	

32	SYSTEM:SHOW:CYCLES			
	Description:	The current	The current value of the cycle counter is indicated.	
	Example:	Input:	SYSTEM:SHOW:CYCLES	
		Result:	Current value of the cycle counter.	
		Return:	1235000	

33	SYSTEM:SHOW:VALVEID			
	Description:	The valve ID	The valve ID is displayed.	
		In case the system is in auxiliary mode, the return is "Auxiliary Mode".		
	Example:	Input:	SYSTEM:SHOW:VALVEID	
		Result:	ID of the connected valve.	
		Return:	Valve ID: 10PEA001	

34	SYSTEM:SHOW:CONTROLLERID		
	Description:	The ID of the control unit is displayed.	
	Example:	Input:	SYSTEM:SHOW:CONTROLLERID
		Result:	ID of the control unit.
		Return:	Controller ID: 12060

35	SYSTEM:SHOW:STATUS		
	Description:	This command sends the current status of KeyLock, DosOK with Delay, SingleDosOK, Auxiliary Mode and Multi Dot Mode.	
	Example:	Input:	SYSTEM:SHOW:STATUS
		Result:	Settings of the above listed items
		Return:	KeyLock: OFF
			DosOK with Delay: OFF
			SingleDosOK: per pulse
			Auxiliary Mode: OFF
			Multi Dot Mode: OFF



36	SYSTEM:SHOW:ACTTEMP			
	Description:	The current temperature of the actuator (piezo) is displayed.		
		Important Note!		
		In case an MF0	C is connected to your MDC, you cannot use this command,	
		since it would	respond with a wrong value.	
	Example:	Input:	SYSTEM:SHOW:ACTTEMP	
		Result:	The value appears in °C.	
		Return:	70	

37	SYSTEM:DOSOKDELAY:OFF		
Description: This command deactivates the DOSOK-Delay. When this is true, the length of a delay is not adde DOSOK signal. (Default setting is "delay OFF".)		This command	d deactivates the DOSOK-Delay.
		rue, the length of a delay is not added to the length of the	
		. (Default setting is "delay OFF".)	
	Example:	Input:	SYSTEM:DOSOKDELAY:OFF
		Result:	Deactivates the DOSOK-delay.
		Return:	OK

38	SYSTEM:DOSOKAYDELAY:ON		
	Description:	This comman	d activates the DOSOK-Delay.
		When this is true, the length of a delay is added to the length of the DOSOK signal. (Default setting is "delay OFF".)	
	Example:	Input:	SYSTEM:DOSOKDELAY:ON
		Result:	Activates the DOSOK-delay.
		Return:	OK

39	SYSTEM:SINGLEDOSOK:SETUP			
Description: This command sets the Single-DOSOK signal to "Setup". The le		d sets the Single-DOSOK signal to "Setup". The length of the		
		Single-DOSOK signal is that of the setup. (Default setting is "Pulse".)		
	Example:	Input:	SYSTEM:SINGLEDOSOK:SETUP	
Result: The Sing		Result:	The Single-DOSOK is set to "setup".	
		Return:	OK	

40	SYSTEM:SINGLEDOSOK:PULSE			
Description: This command sets the Single-DOSOK signal to "Pulse"		d sets the Single-DOSOK signal to "Pulse". The length of the		
		Single-DOSOK signal is that of a pulse. (Default setting is "Pulse".)		
	Example:	Input:	SYSTEM:SINGLEDOSOK:PULSE	
		Result:	The Single-DOSOK is set to "pulse".	
		Return:	OK	



	SYSTEM:PASSWORD: <your password=""></your>			
	Description:	This comman	This command sends the 6-digit password to unlock the keypad after a	
PLC-trigger. Each digit can be either of 1, 2, 3 or 4 (r		Each digit can be either of 1, 2, 3 or 4 (representing the keys		
		"[←]", "[↑]", "	[↓]" and "[→]" resp.)	
	Example:	Input:	SYSTEM:PASSWORD:111111	
		Result:	The keypad is unlocked.	
		Return:	OK	

42	SYSTEM:PASSWORD:OFF		
	Description:	This command deactivates the password, which unlocks the keypad after a	
		PLC-trigger.	
	Example:	Input:	SYSTEM:PASSWORD:OFF
		Result:	The password is deactivated.
		Return:	OK

43	SYSTEM:PASSWORD:ON		
	Description:	This command activates the password, which unlocks the keypad after a PLC-trigger.	
	Example:	Input:	SYSTEM:PASSWORD:ON
		Result:	The password is activated.
		Return:	OK

44	SYSTEM:PASSWORD:SET: <your password=""></your>		
	Description:	after a PLC-tr or 4 (represe	nd sets the 6-digit password, which can unlock the keypad igger. The password is 6-digit, with each digit either of 1, 2, 3 nting the keys " $[\leftarrow]$ ", " $[\uparrow]$ ", " $[\downarrow]$ " and " $[\rightarrow]$ " resp.). d has to be exactly six digits long; anything else would lead to
	Example:	Input:	SYSTEM:PASSWORD:SET:111111
		Result:	The 6-digit password is set.
		Return:	OK

45	SYSTEM:AUXILIARYMODE:OFF		
	Description:	This command deactivates the auxiliary mode. In auxiliary mode, the valve is disconnected. All other functionalities of the MDC can be used and tested.	
	Example:	Input:	SYSTEM:AUXILIARYMODE:OFF
		Result:	The auxiliary mode is deactivated.
		Return:	OK

46	SYSTEM:AUXILIA	RYMODE:ON	
Description: This command activates the auxiliary mode.		d activates the auxiliary mode.	
	In auxiliary mode, the valve is disconnected. All other funct		ode, the valve is disconnected. All other functionalities of the
		MDC can be used and tested.	
	Example:	Input:	SYSTEM:AUXILIARYMODE:ON
		Result:	The auxiliary mode is activated.
		Return:	OK

47 SYSTEM:MULTIDOT:OFF

106	VTK-TR-BA-173e-1 - User Manual MDS 3581-V
-----	---



	Description:	This command deactivates the multi dot mode (see paragraph 7.9.4,	
		page 76).	
		Default setting is OFF.	
	Example:	Input:	SYSTEM:MULTIDOT:OFF
		Result:	The multi dot mode is deactivated.
		Return:	OK

48	SYSTEM:MULTIDOT:ON			
	Description:	This command activates the multi dot mode (see paragraph 7.9.4, page 76). Default setting is OFF.		
		Information!		
		To use the multi dot function, scenario mode needs to be set to ON as well.		
		In case Scenario Mode is OFF, the response will be NAK.		
	Example:	Input:	SYSTEM:MULTIDOT:ON	
		Result:	The multi dot mode is activated.	
		Return:	OK	



49	TRIGGER:SET:?			
	Description:	The pulse parameter set currently present in the RAM is displayed in the following order:		
		Rising, Open Time, Falling, Needle Lift, Number of Pulses, Delay.		
		Parameters relating to time are indicated in 1/10 ms, except for "Falling" which is given in 1/100 ms. If the valve is currently operated in external mode, the value for "Open Time" is "EXTERNAL". In infinite mode, the number of pulses is always "0".		
	Example:	Input:	TRIGGER:SET:?	
		Result:	Information is given about the current cycle parameters. Rising: $10 \triangleq 1.0$ ms (ms = Millisecond) Open Time: $10 \triangleq 1.0$ ms Falling: $15 \triangleq 0.15$ ms Needle Lift: 80% Number of Pulses: 20 Delay: $8 \triangleq 0.8$ ms	
		Return:	10,10,15,80,20,8	



50	TRIGGER:SET: <ri< th=""><th>>,<ot>,<fa>,<</fa></ot></th><th>NL>,<np>,<dl></dl></np></th></ri<>	>, <ot>,<fa>,<</fa></ot>	NL>, <np>,<dl></dl></np>	
20	Description:	This comman Parameters re "Falling", which not admissible the minimum Rising also also page 70). Specified value mode, enter " You have to in The start of a	nand is used to modify cycle parameters. Is relating to time have to be specified in 1/10 ms, except for which has to be entered in 1/100 ms. Values lower than "1" are sible. Therefore the minimum falling value amounts to 0.01 ms, um rising value 0.1 ms. But the minimum values for Falling and always depend on the current Needle Lift % (see paragraph 7.4, values must be integer and positive. To choose the external er "EXTERNAL" for "Open Time", instead of a numerical value. o include all six setup parameters. If a dispensing cycle with the selected parameter configuration is by the command "VALVE:OPEN".	
		gets lost, once	mand, the information is only held in the RAM and therefore e the system is switched OFF. If that is a problem, use the next tead. (The difference in the command line is the "1" at the	
	Example:	Input: Result:	TRIGGER:SET:10,10,15,80,20,8 This assigns the following values to the parameters: Rising: $10 \triangleq 1.0 \text{ ms}$ (ms = Millisecond) Open Time: $10 \triangleq 1.0 \text{ ms}$ Falling: $15 \triangleq 0.15 \text{ ms}$ Needle Lift: 80% Number of Pulses: 20 Delay: $8 \triangleq 0.8 \text{ ms}$	
		Return:	OK	

	d is used to meed if a sale measure store and to some those in the		
remains availa	This command is used to modify cycle parameters and to save them in the EEPROM in the control unit (reaction time: 200 ms). The entered set thus remains available for future use. (That marks the difference to the command before this one. It is shown in the command line with the "1" at the end.) A trigger signal is not launched, but can be initiated by means of the command "VALVE:OPEN", so that a dispensing cycle with this parameter set immediately starts.		
command "V			
Parameters re "Falling", which not admissible the minimum	Parameters relating to time have to be specified in 1/10 ms, except for "Falling", which has to be entered in 1/100 ms. Values lower than "1" are not admissible. Therefore the minimum falling value amounts to 0.01 ms, the minimum rising value is 0.1 ms. But the minimum values for Falling and Rising also always depend on the current Needle Lift % (see paragraph 7.4,		
-	alues must be integer and positive. To choose the external er "EXTERNAL" for "Open Time", instead of a numerical value.		
Input:	TRIGGER:SET:10,10,15,80,20,8,1		
Result:	The following values are assigned to the parameters: Rising: $10 riangleq 1.0$ ms (ms = Millisecond) Open Time: $10 riangleq 1.0$ ms Falling: $15 riangleq 0.15$ ms Needle Lift: $80 riangleq$ Number of Pulses: 20 Delay: $8 riangleq 0.8$ ms		
	remains availa command being the end.) A trigger signommand "Valimmediately see "Falling", which not admissible the minimum Rising also always page 70). Specified value mode, enter "Input:		

	Datiiua	
	Remm.	OK



52	TRIGGER:ASET:?			
	Description:		his command gives the values for the pulse parameters currently saved in ne RAM. The correct order of the values is:	
		Rising, Open Time, Falling, Needle Lift, Number of Pulses, Delay.		
		Parameters relating to time are indicated in 1/10 ms, except for "Falling" and "Rising" which are given in 1/100 ms. If the valve is currently operated in external mode, the value for "Open Time" is "EXTERNAL". In infinite mode, the number of pulses is always "0".		
	Example:	Input:	TRIGGER:ASET:?	
		Result:	Information is given about the current cycle parameters. Rising: $55 \triangleq 0.55$ ms (ms = milliseconds) Open Time: $10 \triangleq 1.0$ ms Falling: $8 \triangleq 0.08$ ms Needle Lift: $80 \triangleq 80$ % Number of Pulses: 20 Delay: $15 \triangleq 1.5$ ms	
		Return:	55,10,8,80,20,15	



53	TRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>				
33	Description:	the trigger sig "Rising" are sp 0.01 ms, for "F also always de page 70). All c Specified valu mode, enter " You have to ir The start of a c initiated by th Information! With this com	nand is used to modify pulse parameters without transmitting r signal. The values for both of the parameters "Falling" and e specified in steps of 0.01 ms. Minimum value for "Falling" is or "Rising" 0.01 ms. But the minimum values for Falling and Rising is depend on the current Needle Lift % (see paragraph 7.4, All other time parameters are entered in units of 1/10 ms. Values must be integer and positive. To choose the external er "EXTERNAL" for "Open Time", instead of a numerical value. to include all six setup parameters. of a dispensing cycle with the selected parameter configuration is y the command "VALVE:AOPEN".		
		gets lost, once the system is switched OFF. If that is a problem, use the next command instead. (The difference in the command line is the "1" at the end.)			
	Example:	Input:	TRIGGER:ASET:55,10,8,80,20,15		
		Result:	The following values are assigned to the dispensing parameters: Rising: $55 \triangleq 0.55$ ms (ms = Millisecond) Open Time: $10 \triangleq 1.0$ ms Falling: $8 \triangleq 0.08$ ms Needle Lift: 80% Number of Pulses: 20 Delay: $15 \triangleq 1.5$ ms		
		Return:	OK		

54	TRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,<dl>,1</dl></np></nl></fa></ot></ri>				
	Description:	the control un the command at the end.) It In this case, bo steps of 0.01 r But the minim current Needl All other time Specified valu mode, enter " The start of a	escribed pulse parameters can be modified and saved in EEPROM in control unit (reaction time: 200 ms). (The latter marks the difference to ommand before this one. It is shown in the command line with the "1" e end.) It does not transmit a trigger signal. is case, both of the parameters "Falling" and "Rising" are specified in so of 0.01 ms. Minimum value for "Falling": 0.01 ms, for "Rising" 0.01 ms. he minimum values for Falling and Rising also always depend on the ent Needle Lift % (see paragraph 7.4, page 70). There time parameters are entered in units of 1/10 ms. diffied values must be integer and positive. To choose the external e, enter "EXTERNAL" for "Open Time", instead of a numerical value. Start of a dispensing cycle with the selected parameter configuration is ted by the command "VALVE:AOPEN".		
	Example:	Input:	TRIGGER:ASET:55,10,8,80,20,15,1		
	·	Result:	The following values are assigned: Rising: 55		
			Open Time: $10 \triangleq 1.0 \text{ ms}$		
			Falling: 8 ≙ 0.08 ms		
			Needle Lift: 80 ≙ 80 %		
			Number of Pulses: 20		
			Delay: 15 ≙ 1.5 ms		
		Return:	OK		



Description:	configuration Parameters re "Falling", which not admissible the minimum	d is used to modify cycle parameters. If you intend to save the in the EEPROM, refer to the command described next. Elating to time have to be specified in 1/10 ms, except for the has to be entered in 1/100 ms. Values lower than "1" are e. Therefore the minimum falling value amounts to 0.01 ms, rising value 0.1 ms. But the minimum values for Falling and ways depend on the current Needle Lift % (see paragraph 7.4)		
	page 70). Specified value mode, enter " You have to in the start of a initiated by the This commandanswer with "	values must be integer and positive. To choose the external ter "EXTERNAL" for "Open Time", instead of a numerical value. to include all six setup parameters. of a dispensing cycle with the selected parameter configuration is by the command "VALVE:OPEN". mand works just like its "TRIGGER" variant. Only the MDC does not ith "OK", but with the saved parameters instead. This way the software can check directly, if the parameters were received		
	Information!			
	gets lost, once	mand, the information is only held in the RAM and therefore the system is switched OFF. If that is a problem, use the ne tead. (The difference in the command line is the "1" at the		
Example:	Input:	STRIGGER:SET:10,10,15,80,20,8 This assigns the following values to the parameters:		

10,10,15,80,20,8

Return:



56	STRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl>,1</dl></np></nl></fa></ot></ri>				
	Description:	EEPROM in t remains avair command be the end.) A trigger correctly. A trigger correctly.	relating to time have to be specified in 1/10 ms, except for ich has to be entered in 1/100 ms. Values lower than "1" are ole. Therefore the minimum falling value amounts to 0.01 ms, in rising value is 0.1 ms. But the minimum values for Falling and Ilways depend on the current Needle Lift % (see paragraph 7.4, uses must be integer and positive. To choose the external "EXTERNAL" for "Open Time", instead of a numerical value. Ind works just like its "TRIGGER" variant. Only the MDC does not "OK", but with the saved parameters instead. This way the tware can check directly, if the parameters were received		
	Example:	Input: Result:	STRIGGER:SET:10,10,15,80,20,8,1 The following values are assigned to the parameters: Rising: $10 ext{ } ex$		
		Return:	10,10,15,80,20,8		



	STRIGGER:ASET:<	RI>, <ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot>		
	Description:	the trigger sig "Rising" are sp 0.01 ms, for "R also always de page 70). All other time Specified value mode, enter "E	nmand is used to modify pulse parameters without transmitting ger signal. The values for both of the parameters "Falling" and are specified in steps of 0.01 ms. Minimum value for "Falling" is for "Rising" 0.01 ms. But the minimum values for Falling and Rising ays depend on the current Needle Lift % (see paragraph 7.4,). In time parameters are entered in units of 1/10 ms. Individuals must be integer and positive. To choose the external enter "EXTERNAL" for "Open Time", instead of a numerical value. The include all six setup parameters.	
		The start of a dispensing cycle with the selected parameter configuration is initiated by the command "VALVE:AOPEN".		
answer wit		answer with "(machine softw	s command works just like its "TRIGGER" variant. Only the MDC does not wer with "OK", but with the saved parameters instead. This way the chine software can check directly, if the parameters were received rectly.	
		Information!		
		With this command, the information is only held in the RAM and therefore gets lost, once the system is switched OFF. If that is a problem, use the next command instead. (The difference in the command line is the "1" at the end.)		
	Example:	Input:	STRIGGER:ASET:55,10,8,80,20,15	
		Result:	The following values are assigned to the dispensing parameters: Rising: $55 \triangleq 0.55$ ms (ms = Millisecond) Open Time: $10 \triangleq 1.0$ ms Falling: $8 \triangleq 0.08$ ms Needle Lift: 80% Number of Pulses: 20 Delay: $15 \triangleq 1.5$ ms	
		Return:	55,10,8,80,20,15	



58	STRIGGER:ASET:<	>, <nl>,<np>,<dl>,1</dl></np></nl>		
	Description:	As described pulse parameters can be modified and saved in EEPROM in the control unit (reaction time: 200 ms). (The latter marks the difference to the command before this one. It is shown in the command line with the "1" at the end.) It does not transmit a trigger command. Both of the parameters "Falling" and "Rising" are specified in steps of 0.01 ms. Minimum value for "Falling": 0.01 ms, for "Rising" 0.01 ms. But the minimum values for Falling and Rising also always depend on the current Needle Lift % (see paragraph 7.4, page 70). All other time parameters are entered in units of 1/10 ms. Specified values must be integer and positive. To choose the external mode, enter "EXTERNAL" for "Open Time", instead of a numerical value. The start of a dispensing cycle with the selected parameter configuration is initiated by the command "VALVE:AOPEN". This command works just like its "TRIGGER" variant. Only the MDC does not answer with "OK", but with the saved parameters instead. This way the		
		machine software can check directly, if the parameters were received correctly.		
	Example:	Input:	STRIGGER:ASET:55,10,8,80,20,15,1	
	Example:	Result:	The following values are assigned:	
		11000.111	Rising: 55 ≜ 0.55 ms (ms = Millisecond)	
			Open Time: 10	
			Falling: 8 ≙ 0.08 ms	
			Needle Lift: 80 ≙ 80 %	
			Number of Pulses: 20	
			Delay: 15	
		Return:	55,10,8,80,20,15	

59	VALVE:UP		
·		The valve is opened until it receives the command "VALVE:DOWN" or closes automatically after 2 min. During this phase, other commands are ignored	
	Example:	Input:	VALVE:UP
		Result:	The valve opens.
		Return:	OK

60	VALVE:DOWN			
Description: This command closes the valve. It is the only command accept		d closes the valve. It is the only command accepted in a		
		"VALVE:UP" phase. In other situations, it has no effect.		
Example: Input: VALVE:DOWN		VALVE:DOWN		
		Result:	The valve closes.	
		Return:	OK	



61	VALVE:AOPEN		
	Description:	This command initiates a dispensing cycle with the parameter combination currently selected. Usually this is the working configuration (setup 0). But if in the menu SCENARIO is ON (see paragraph 4.5.5, page 35), then the parameters of scenario 1 are chosen. If the select pins are activated (see paragraph 7.8, page 72), the setup (or scenario) is determined by them.	
		Important No	ote!
		command, yo	gger a dispensing process in the Infinite Mode with this u cannot stop it via the RS232C interface. You can only stop it terface or by pressing the [esc] -key on the MDC.
	Example:	Input:	VALVE:AOPEN
		Result:	The system launches a dispensing cycle, using the parameters given by the working configuration, scenario 1 or the select pins, respectively (for further information about scenarios and the select pins, see paragraph 7.9, page 74). Usually this is the working configuration (setup 0). But if in the menu SCENARIO is ON (see paragraph 4.5.5, page 35), then the parameters of scenario 1 are chosen. If the select pins are activated, the setup (or scenario) is determined by them.
		Return:	OK



62	VALVE:AOPEN: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>			
	Description:	specified in st (1/10 ms). Specified valu mode, enter " You have to in Parameters p combination not wish to re command is a	With this command, both of the parameters "Rising" and "Falling" are specified in steps of 1/100 ms, in contrast to the other time parameters	
		Important Note!		
		command, yo	igger a dispensing process in the Infinite Mode with this ou cannot stop it via the RS232C interface. You can only stop it terface or by pressing the [esc] -key on the MDC.	
	Example:	Input:	VALVE:AOPEN: 30,10,15,80,20,15	
		Result:	The dispensing cycle contains the following values: Rising: $30 \triangleq 0.3$ ms (ms = Millisecond) Open Time: $10 \triangleq 1.0$ ms Falling: $15 \triangleq 0.15$ ms Needle Lift: 80% Number of Pulses: 20 Delay: $15 \triangleq 1.5$ ms	
		Return:	OK	

63	VALVE:AOPENS	VALVE:AOPENS <setup no.=""></setup>			
	Description:	of the setup (You decide to	nd initiates a dispensing cycle with the parameter combination (or scenario) indicated in the command. On dispense with the parameters of a specified setup (or CENARIO is "ON"), by using one of the following command		
		• S0 - uses	parameters of setup 0 (or scenario 1 with SCENARIO "ON")		
		• S1 - uses	parameters of setup 1 (or scenario 2 with SCENARIO "ON")		
		• S2 - uses	parameters of setup 2 (or scenario 3 with SCENARIO "ON")		
		S3 - uses parameters of setup 3 (or scenario 4 with SCENARIO "ON")			
		These parameters are used even with activated select pins. As an example, to dispense with the parameters of setup 2 you have to enter the following command: VALVE:AOPENS2 For this example, SCENARIO has to be "OFF" in the menu.			
		Important Note!			
		command, yo	rigger a dispensing process in the Infinite Mode with this bu cannot stop it via the RS232C interface. You can only stop it interface or by pressing the [esc] -key on the MDC.		
	Example:	Input:	VALVE:AOPENS2		
		Result:	The system launches a dispensing cycle, using the parameters given by the selected setup (or scenario; for further information about scenarios and the select pins, see paragraph 7.9, page 74).		
		Return:	OK		



64	SVALVE:AOPEN			
	Description:	This command initiates a dispensing cycle with the parameter combination currently selected. Usually this is the working configuration (setup 0). But if in the menu SCENARIO is ON (see paragraph 4.5.5, page 35), then the parameters of scenario 1 are chosen. If the select pins are activated (see paragraph 7.8, page 72), the setup (or scenario) is determined by them. This command works just like its "VALVE" variant. Only the MDC does not answer with "OK", but with the parameters, which were used to trigger. This way the machine software can check the parameters directly.		
		Important Note!		
		command, yo	gger a dispensing process in the Infinite Mode with this u cannot stop it via the RS232C interface. You can only stop it terface or by pressing the [esc] -key on the MDC.	
	Example:	Input:	SVALVE:AOPEN	
		Result:	The system launches a dispensing cycle, using the parameters given by the working configuration, scenario 1 or the select pins, respectively (for further information about scenarios and the select pins, see paragraph 7.9, page 74). Usually this is the working configuration (setup 0). But if in the menu SCENARIO is ON (see paragraph 4.5.5, page 35), then the parameters of scenario 1 are chosen. If the select pins are activated, the setup (or scenario) is determined by them.	
		Return:	30,10,15,80,20,15	



	SVALVE:AOPEN: <f< th=""><th>RI>,<ot>,<fa></fa></ot></th><th>,<nl>,<np>,<dl></dl></np></nl></th></f<>	RI>, <ot>,<fa></fa></ot>	, <nl>,<np>,<dl></dl></np></nl>	
	Description:		mand, both of the parameters "Rising" and "Falling" are eps of 1/100 ms, in contrast to the other time parameters	
		Specified values must be integer and positive. To choose the external mode, enter "EXTERNAL" for "Open Time", instead of a numerical value. You have to include all six setup parameters.		
		Parameters previously entered by "TRIGGER:ASET" are not erased, but the combination remains in the system only until the end of the cycle. If you do not wish to reenter the entire command several times, the "TRIGGER:ASET" command is advantageous. This way the cycle can be reactivated simply by		
answer with "OK", but with the parameter		EN". If works just like its "VALVE" variant. Only the MDC does not DK", but with the parameters, which were used to trigger. Inachine software can check the parameters directly.		
		Important Note!		
		In case you tri	gger a dispensing process in the Infinite Mode with this	
			u cannot stop it via the RS232C interface. You can only stop it	
			erface or by pressing the [esc] -key on the MDC.	
	Example:	Input:	SVALVE:AOPEN: 30,10,15,80,20,15	
		Result:	The dispensing cycle contains the following values: Rising: $30 \triangleq 0.3$ ms (ms = Millisecond)	
			Open Time: 10	
			Falling: 15	
			Needle Lift: 80 %	
			Number of Pulses: 20	
		Doturn	Delay: 15 ≜ 1.5 ms	
		Return:	30,10,15,80,20,15	

66	SVALVE:AOPENS <setup no.=""></setup>					
	Description:	This command initiates a dispensing cycle with the parameter combination of the setup (or scenario) indicated in the command. You decide to dispense with the parameters of a specified setup (or scenario, if SCENARIO is "ON"), by using one of the following command extensions:				
		• S0 - uses parameters of setup 0 (or scenario 1 with SCENARIO "ON")				
		• S1 - uses parameters of setup 1 (or scenario 2 with SCENARIO "ON")				
		• S2 - uses parameters of setup 2 (or scenario 3 with SCENARIO "ON")				
		• S3 - uses parameters of setup 3 (or scenario 4 with SCENARIO "ON")				
		These parameters are used even with activated select pins. As an example, to dispense with the parameters of setup 2 you have to enter the following command: SVALVE:AOPENS2				
		For this example, SCENARIO has to be "OFF" in the menu.				
		This command works just like its "VALVE" variant. Only the MDC does not answer with "OK", but with the parameters, which were used to trigger.				
		This way the machine software can check the parameters directly.				
		Important Note!				
		In case you trigger a dispensing process in the Infinite Mode with this command, you cannot stop it via the RS232C interface. You can only stop it				
	F	via the PLC-interface or by pressing the [esc]-key on the MDC.				
	Example:	Input: SVALVE:AOPENS2				

120	VTK-TR-BA-173e-1 - User Manual MDS 3581-V
-----	---



Result:	The system launches a dispensing cycle, using the parameters given by the selected setup (or scenario; for further information about scenarios and the select pins, see paragraph 7.9, page 74).
Return:	50,20,20,80,1,10



67	WRITE:LCD: <text> (LCD = Liquid-crystal display)</text>		
	Description:	With this com	mand, an ASCII text including up to 32 characters can be writ-
		ten on the screen. All the letters appear in form of capital letters.	
	Example:	Input:	WRITE:LCD:Hello World
		Result:	The display shows:
			HELLO WORLD
		Return:	OK

68	TAPPET:SET: <value></value>		
	Description:	This command allows you to decide on the number of cycles until the next tappet maintenance. If no numerical selection is made, the value will be "infinite".	
	Example:	Input:	TAPPET:SET:500000
		Result:	500000 cycles have been selected.
		Return:	OK

69	TAPPET:CLEAR				
	Description:	The counter for tappet maintenance is cleared. This command is usually entered at the end of the maintenance procedure.			
	Example:	Input:	TAPPET:CLEAR		
		Result:	Counter reset to "0".		
		Return:	OK		

70	NOZZLE:SET: <value></value>		
	Description:	This command determines the number of cycles to be performed until the next maintenance of the nozzle insert. If you do not enter any number, the value is set as "infinite".	
	Example:	Input:	NOZZLE:SET:500000
		Result:	500000 cycles have been selected.
		Return:	OK

71	NOZZLE:CLEAR			
	Description:	The content of the nozzle maintenance counter is erased.		
	Example:	Input:	NOZZLE:CLEAR	
		Result:	Counter reset to "0".	
		Return:	OK	



72	SCENARIO:STATU	S	
	Description:	This command tells if scenarios are "ON" or "OFF". It also gives this information for the four PLC-Stops.	
	Example:	Input:	SCENARIO:STATUS
		Result:	Gives the ON/OFF status for scenarios and the four PLC-
			Stops.
		Return:	Scenario: OFF
			PLCSTOP Scenario 1: OFF
			PLCSTOP Scenario 2: OFF
			PLCSTOP Scenario 3: OFF
			PLCSTOP Scenario 4: OFF

	73 SCENARIO:OFF		
Description: This command deactivates the use of scenarios.		d deactivates the use of scenarios.	
	Example:	Input:	SCENARIO:OFF
		Result:	Use of scenarios is deactivated.
		Return:	OK

74	SCENARIO:ON		
	Description:	This command activates the use of scenarios.	
	Example:	Input:	SCENARIO:ON
		Result:	Use of scenarios is activated.
		Return:	OK

75	SCENARIO:PLCS1	TOP: <scenario n<="" th=""><th>o.>:OFF</th></scenario>	o.>:OFF	
	Description:	This comman	This command deactivates the PLC-Stop. The number of the scenario can	
	be either 1, 2, 3 or 4.		3 or 4.	
	Example:	Input: SCENARIO:PLCSTOP:1:OFF		
		Result:	PLC-Stop for scenario 1 is deactivated.	
		Return:	OK	

76	SCENARIO:PLCST	OP: <scenario n<="" th=""><th>o.>:ON</th></scenario>	o.>:ON
	Description: This command activates the PLC-Stop. The number of the scena		d activates the PLC-Stop. The number of the scenario can be
		either 1, 2, 3 or 4.	
	Example:	Input: SCENARIO:PLCSTOP:1:ON	
		Result:	PLC-Stop for scenario 1 is activated.
		Return:	OK



77	Segment 1 Scenar Sg. 4 Setup, Sg. 4 I Dl., Sg. 7 Setup, Sg	Scenario no.>: <segment 1="" 10="" 2="" 3="" 4="" 5="" 6="" 7="" 8="" 9="" dl.="" dl.,="" io-delay,="" np,="" number="" of="" pulses,="" segment="" setup,="" sg.=""></segment>		
Description: This command saves the parameter to enter parameters for the segmen segment, you have to give the setul the scenario delay. The parameters will be checked. No result in cancellation. Therefore, you segments with setup number, NP and		to enter paran segment, you the scenario d The paramete result in cance	rs will be checked. Not enough parameters or illegal ones will ellation. Therefore, you always have to enter complete n setup number, NP and Sc. delay. You can enter a maximum	
		The scenario number can be 1, 2, 3 or 4, a setup number 0, 1, 2 or 3. The NP can be between 1 and 32000 or 0, which would mean "infin The scenario delay will be given in 1/10 ms, i.e. 5 means 0.5 ms. The delay is 1000.0 ms, min delay is 0.1 ms. To delete a scenario use the version SCENARIO:SAVE: <scenario no.=""></scenario>		
	Example:	Input:	SCENARIO:SAVE:1:0,1,5,1,2,5,2,3,5,3,4,5,0,5,5,1,6,50,2,7,50,3,8,50,0,9,50,1,10,50	
		Result:	The scenario parameters of scenario 1 are saved.	
Return: OK		OK		

78	SCENARIO:READ	: <scenario no.=""></scenario>	
	Description:	This command gives you the scenario parameters of the named scenario via the serial interface. The response follows the scheme "setup no. of segment 1, number of pulses of segment 1, scenario delay of segment 1, setup no. of segment 2, NP of segment 2, sc. delay of segment 2,, sc. delay of segment 10". The scenario delay is given in 1/10 ms. The value 50 e.g. represents 5 ms. Only the used segments of the scenario are given, the others are left out in the output.	
		Information!	
		If a scenario is will be "Scena	completely empty (e.g. after a factory reset), the response rioempty".
	Example:	Input:	SCENARIO:READ:1
		Result:	Gives the scenario parameters of scenario 1.
		Return:	0,1,5,1,2,5,2,3,5,3,4,5,0,5,5,1,6,50,2,7,50,3,8,50,0,9,50,1,10, 50

79	SETUP:ASAVE:<	setup no.>: <ri>,</ri>	<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot>
	Description:	provide the nu All parameters with activated Parameters rel "Falling" and " than "1" are no minimum falli 0.01 ms. But th on the current Parameter Lim	d saves the given parameters in a setup. You always have to umber of the setup and all six setup parameters. It is will be checked. Not enough parameters, delay too short is heater or incorrect values will lead to cancellation. It leads to time have to be specified in 1/10 ms, except for Rising", which have to be entered in 1/100 ms. Values lower of admissible, only the open time can be "0". Therefore, the ingivened value amounts to 0.01 ms, the minimum rising value is the minimum values for Falling and Rising also always depend to Needle Lift % (see paragraph 7.4 "Minimum and Maximum nits", page 70).
	Example:	Input:	SETUP:ASAVE:1: 30,10,15,80,20,15



Result:	The parameters will be saved in the given setup and checked.
Return:	OK



80	SETUP:AREAD: <se< th=""><th>tup no.></th><th></th></se<>	tup no.>		
	Description:	enter its numl All values rela 1/10 ms (i.e. 1 1.00 ms). Therefore, the rising value is always depen	nerefore, the minimum falling value amounts to 0.01 ms, the minimum sing value is 0.01 ms. But the minimum values for Falling and Rising also ways depend on the current Needle Lift % (see paragraph 7.4 "Minimum and Maximum Parameter Limits", page 70).	
	Example:	Input:	SETUP:AREAD:1	
	·	Result:	Displays the parameters of the given setup. Rising: $30 \triangleq 0.3$ ms (ms = Milliseconds) Open Time: $10 \triangleq 1.0$ ms Falling: $15 \triangleq 0.15$ ms Needle Lift: 80% Number of Pulses: 20 Delay: $15 \triangleq 1.5$ ms	
		Return:	30,10,15,80,20,15	

	BAUDRATE:0/1/2/3/4			
	Description:	possible baud	d changes the baud rate of the serial interface. There are five rates (9600, 19200, 38400, 57600 and 115200), g with the parameters in this order (0, 1, 2, 3 or 4).	
		Important Note!		
		After reading	the "OK", the sender has to switch his baud rate as well;	
		otherwise, the	e communication will break down.	
	Example:	Input:	BAUDRATE:1	
		Result:	The baud rate is switched to 19200.	
		Return:	OK	

82	GETTD	GETTD = Get time and date			
	Description:	d tells you the current time (UTC) and date in the format			
		"hour, minute, second, year, month, day".			
	Example:	Input:	GETTD		
		Result:	The time (UTC) is given, including the date.		
		Return:	10,07,00,2019,02,17		
			or		
			No Clock (if the RTC of the MDC is defect)		

83	MDC:RESTART				
	Description:	This command tells the MDC to shut down (without shutting down the power) and then to restart.			
	Example:	Input:	MDC:RESTART		
		Result:	The MDC is shut down and then restarts.		
		Return:	OK		

8.2 PLC-Interface: 15-pin, Sub-D

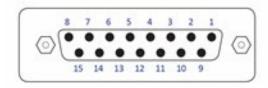


Fig. 66: PLC-Interface: 15-pin, Sub-D

The PLC-interface (illustrated above) works on digital basis without a particular syntax. It allows for controlling a machine or device by means of a remote master device. Transmission of data is possible in either direction. The trigger delay of this interface amounts to 120 µs.

Access is possible to:

- · Status bits
- Values of voltage and current
- Set-Trigger signals initiating dispensing cycles (pulses) or complete packages of pulses (bursts)

You can find a connection diagram in the attachments (see paragraph 14.4, page 184).

INFORMATION

Do not use keypad during PLC triggered dispensing

When a PLC-trigger is send, the keypad is locked at the same time. This lock can be lifted by pressing the **[enter]**-key. But make sure not to do it during dispensing, since it also activates a delay, which could affect your dispensing result. On the other hand, a trigger does not work, if the MDC is not switched to the main menu. Additionally do not send a trigger, while the heater is starting.

8.2.1 Pin Functions

	Characteristics	Level	Function				
1	Output	0 / +24 V, Ra=2.2 k Ω (valid for 0 V)					
2	Input	0 / +24 V Ri=1.3 kΩ	Trigger Voltage Input 0 +5 V "Valve closed" +12 V +30 V "Valve opened" Positive edge triggering				
3	Input	0/ +5 V Ri=400 Ω	Trigger Voltage Input 0 +0.8 V "Valve closed" +3 V +5 V "Valve opened" Positive edge triggering				
4	Ground		Ground				
5	Output	0 / +24 V, Ra=2.2 k Ω (valid for 0 V)	Set point Heating OK				
6	Output	0 / +24 V, Ra=2.2 k Ω (valid for 0 V)	Nozzle unit "adjusted" OK (means green adjust LED)				
7	Output	0 / +24 V, Ra=2.2 k Ω (valid for 0 V)	Mains voltage OK				
8	Reserved						
9	Output	24 V/50 mA	Power supply to external trigger				
10	Ground		Ground				
11	Input	$0/20$ mA, Ri=500 Ω	Trigger Current Input				
12	Reserved						
13	Output	0 / +24 V, Ra=2.2 k Ω (valid for 0 V)	For adjust: adjust failed. Adjust screw screwed in too deep or not enough. Outside adjust: general error (24 V = error)				
14	Output	0 / +24 V, Ra=2.2 k Ω (valid for 0 V)	DosOK – Ready for dispensing (in the case of a pulse package, at the end of the entire burst)				
15	Input		Trigger Abort; connection to ground, to interrupt dispensing cycle; trigger blocked while active				



8.2.2 PLC-Signals

The following graphs show you the different PLC-signals Trigger, DosOK and SingleDosOK and their behavior in various dispensing modes. The last paragraph then shows the effect of scenarios. It also shows the differences for the variants of DosOK (Delay ON and Delay OFF) and SingleDosOK (pulse and setup).

DosOK

The signal DosOK shows the length of a dispensing burst. During the pulsing burst, the signal is "low".

SingleDosOK

The signal SingleDosOK shows, that a single shot is being dispensed. When the signal changes to "low", a single shot is started. When the signal jumps back to "high", it shows that the Open Time has ended and the valve is closed.

8.2.2.1 Single-Shot Mode

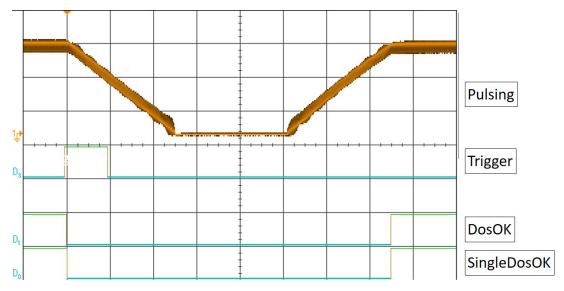


Fig. 67: Single-Shot Mode

8.2.2.2 Burst Mode (Example with Three Shots)

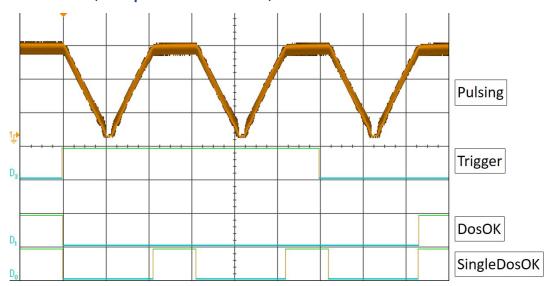


Fig. 68: Burst Mode (Example with Three Shots)

8.2.2.3 External Mode

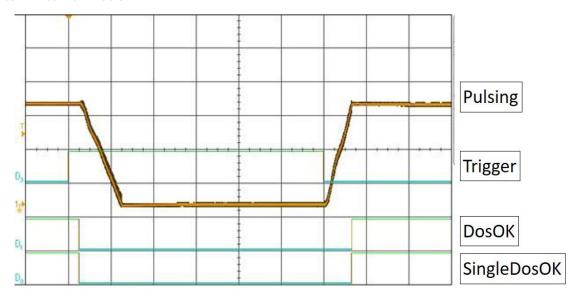


Fig. 69: External Mode

8.2.2.4 Infinite Mode

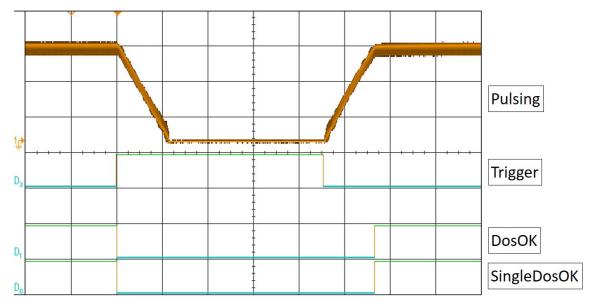


Fig. 70: Infinite Mode



8.2.2.5 Comparison of the signals DosOK and SingleDosOK for Scenario ON and Scenario OFF

The following two figures show the signals DosOK and SingleDosOK in relation to the tappet movement. In the first figure, scenarios are off, in the second figure, scenarios are ON.

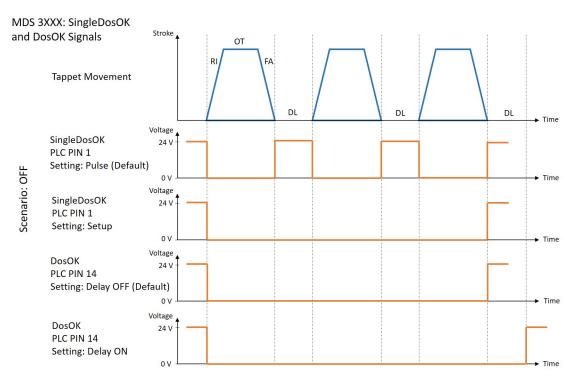


Fig. 71: PLC signals with Scenario OFF

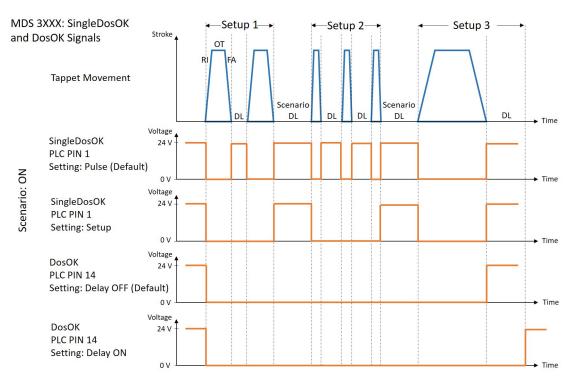


Fig. 72: PLC signals with Scenario ON

8.2.3 Remote Adjust

8.2.3.1 What is the Remote Adjust?

A remote adjust is similar to a normal adjust (see paragraph 6.5, page 60), but the system is operated from a master device (e.g. a PC or an XY machine) by means of interfaces (PLC, RS-232C). The function itself is identical.

8.2.3.2 Advantages

The remote adjust allows for total control of an MDC integrated in a machine, since dispensing parameters can be monitored by the software of this machine. The control unit can be built in with permanent key lock. Thus the modification of parameters without authorization can be prevented in the machine software.

8.2.3.3 Procedure

The remote adjust has to be performed according to the following instructions:

IMPORTANT NOTE

Heating and remote adjust

In case your application uses a nozzle heater, you have to activate the heater before you start the adjust. Make sure to wait long enough for the heater to reach stable temperature, since the adjust could lead to an incorrect result otherwise.

While the heater is still heating up (red heater-LED is flashing), the messages "Please wait for the heating!" and "Or ESCAPE for Adjust!" appear alternating on the display. Once the necessary temperature is reached, the message "You can now start Adjust!" appears.

(If necessary, you can start the Adjust ahead of time by sending a long trigger signal (110 ms – 200 ms) via PLC-interface to your controller during the heating phase, but you should be aware of the consequences for the accuracy of the Adjust.)

Wear heat-resistant gloves while working with the valve!

INFORMATION

Displaying remote adjust

- In the beginning of the remote adjust, both adjust LEDs are lit simultaneously.
- The display of the MDC shows "Remote Adjust is running!"
- For transmission of the orders between PC and control unit, the interfaces RS-232C and PLC-interface are used.

INFORMATION

Preparation before remote adjust

- Screw the nozzle fixation nut absolutely tight (torque at least 150 cN.m).
- The baud rate of the serial interface needs to be set to 115200.
- 1. Send the command "ADJUST:START" to the control unit via RS-232C. The system returns the message "Adjust Screw OUT Press Enter". Screw open the adjust screw completely (counterclockwise, see Fig. 73, page 133, torque for screwing it open is approx. 50 60 cN.m).

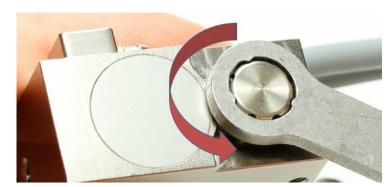


Fig. 73: Screw open adjust screw

2. In order to confirm step 1, send a short trigger signal (500 μs – 80 ms) to the control unit via PLC interface.

Short trigger signal:

- 5 V or 24 V (PIN2 + PIN4 or PIN3 + PIN4 Input signal of MDC via 15 pin Sub-D)
- Signal length: 500 μs 80 ms
- 3. The system jets 500 shots to clear the valve for the remote adjust. The message "500 Shots Please Wait" is shown. Then the message "Please wait..." appears.

INFORMATION

Adjust offset during 500 shots

In case you have an adjust offset activated, when you start the adjust, both adjust LEDs will blink during the 500 shots. At the same time, the adjust offset value is shown in the display.

INFORMATION

Support information for older valves

In exceptional cases, older valves may display the message "Please contact support for further information!" at this point. In this case, please contact the technical support of VERMES Microdispensing (see Page 7). They will explain how to proceed with this valve.

- 4. The message "Adjust Screw IN until GREEN LED ON" appears first. Then the message alternates with "SLOW-SCREW IN until green LED ON". The system then returns the current status of the adjust LEDs, continuously repeating the transmission to the PC in intervals of 500 ms (via RS-232C). An additional command to update the status of the adjust LEDs on the screen is not required.
- 5. Turn the adjust screw inwards (clockwise), until the message displayed on the PC is changed to "Adjust LED GREEN press enter". The green adjust LED on the MDC is lit.
- 6. In order to confirm the remote adjust, send a short trigger signal ($500 \, \mu s 80 \, ms$) to the control unit via PLC interface (see Step 2). This will only be accepted, if the message "Adjust LED GREEN press enter" is shown. After the confirmation, the system then returns the following response via RS-232C: "Adjust Success".

The remote adjust has been completed successfully.

In case you had turned the adjust screw too far, the message "Adjust LED RED Adjust Screw OUT" appears. Turn the adjust screw outwards (counter-clockwise), until the message "Adjust LED GREEN press enter" appears. From there, screw further back, until the message disappears. Then screw back in, until the message "Adjust LED GREEN press enter" appears again. Confirm the remote adjust as described (see Step 6).



The remote adjust can be aborted anytime by sending a long trigger signal (110 ms – 200 ms) to the control unit via PLC- interface. The system returns the message "Adjust failed" to the PC.

Long trigger signal:

- 5 V or 24 V (PIN2 + PIN4 or PIN3 + PIN4 Input signal of MDC via 15 pin Sub-D)
- Signal length: 110 ms 200 ms

8.3 AUX socket

The AUX socket can be used for the supply of an external device (e.g. an optocoupler) or to control certain setups (see paragraph 7.8, page 72) or scenarios (see paragraph 7.9.3, page 75). The pin assignments are shown below (see Fig. 74). In case the select pins are activated, the maximum current is 12 mA. The other pins are used internally and cannot be used otherwise. The socket is a Lumberg SV81 8P.

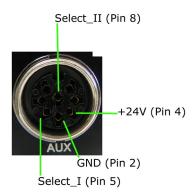


Fig. 74: AUX socket

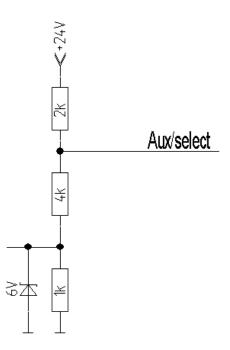


Fig. 75: Circuit diagram

9 Cleaning

After every dispensing process involving aggressive or self-curing substances, a cleaning procedure is recommended. It should involve the valve and all other surfaces in contact with the fluid. Different methods of cleaning are described in the following chapter. The proper choice depends on the degree of contamination and the dispense medium used.

9.1 Preliminary Notes

IMPORTANT NOTE

Prepare cleaning in advance

It is recommended to prepare the cleaning procedure in advance. Do not drop the device or its subcomponents.

A CAUTION

Liquid spurts possible

Residual liquids may spurt when handling components during the cleaning process. Therefore, protective clothes are recommended:

- Safety goggles
- Gloves (chemical resistant)
- Overall (chemical resistant)
- Surgical mask

Remember that the surface of the valve is sensitive to abrasion, so do not use wire brushes and other inappropriate tools. A specially developed cleaning tool kit (CTK 2.5) is available upon request (order no. 1014632), which is of particular interest for all surfaces in direct contact with the fluid.

A WARNING

Potential chemical reaction!

The dispensed medium and the cleaning agent must be compatible to each other. Otherwise, they might cause unwanted chemical reactions, toxic vapor, increase of temperature etc. Consult the manufacturer in case of doubt.

Before introducing aggressive purifying agents or solvents to the system, verify compatibility with the material of all adjacent parts. Refer to the list in paragraph 9.3, page 138.

In case of materials you cannot find on the list, please consult the manufacturer or the Technical Support of VERMES Microdispensing (see Page 7).

A CAUTION

Keep actuator clean

No liquid may penetrate into the actuator (e.g. through the plug); otherwise the whole element could be damaged.

9.2 Heat Resistance of Sealing Materials

The following table shows the maximum temperature to which the respective sealing materials may be exposed.

Material	Max. Temperature [in °C]
PE	80
PTFE	230
NBR	100
EPDM	140
Silicone	200
Viton	220
CeTeDur	250

Tab. 28: Heat Resistance of Sealing Materials



9.3 Compatibility between Sealing Materials and Selected Media

		EPDM	VITON	SILICONE		PTFE	CeTeDur
Acetone		+++		-+	+++	+++	+++
Ammonia				+++	+++	+++	+++
Chloroform			+++		+++	+++	+++
Cyclohexane	+++		+++		+++	+++	+++
Cyclohexanol	+++		+++	-+	+++	+++	+++
Cyclohexanone						+++	+++
Dimethylformamide		+++		-+	+++	+++	+++
Acetic acid				-+	+++	+++	+++
Ethanol	+++	+++		+++	+++	+++	+++
Heptane	+++		+++		-+	+++	+++
Hexane	+++		+++		-+	+++	+++
Isopropanol	-+	+++	+++	+++	+++	+++	+++
Methylene Chloride			-+			+++	+++
Nitromethane		-+			+++	+++	+++
Pentane	+++		+++			+++	+++
Mercury	+++	+++	+++	+++	+++	+++	+++
Silicone Oil	+++	+++	+++	-+	+++	+++	+++
Toluene					-+	+++	+++
Water	+++	+++	+++	+++	+++	+++	+++
Xylene			+++		-+	+++	+++
Excellent compatibility	No or only a marginal influence on the component.						
+++							
Moderate compatibility - +	Limited contact and sporadic exposure to the media will allow some usability, but long term it will lead to malfunctions of the component. If possible, use materials with a higher compatibility.						
No compatibility	Usage is not recommended.						

Tab. 29: Compatibility between Sealing Material and Selected Media

9.4 Cleaning Methods

The following methods are available:

- Pre-purifying
- · Rinsing with a purifying agent
- Total disassembly of the valve, followed by fine purification

For a thorough cleaning process, you need:

- A cleaning tool kit CTK 2.5
- Nozzle insert cleaning wires (of the correct size)
- · A lint-free cloth
- An ultrasonic bath
- · A beaker with a compatible cleaning liquid (e.g. Isopropanol)
- A pointed pair of tweezers
- The necessary tools for mounting and demounting as recommended by VERMES (see paragraph 3.3, page 15).

9.4.1 Pre-purifying

Pre-purifying consists in purging the system with compressed air.

A CAUTION

Potential liquid spurts

During this procedure, liquid droplets may be expulsed!

Users must protect themselves correspondingly (protective clothing, safety goggles).

Step 1:

Complete the dispensing process. The valve is in closed position.

Do NOT switch OFF the control unit.

Step 2:

- Separate the compressed-air connection.
- Reduce the pressure to 0 bar.
- Disconnect the PP adapter fitting from the cartridge.

Step 3:

- Replace the used cartridge by a new one.

Step 4:

- Reinstall the compressed-air connection as follows.
- Place the PP adapter fitting on the cartridge. Rotate clockwise, until it latches in place.
- Connect the PVC hose with the KS4-CK-6 coupler plug to a compressed-air supply. For this purpose, you require a KD4-1/2-A coupler socket.
- Activate the compressed-air supply.

Step 5:

Place a container underneath the valve, to collect any liquid dripping out.

Step 6:

- Initiate the purging procedure by pressing [F1].
- Keep the [F1]-key pressed until the procedure is complete and no more liquid flows out through the nozzle unit.

INFORMATION

Automatic closing

After ca. 2 min the valve closes automatically, in order to protect the actuator.

Alternatively, the procedure can be performed by the RS-232C interface. Use the commands VALVE:UP and VALVE:DOWN for this purpose.

Step 7:

Separate the compressed-air connection and remove the cartridge.

Step 8:

- Make sure the collected liquid in the container is disposed of according to local regulation.

9.4.2 Rinsing with a purifying agent

After pre-purification by compressed air, residual liquid may still be present inside the fluid system (particularly when dispensing high-viscous substances). It can only be removed by a flushing procedure. For this purpose, the following examples may be suitable agents:

- · Distilled water
- Ethanol
- Isopropanol (IPA)
- Acetone

A WARNING

Potential chemical reactions

Before the start of the procedure, carefully read the safety data sheet of the dispensed substance. Ensure compatibility with the cleaning agent.

The cleaning agent itself should not react with any part in contact with the fluid.

Consult the manufacturer in case of need, especially if you intend to use aggressive material.

Step 1:

 Complete the dispensing process. The valve is in closed position. Do NOT switch OFF the control unit.

Step 2:

- Separate the compressed-air connection.
- The pressure must be reduced to 0 bar.
- Disconnect the PP adapter fitting from the cartridge.

Step 3:

- Replace the used cartridge by a new one.
- The purifying agent can be supplied.

A CAUTION

Check for leaks

All of the connectors must be installed and leak-tight.



Step 4:

- Reinstall the compressed-air connection as follows.
- Place the PP adapter fitting on the cartridge. Rotate clockwise, until it latches in place.
- Connect the PVC hose with the KS4-CK-6 coupler plug to a compressed-air supply. For this purpose, you require a KD4-1/2-A coupler socket.
- Activate the compressed-air supply.

Step 5:

 Place a container underneath the valve, to collect any liquid dripping out. The container needs sufficient capacity to contain the purifying agent together with the solved residual liquid.

Step 6:

- Initiate the purging procedure by pressing [F1].
- Keep the [F1]-key pressed until the procedure is complete and no more liquid flows out through the nozzle unit.

INFORMATION

Automatic closing

After ca. 2 min the valve closes automatically, in order to protect the actuator.

Alternatively, the procedure can be performed by the RS-232C interface. Use the commands VALVE:UP and VALVE:DOWN for this purpose.

Step 7:

Separate the compressed-air connection and remove the cartridge.

Step 8:

- Make sure the collected liquid in the container is disposed of according to local regulation.

9.4.3 Demount the Valve

A CAUTION

No dispensing medium residues

Before demounting the fluid box from the valve, make sure that no dispensing medium is left inside the system.

Preliminary steps:


- The dispensing process must be completed. The valve is in closed position.
- Deactivate the compressed air supply.
- Switch OFF the control unit and disconnect it from the mains.
- Remove the actuator cable and sensor cable from the valve.
- Detach the valve with fluid box from dispensing robot.


A CAUTION

High temperatures, danger of burns

Be careful if you have used a heater with your application. A nozzle heater can reach temperatures of up to 180 °C. Do not touch this area before it has cooled, since there is the danger of severe burns. Use heat resistant gloves.

Disassemble the valve as follows.

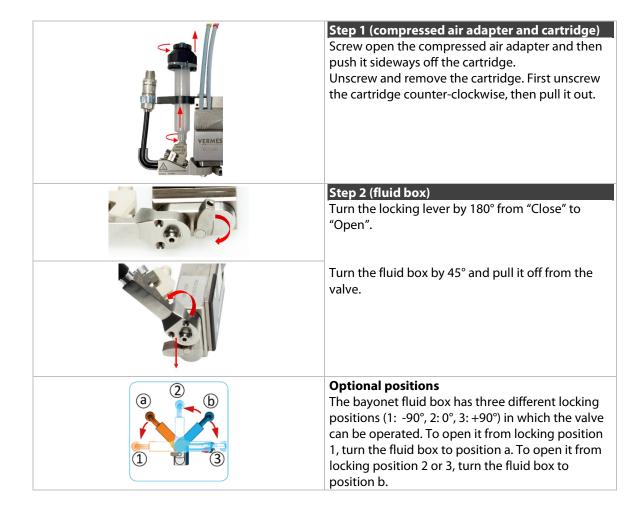

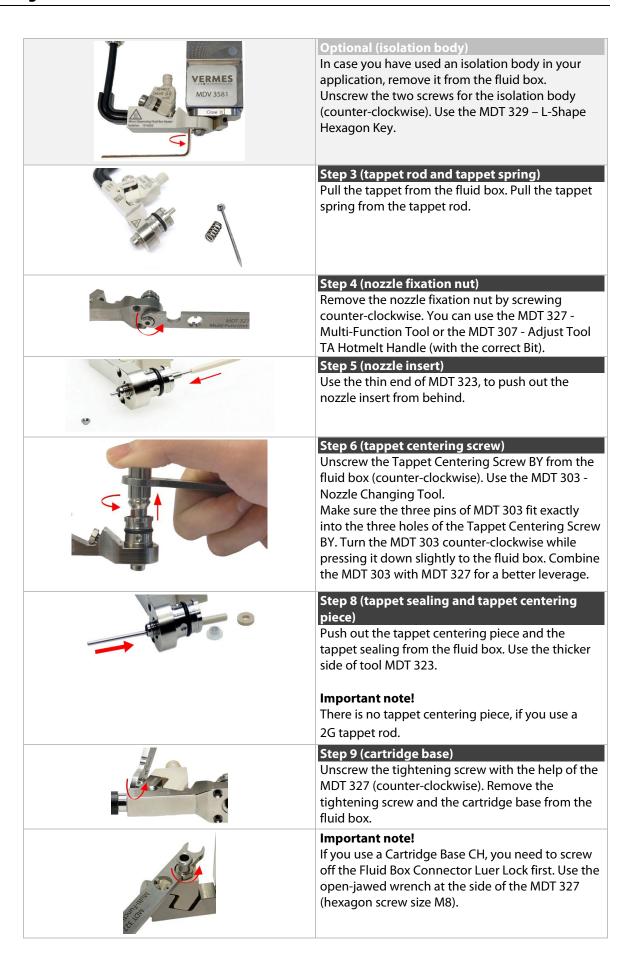





Tab. 30: Disassembling of the valve

Step 10 (O-ring)

Remove the O-ring from the fluid box body. Pull it off carefully with a pair of tweezers. Be careful not to damage the O-ring.

Caution!

You could omit this step, only if the solvent you use is compatible with the material of the O-ring.

Unusual (connector BY)

Usually you will **not** remove the Connector BY and the fluid box body. In case the connector is clogged, use MDT 327 to screw off the Connector BY (counter-clockwise). Then pull out the fluid box body.

A CAUTION

Damaged tappet sealing

Only use the tools recommended by VERMES. Do **not** use a sharp tool to press the tappet sealing from the fluid box. It could cause damage to the tappet sealing, which might lead to a leakage.

9.4.4 Fine Purification

Preliminary steps:

 Push a cleaning rod or a fluidic brush through the media carrying channels of all the components.

First, clean the single components in an ultrasonic bath.

- Place a beaker in the ultrasonic bath. Make sure it is large enough.
- Place the nozzle insert, tappet sealing, tappet centering piece, cartridge base, tightening screw, nozzle fixation nut and the fluid box body in the beaker.

A CAUTION

Damage of O-ring/tappet sealing

Unless the compatibility between the O-ring/Tappet sealing and the solvent is excellent, do not insert the O-ring/Tappet Sealing into the solvent.

A CAUTION


Damage of components

Place tipped nozzle inserts (e.g. J-, C-, N27-type) in a separate beaker. To avoid damage, do not place tipped nozzle inserts together with other components in one beaker.

IMPORTANT NOTE

Keep heater connection dry

Make sure that the heater connection stays outside the beaker (see picture), to avoid any fluids reaching the electronics. (In case you do not use a heater and have the mounting body BY instead of an MDFH, you can ignore this part.)

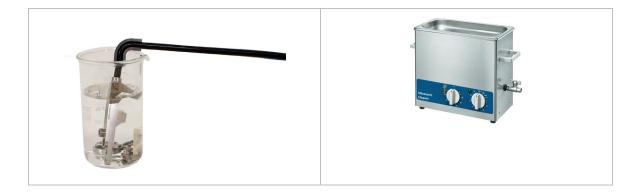

- Fill the beaker with an appropriate solvent (e.g. Isopropanol), until all of the parts are covered.
- Leave the components for ca. 15 min inside.

A WARNING

High temperature, danger of burns

Be aware of your dispensing medium when setting the temperature, if the dispensing medium is inflammable. Otherwise, with too high temperatures deflagration might occur. Set the temperature as low as possible within the effective range.

- Take the beaker with the components out of the ultrasonic bath. Then use tweezers to take the components out of the beaker.

Next, clean all components by hand.

 For fine purification, you have to clean all components by hand. In general, you should take special care about those places, which get in contact with the medium or where two different parts fit together. First, you should clean the nozzle insert, since hardening would cause most problems here.

INFORMATION

Simpler cleaning


For some uncomplicated media it is possible to clean the parts just by using a fluid like ethanol and compressed air, which can simplify the cleaning process. But before you try it, you should always contact our Technical Support.


INFORMATION

Nozzle inserts with small orifices

If a nozzle insert with orifices smaller than 100 μ m (except for nozzle inserts with long dispensing channels, namely J-/C-series, N-27 and N-28) happens to be still clogged after cleaning, please clean it with MDT 316 - Nozzle Insert Cleaning Tool. For operating the MDT 316 please refer to the "Quick Reference Guide – MDT 316 - Nozzle Insert Cleaning Tool".



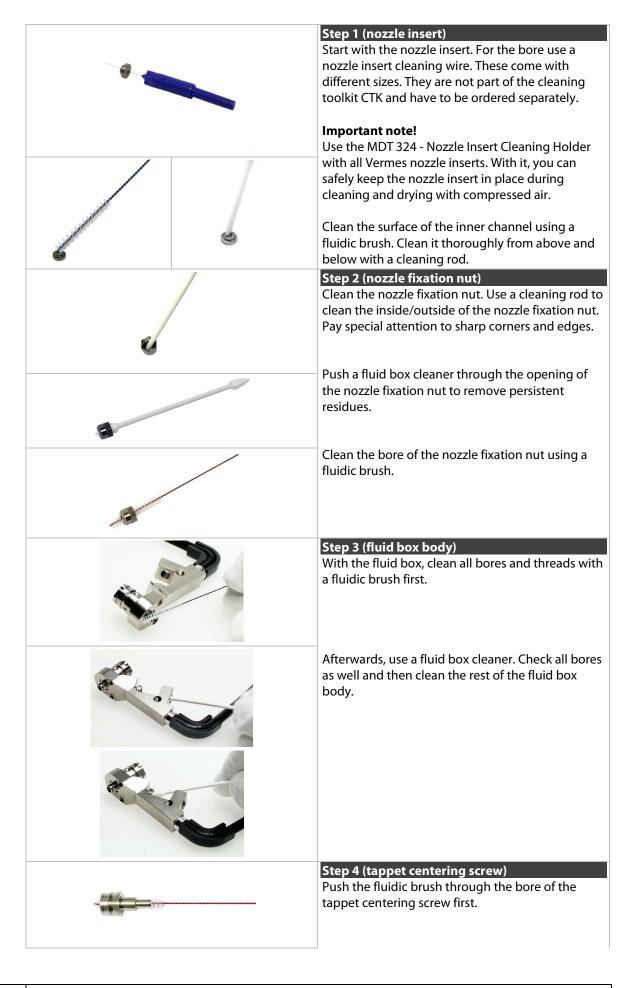

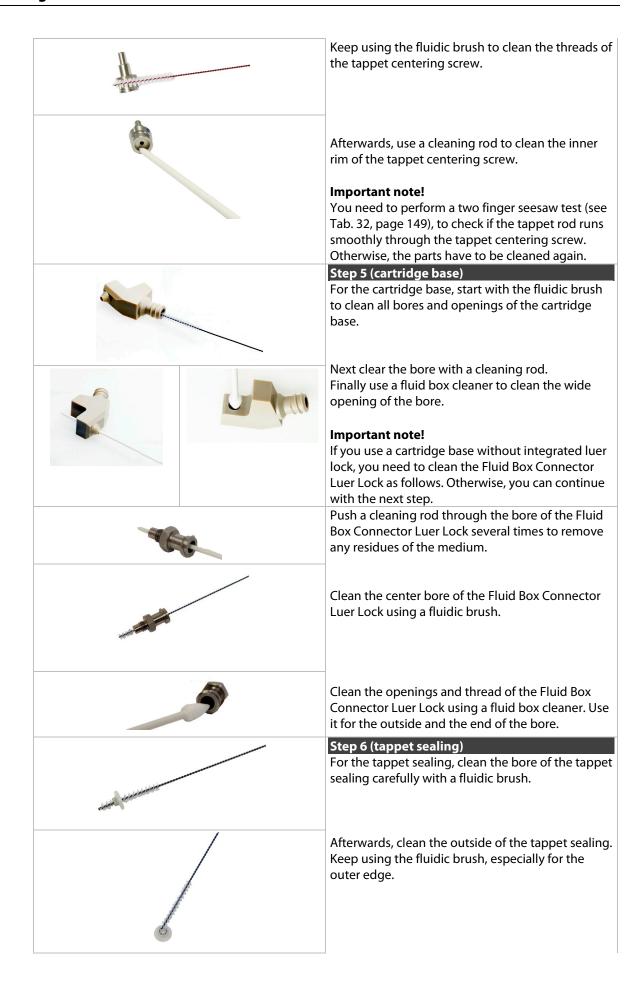





Tab. 31: Clean all components by hand

- Dry all the components in the air or with compressed air. For nozzle inserts we recommend to use the MDT 324 Nozzle Insert Cleaning Holder.
- A two finger seesaw test is necessary to check if the tappet rod runs smoothly through the tappet centering screw. Otherwise, the parts have to be cleaned again.



Step 1:

Push the Tappet Centering Screw BY onto the tappet rod.



Step 2:

Hold the tappet rod with the Tappet Centering Screw BY between index finger and thumb. Swivel the tappet half-circularly between a and b. The Tappet Centering Screw BY must slide smoothly on the tappet rod in between the ends.

Remove the tappet centering screw from the tappet rod after the test.

Tab. 32: Two-Finger-Seesaw-Test

In case you still have parts which are not completely clean after the fine purification, repeat the corresponding cleaning steps for those components several times, if necessary. If that is still not helping, contact our Technical Support.

9.4.5 Assembling of the Fluid Box and the Tappet

Re-assemble the valve and its components as follows.









Unusual (connector BY)

In the exceptional case that you removed the connector BY as well, you have to mount it first. Place the fluid box body on the receptacle of the mounting body. Align the bore on the fluid box body with the bore on the mounting body (see circles). The fluid box body will fit into the mounting body, if the mounting direction is correct.

Push the Connector BY through the mounting body into the bore of the fluid box body. Screw the Connector BY tight (clockwise) by using an MDT 327 (for newer revisions of the Connector BY you can also use a hexagon key 2.5 or the Torque Wrench Tool VM with the Bit Hexagon Key 2.5). Torques are depending on the material of the mounting body (stainless steel 120 – 140 cN.m, PEEK 70 – 80 cN.m).

Important Note!

Do not press the fluid box body while fastening the Connector BY, otherwise, it cannot correctly grip into the fluid box body.

Step 1 (O-ring)

In case that you removed the O-ring, you have to mount it onto the fluid box body.

Pull the O-ring over the fluid box body with a pair of tweezers. Be careful not to damage the O-ring.



Step 2 (tappet sealing)

Use the MDT 328 - Tappet Sealing Changing Tool to press the Tappet Sealing PE/PTFE/HT into the fluid box body until it sits tight. When the tappet sealing sits tight, you will hear a light noise.



Step 3 (tappet centering piece)

Press the tappet centering piece into the fluid box. Use the MDT 328 to make sure the tappet centering piece rests flat on the tappet sealing.

Important note!

When using a 2G tappet rod, do not use a tappet centering piece.



Step 4 (tappet and tappet centering screw)

Screw the Tappet Centering Screw BY into the fluid box. Do not screw it tight yet. Screw it only for two rotations.



Important note!

Before mounting, please place a small droplet of Tappet Grease TF (Order no. 1014637; droplet size ca. 2 mm) on the tappet and another on the tappet spring (for placing see blue arrows in the picture). Make sure that the tappet tip is free of grease. Rotate the tappet and pull it in and out for three times to spread the grease.



Place the tappet spring over the Tappet Centering Screw BY.



Push the tappet rod through the tappet spring into the Tappet Centering Screw BY. Make sure the tappet goes through the tappet sealing.



Screw the Tappet Centering Screw BY completely into the fluid box (torque 100 – 140 cN.m) with MDT 303 - Nozzle Insert Changing Tool.

Make sure the three pins of the MDT 303 fit exactly into the three holes of the Tappet Centering Screw BY. Turn the MDT 303 clockwise while pressing it down slightly to the fluid box.

Combine the MDT 303 with MDT 327 for a better leverage.



Step 5 (nozzle insert)

Clip the nozzle insert into the fluid box. Use the small hole of MDT 327 to press the nozzle insert. Make sure the nozzle insert sits flat.



Step 6 (nozzle fixation nut)

Screw the nozzle fixation nut clockwise onto the fluid box. Use the MDT 327 - Multi-Function Tool (torque 150 – 180 cN.m).



Step 7 (cartridge base)

Place the cartridge base onto the fluid box and fix it with the tightening screw. Screw the tightening screw clockwise with MDT 327 Multi-Function Tool (torque 120 – 140 cN.m).



Important note!

In case you use a cartridge base without integrated luer lock, you need to screw the Fluid Box Connector Luer Lock into the top bore of the cartridge base CH. Use the open-ended wrench at the side of the MDT 327 (hexagon screw size M8, torque stainless steel 100 – 120 cN.m, PEEK 40 – 60 cN.m).



Optional (isolation body

For thermally sensitive applications, you might use an isolation body. Pull it onto the fluid box, until it clips in. Screw it tight with the two screws for the isolation body (torque 40 – 50 cN.m). Use the tool MDT 329.



Step 8 (adjust screw)

Open the adjust screw completely. Screw counter-clockwise. Use the MDT 327 Multi-Function Tool.




Step 9 (fluid box)

Turn the locking lever by 180° from "Close" to "Open" position.

Push the fluid box carefully in a 45° angle onto the valve.



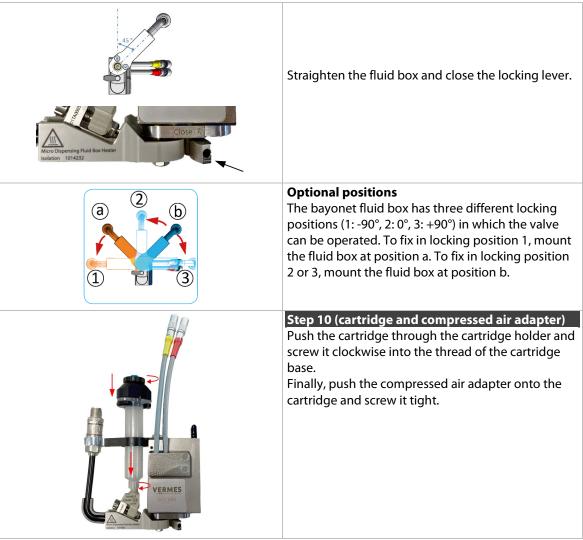

Tab. 33: Assembling of the valve

 Finally, connect the actuator and sensor cables as well as the compressed air. You can find more detailed information in paragraph 6.2, page 48and paragraph 6.3, page 52.



10 Maintenance

10.1 Maintenance Indicator

The integrated function "Cycle Count" relates to the valve as a whole and is predetermined by the manufacturer. As soon as the preset number of cycles is complete (100 %), the red maintenance LED on the control panel is lit. The manufacturer (or an authorized subcontractor) has to be informed at once.

In between, you can inspect the current state. Use the function "Maint. Cycle" in the submenu "Status" (see paragraph 4.5.4, page 34). The result is visualized by eight bars on the screen, each of them representing 12.5 % of the final value. Be aware that the bar is only updated during a start-up of the MDC.

INFORMATION

Suppress maintenance messages

Activation of the red maintenance LED can be suppressed by switching "Maint. Message" in the submenu "Status" to "OFF". This should only be done, if you know your system very well. Otherwise, you might cause damages through missed maintenance dates.

Additional cycle numbers can individually be agreed for tappet and nozzle insert. In factory settings, the value of "Infinite" is assigned to both of the targets. If you wish to check a particular value, proceed as follows, starting from the first menu level:

- $1x \rightarrow -key = Indicates the interval for exchange of the nozzle insert$
- 2x [→]-key = Indicates the interval for exchange of the tappet

To enter a desired final value, you have to use the functions "Set Nozzle" for the nozzle and "Set Tappet" for the tappet. They are located in the submenu "Status". Results are also displayed in the form of 8 bars, each of them representing 12.5 % of the total value. Once 100 % are reached, the red maintenance LED is lit. The corresponding item (nozzle or tappet) has to be exchanged. After the exchange, you have to reset the corresponding counter to "0". Use the functions "Reset Nozzle" or "Reset Tappet" in submenu "Status" (see paragraph 4.5.4, page 34).

10.2 Maintenance of Tappet, Tappet Sealing and Nozzle Insert

As the tappet, the tappet sealing and the nozzle insert belong to the wearing parts of the system, they need to be cleaned and exchanged regularly.

10.2.1 Maintenance of the Tappet

The tappet has to be cleaned and exchanged in regular intervals (at least every 40 million shots) or in the case of problems (as soon as it starts to move in a sluggish way). Please be aware that the lifespan of the tappet not only varies by the material and size, but also depends on your application. Ceramics (CTF, SNTF), tungsten carbide (TTF) and diamond (PDTF) items are available. The tappet consists of the tappet rod and the tappet spring.



Fig. 76: Example - TTF Tappet (consists of tappet rod and tappet spring)

10.2.2 Maintenance of the Tappet Sealing

For replacement of tappet sealings a particular counter is not provided, as the necessity depends on current applications, substances to be dispensed etc. Caused by the tappet movement, some materials tend to penetrate between tappet and tappet sealing, giving rise to abrasion. Therefore, you have to inspect the tappet sealing from time to time. To continue working with a damaged tappet sealing inevitably entails unexpected interruptions, loss of material and an increased need of cleaning. In some cases, even the actuator can be damaged, due to the ingress of liquid.



Fig. 77: Example - Tappet Sealing PE

10.2.3 Maintenance of the Nozzle Insert

The nozzle insert has to be cleaned and exchanged in regular intervals or in the case of problems. Please be aware that the lifespan of the nozzle insert depends on your application. After disassembling the nozzle insert, immediately use a cleaning wire to push through the channel of the nozzle insert, to avoid hardening of residue medium. Do not use a clogged nozzle insert, since it would strongly compromise your dispensing results. Exchange the nozzle insert as soon as it is worn out, since otherwise it can cause a leakage problem.



Fig. 78: Example - Nozzle Insert N11



10.2.4 Exchange of the Tappet, the Tappet Sealing and the Nozzle Insert

For the necessary steps of de-/mounting the tappet/tappet sealing/nozzle insert, please see the chapter about cleaning (see chapter 9, page 136). Before disassembling the system, perform the cleaning procedure explained in the same chapter. There you will also find the necessary information of how to clean the tappet/tappet sealing/nozzle insert.

INFORMATION

Perform the adjust after exchanging parts

Before you start the dispensing process, do not forget to perform the adjust after each exchange or remounting of the nozzle fixation nut. For details of the adjust process, see paragraph 6.5, page 60.

11 Error Messages

The following pages list all the error messages you could encounter when using this system. The table in paragraph 11.1, page 157 will give you a quick overview. In paragraph 11.2, page 158 every error message is explained in detail.

In case of an error, an error message is shown in the display and the red attention LED is switched "ON". This information can also be obtained via pin 13 of the PLC interface (see paragraph 8.2 "PLC-Interface: 15-pin, Sub-D", page 127). Press **[enter]** to clear the display. If this does not work, switch "OFF" the control unit. Check the system for potential problems (e.g. loose cables) and restart the system.

If the error still occurs, please contact the Technical Support at VERMES Microdispensing or your local supplier (see Page 7).

INFORMATION

Storing error messages

After the re-start, the error message can only be found in the submenu "Error" paragraph 4.5.4, page 34.

INFORMATION

Valve status depending on error

If the valve is open or closed after an error message, depends on the respective error. In paragraph 11.2, page 158 it is mentioned for each error.

11.1 Table of Error Messages

The following table lists all error messages with their error code and when they might appear.

Error Code	Error Message	Related to	When?
101	101 wrong valve	Valve	Start-up
102	102 wrong piezo type	Valve	Start-up
104	104 sensor communication error	Valve	Operation
190	190 incorrect valve data	Valve	Start-up, Operation
191	191 nozzle/tappet error > enter	Valve	Start-up, Operation
199	199 valve error escape for auxi.	Valve	Start-up
301	301 no valve present error	Valve	Start-up
302	302 actuator connection error	Valve	Operation
303	303 adjust error press enter	MDC	HW adjust
501 / -	501 valve defect error	Valve	Start-up, Operation
	or		
	maintenance needed		
502	502 MDV temp.high please wait	Valve	Start-up, Operation
601	601 USART buffer overflow	RS-232C	Operation
701	701 valve driver defect	MDC	Start-up, Operation
702	702 WD timeout press enter	MDC	Start-up, Operation
703	703 RS powsupply press enter	MDC	Start-up, Operation
810	810 communication error	MDC	Start-up, Operation
820	820 incorrect heater data	Heater	Start-up, Operation
830	830 wrong heater	Heater	Operation
835	835 heating temp out of range	Heater	Operation
838	838 heater time out	Heater	Operation
840	840 heater unplugged	Heater	Operation
850	850 MDC not calibrated!	MDC	Start-up
855	855 incorrect bus data	MDC	Operation
860	860 incorrect cooler data	MDC	Operation
870	870 wrong cooler	Cooling	Start-up, Operation
875	875 cooler wrong PT100-signal	MDC	Start-up, Operation
880	880 cooler unplugged	Cooling	Operation
890	890 cooler not calibrated	Cooling	Start-up, Operation
901	901 RAM-data error press enter	MDC Data	Start-up, Operation
902	902 EEPROM not formatted > enter	MDC Data	Start-up, Operation
903	903 EEPROM write error > enter	MDC Data	Operation
904	904 setup save error > enter	MDC Data	Operation
905	905 setup load error > enter	MDC Data	Operation
999	999 error in errorlist	MDC Data	Operation

11.2 Explanations of Error Messages

101	101 Incorr. Valve	
	data of valve and control unit. If	s during startup of the system. The control unit checks the the control unit does not recognize the valve resp. the ow viscosity valve), the error message is displayed.
	Error code display:	101 Incorr. Valve
	Error code status menu:	101 Incorr. Valve
	Error handling:	The sensor connection has not been plugged in correctly. Switch OFF control unit, and inspect the connection. If the cable is damaged, it must be exchanged before restarting.
		Maybe an inadequate valve type has been installed.
		Check MDC (if possible, test system with another MDC
		Send MDC and/or valve to VERMES Microdispensing or to your supplier
	Valve:	Valve still open (start-up of the MDC)

102	102 Incorrect Piezo Type	
	The piezoelectric element does not match the current application (Valve Passport). This error message appears with the start-up of the control unit.	
	Error code display:	102 Incorrect Piezo Type
	Error code status menu:	102 Incorrect Piezo Type
	Error handling:	The sensor connection has not been plugged in correctly. Switch OFF control unit, and inspect the connection. If the cable is damaged, it must be exchanged before restarting.
		Exchange valve
	Valve:	Valve still open (start-up of the MDC)

104 Sensor Communication Error

This error message appears, when there is a problem with the sensor cable. If cooling is activated, it will be deactivated by error 104. If a heater is activated, it will **not** be deactivated by error 104.

Important Note!

This error message can also appear, when the MDC is connected to an MFC 3000 for cooling a valve, and you switched ON the MDC too early.

When using an MFC for cooling, you always have to keep this order of steps:

- 1. Switch ON MFC
- 2. Switch ON the channel used for cooling at the MFC
- 3. Switch ON MDC

Error code display:	104 Sensor Communication Error
Error code status menu:	104 Sensor Communication Error
Error handling:	The sensor connection has not been plugged in correctly. Switch OFF control unit, and inspect the connection. If the cable is damaged, it must be exchanged before restarting.
	Exchange valve
Valve:	Valve is closed

158 VTK-TR-BA-173e-1 - User Manual MDS 3581-V	ļ
---	---



190	190 Incorrect Valve Data	
	This error message appears, if a checksum error occurs while writing the Cycle Counter.	
	Important Note!	
	The most common cause for this before the MDC has completely s	error is to unplug the valve before switching OFF the MDC or shut down.
	Error code display:	190 Incorrect Valve Data (Press Enter)
	Error code status menu:	No entry
	Error handling:	Press [enter]-key to acknowledge error message.
		If error happens repeatedly, switch OFF control unit, and inspect the connection. If necessary, exchange the cable and/or valve.
	Valve:	Valve remains unchanged. If the error message appears during the start of the MDC, the valve is open; otherwise, it is closed.

191	191 NozzleTappet Load Err.	
	counter). If a problem arises, thi	nit, the system reads the counters (e.g. nozzle counter, tappet s error message is displayed. The problem might also appear changing the values. Corresponding values may be doubtful,
	Error code display:	191 NozzleTappet Load Err Enter.
	Error code status menu:	No entry
	Error handling:	 Press [enter]-key to acknowledge error message. Re-start the MDC.
		 In case the error acknowledgement does not work, the valve might be defect. If possible, test valve with different MDC and MDC with different valve. If the valve is defect, send it in for repair.
	Valve:	Valve is open



199 199 Valve Error

General valve data error (Sensor connection). When the checksum of the valve EEPROM is compared to software data during startup, mismatch is notified by this message. This error message appears with the start-up of the MDC.

At this point, you have the opportunity to switch to Auxiliary Mode.

Important Note!

This error message can also appear, when the MDC is connected to an MFC 3000 for cooling a valve, and you switched ON the MDC too early.

When using an MFC for cooling, you always have to keep this order of steps:

- 1. Switch ON MFC
- 2. Switch ON the channel used for cooling at the MFC
- 3. Switch ON MDC

Error code display: Error code status menu:	199 Valve Error Escape for Auxi. 199 Valve Error
Error handling:	 The sensor connection has not been plugged in correctly. Switch OFF MDC and inspect the sensor cable and its connection.
	Send valve to VERMES Microdispensing or to your supplier
Valve:	Valve still open (start-up of the MDC)



301	301 No Valve Present Error	
	The control unit does not recognize the valve during startup.	
	Error code display:	301 No Valve Present Error
	Error code status menu:	301 No Valve Present Error
	Error handling:	The actuator connection has not been plugged in correctly. Switch OFF MDC and inspect the actuator cable and its connection. If the actuator cable is damaged, it must be exchanged before restarting.
		Check MDC
		Send valve and/or MDC to VERMES Microdispensing or to your supplier
	Valve:	Valve still open (start-up of the MDC)

302	302 Actuator Connection Error	•
	With system in operation, the connection between valve (actuator) and MDC is disrupted.	
	If a heater is activated, it will be deactivated by error 302. If cooling is activated, it will not be deactivated by error 302.	
	Error code display:	302 Actuator Connection Error
	Error code status menu:	302 Actuator Connection Error
	Error handling:	The actuator connection has not been plugged in correctly. Switch OFF MDC and inspect the actuator cable and its connection. If the actuator cable is damaged, it must be exchanged before restarting.
		Check MDC
		Send valve to VERMES Microdispensing or to your supplier
	Valve:	Valve is open

303	303 adjust error	
	This error can happen during ope	eration. During the adjust a problem affects the calibration.
	Error code display:	303 adjust error press enter
	Error code status menu:	303 adjust error
	Error handling:	Switch OFF MDC, switch it back ON and try again.
		If possible, check MDC with a different valve, to see, if the adjust works there
		If possible, check valve with a different MDC, to see, if the adjust works there
		Send valve and/or MDC to VERMES Microdispensing or to your supplier
	Valve:	Valve is closed



501	501 Valve Defect Error	
	The valve fails during operation,	e.g. due to a damaged piezoelectric element.
	Important note!	
		aintenance is needed (according to warranty and essage "Maintenance needed" is shown in the display.
	Error code display:	501 Valve Defect Error
		or
		Maintenance needed
	Error code status menu:	501 Valve Defect Error
	Error handling:	Switch off the MDC, remove the valve and send it to VERMES Microdispensing or to your supplier (regular maintenance is advisable)
	Valve:	Valve is open



502 502 MDV TempHigh

Automatic shut-down because of high temperature

In order to protect the piezoelectric element from excessive heat, the temperature is internally monitored by a corresponding circuit. This is automatically switching OFF the system in case of need. As the needle lift has a big impact on the condition of the piezo, the temperature limit is depended on the needle lift as well.

Limits::


 $NL \le 80 \% = 140 \,^{\circ}C$

NL $> 80 \% = 120 \degree C$ (from 81 % - 100 % the temperature is variable at ca. $140 \degree C - 120 \degree C$)

Once the temperature has fallen below 80 °C, the display changes from "502 MDV TempHigh Please Wait" to "502 MDV TempHigh Press Enter". After pressing the **[enter]** key, you can again trigger normally. During the display of "502 MDV TempHigh" the valve is closed. If the error message happens directly after starting the MDC, pressing **[enter]** will initiate a restart.

If a heater is activated, it will be deactivated by error 502. If cooling is activated, it will **not** be deactivated by error 502.

In certain circumstances, it can happen that in this phase an error "501 Valve Defect Error" is detected. In this case, both errors are shown in the display of the MDC (see picture below). Follow the instructions regarding error 501.

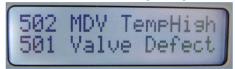

Important Note!

This error message can also appear, when the MDC is connected to an MFC 3000 for cooling a valve, and you switched ON the MDC too early.

When using an MFC for cooling, you always have to keep this order of steps:

- 1. Switch ON MFC
- 2. Switch ON the channel used for cooling at the MFC
- 3. Switch ON MDC

Error code display:	502 MDV TempHigh Please Wait
Error code status menu:	502 MDV TempHigh
Error handling:	The temperature of the valve is too high. System has to cool off, then press [enter]. Maybe you have to lower the Needle Lift and/or frequency parameters, in order to prevent a re-occurrence of the problem. In case of an air cooled valve, you need to increase the air flow.
	Switch OFF control unit, and inspect the sensor and actuator cables and their connections. If a cable is damaged, it must be exchanged before restarting.
	If your dispensing application includes the use of an MFC and a flow control valve FCV, make sure the channel for cooling in the MFC is switched "ON", before you start the MDC (see also User Manual MFC 3000, chapter 5.9.3)
Valve:	Valve is closed



601	601 USART Buffer Overflow	
This problem sometimes occurs during data transmission via serial interface and the MDC is unable to handle more inflowing data. The message "601 L		more inflowing data. The message "601 USART Buffer
	Overflow" is returned via serial in	terface. LEDs are not lit.
	Error code display: No error message	
	Error code status menu:	601 USART Buffer Overflow
	Error message monitor: 601 USART Buffer Overflow	
	Error handling: • Interrupt data transmission	
Send data again		Send data again
	Valve:	Valve remains unchanged.

701 Valve Driver Defect	
A hardware failure of the valve control is probable (e.g. short circuit in the connection of the piezoelectric element). This problem is possible during startup of the MDC and also with system in operation.	
Error code display:	701 Valve Driver Defect
Error code status menu:	701 Valve Driver Defect
Error handling:	Switch OFF the MDC immediately. Inspect the actuator cable connection. Worn, kinked or charred cables must be exchanged.
	The MDC must be returned to the manufacturer. The valve has to be checked (if that is not possible, it has to be send as well).
Valve:	Valve is open


702	702 Watchdog TimeOut	
	Abnormal end (crash) of the MDC.	
	Information!	
	If a cooler or a heater was turned system.	d on before, it will be turned on again after the boot-up of the
	Error code display:	702 Watchdog TimeOut pr. Enter
	Error code status menu:	702 Watchdog TimeOut
	Error handling:	Press [enter]-key to acknowledge error message. The MDC restarts automatically.
	Valve:	Valve still open (start-up of the MDC)



703 703 RS Power Supply

This error message appears, if a problem with the power supply forces a re-start of the system. If this happens more than once, you need to change your dispensing parameters, since your current settings use too much power over time.

In certain circumstances, it can happen that in this phase an error "501 Valve Defect Error" is detected. In this case, both errors are shown in the display of the MDC (see picture below). Follow the instructions regarding error 501.

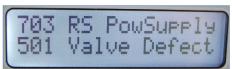

Error code display:	703 RS Power Supply pr. Enter
Error code status menu:	703 RS Power Supply
Error handling:	Press [enter]-key to acknowledge error message.
	 Lower the dispensing frequency, since your current settings need too much power.
Valve:	Valve still open (start-up of the MDC)

810	810 communication error	
	There is an error with the interna	al communication.
	Error code display:	810 communication error
	Error code status menu:	810 communication error
	Error handling:	 Press [enter] key to acknowledge the error message. Heater and cooler status will be switched "OFF" in the submenu "Heater/Cooler".
		For further information, contact the Technical Support (see Page 7).
	Valve:	Valve is closed

820	820 incorrect heater data	
	The heater has incorrect data.	
	Error code display:	820 incorrect heater data
	Error code status menu:	820 incorrect heater data
	Error handling:	 Press [enter] key to acknowledge the error message. Heater status will be switched "OFF" in the submenu "Heater".
		For further information, contact the Technical Support (see Page 7).
	Valve:	Valve is closed

830 Wrong heater		
	The MDC cannot read the data from the heater correctly. Either the heater is defect or the	
heater cable. Error code display: 830 wrong heater		
		830 wrong heater
	Error code status menu:	830 wrong heater



Error handling:	 Press [enter] key to acknowledge the error message. Heater status will be switched "OFF" in the submenu "Heater".
	Change the heater cable and try again.
	For further information, contact the Technical Support (see Page 7).
Valve:	Valve is closed

835 heating temp out of range	
This error appears, if the temperatures suddenly moves very high or low, while the heater is in its steady state phase.	
Error code display:	835 heating temp out of range
Error code status menu:	835 heating temp out of range
Error handling:	 Press [enter] key to acknowledge the error message. Heater status will be switched "OFF" in the submenu "Heater".
	Check all settings and connections (if necessary, exchange defect cable) and try again.
	For further information, contact the Technical Support (see Page 7).
Valve:	Valve is closed

838 838 heater time out

This error appears, if the heater is active, but is not able to reach the target temperature in the usual time.

This error can have two different causes.

- The heater does not reach the target temperature, because of some set-up problem (e.g. a cable is not connected correctly).
- The valve itself creates too much heat, especially in a high-frequency or heavy-load application. Therefore, the current temperature is above the target temperature. You need to reduce the cooler set temperature.

to reduce the cooler set temperature.	
Error code display:	838 heater time out
Error code status menu:	838 heater time out
Error handling:	 Press [enter] key to acknowledge the error message. Heater status will be switched "OFF" in the submenu "Heater".
	 Check all settings and connections (if necessary, exchange defect cable) and try again.
	For further information, contact the Technical Support (see Page 7).
Valve:	Valve is closed

	840 heater unplugged	
Is the heater not connected, although the heater is activated in the submenu "He error message "840 heater unplugged" appears. The display then switches betwe message and the message "Press enter".		gged" appears. The display then switches between this
	Error code display:	840 heater unplugged
	Error code status menu:	840 heater unplugged



Error handling:	 Press [enter] key to acknowledge the error message. Heater status will be switched "OFF" in the submenu "Heater". Connect the heater.
Valve:	Valve is closed

850	850 MDC not calibrated!	
	The error message "850 not calibrated! pr. Enter" appears, if the calibration values of the heater are incorrect at the start-up of the MDC. The values will be overwritten with the factory settings. There will be no entry in the error list.	
	Error code display:	850 MDC not calibrated!
	Error code status menu:	No entry
	Error handling:	Press [enter] key to acknowledge the error message. If no heater or cooling are needed, you can keep working without calibration.
		For further information, contact the Technical Support (see Page 7).
	Valve:	Valve is closed

855	855 incorrect bus data	
	There is a problem with the internal communication. The transfer of data between MDC and heater or cooling is interrupted.	
	Error code display:	855 incorrect bus data
	Error code status menu:	855 incorrect bus data
	Error handling:	 Press [enter] key to acknowledge the error message. Heater status will be switched "OFF" in the submenu "Heater".
		• For further information, contact the Technical Support (see Page 7).
	Valve:	Valve is closed

860	860 incorrect cooler data	
	There is an error with the internal communication. The communication between MDC and cooling is interrupted.	
	Error code display:	860 incorrect cooler data
	Error code status menu:	860 incorrect cooler data
	Error handling:	 Press [enter] key to acknowledge the error message. Cooling status will be switched "OFF" in the submenu "Cooler".
		• For further information, contact the Technical Support (see Page 7).
	Valve:	Valve is closed

870	870 wrong cooler	
The MDC cannot read the data from the cooling valve correctly. Either the coolin defect or the connection cable.		om the cooling valve correctly. Either the cooling valve is
	Error code display:	870 wrong cooler
	Error code status menu:	870 wrong cooler



Error handling:	 Press [enter] key to acknowledge the error message. Cooling status will be switched "OFF" in the submenu "Cooler". Change the connection cable and try again.
	 For further information, contact the Technical Support (see Page 7).
Valve:	Valve is closed

875	875 wrong cooler PT100-signal	
	The MDC receives an incorrect PT100 signal.	
	Error code display:	875 wrong cooler PT100-signal
	Error code status menu:	875 wrong cooler PT100-signal
	Error handling:	Press [enter] key to acknowledge the error message. Cooling status will be switched "OFF" in the submenu "Cooler".
		For further information, contact the Technical Support (see Page 7).
	Valve:	Valve is closed

880	880 cooler unplugged	
	Is the cooling valve not connected, although the cooling valve is activated in the submenu "Cooler", the error message "880 cooler unplugged" appears.	
	Error code display:	880 cooler unplugged
	Error code status menu:	880 cooler unplugged
	Error handling:	Press [enter] key to acknowledge the error message. Cooling status will be switched "OFF" in the submenu "Cooler".
		Connect the cooling valve.
	Valve:	Valve is closed

890	890 cooler not calibrated	
	This error appears in case the connected cooling valve is not calibrated.	
	Error code display:	890 cooler not calibrated
	Error code status menu:	890 cooler not calibrated
	Error handling:	 Press [enter] key to acknowledge the error message. Cooling status will be switched "OFF" in the submenu "Cooler".
		Calibrate the cooling valve.
		• For further information, contact the Technical Support (see Page 7).
	Valve:	Valve is closed

901	901 RAM Data Error	
	During the check of RAM data, a problem arises. The message has to be acknowledged by the [enter] -key. The system reformats the EEPROM, replacing current values with the factory settings.	
	Error code display:	901 RAM Data Error pr. Enter
	Error code status menu:	901 RAM Data Error



Error handling:	 Press [enter]-key to acknowledge error message. Reenter the working configuration.
Valve:	Valve remains unchanged. If the error message appears
	during the start of the MDC, the valve is open, otherwise it is closed.

902	902 EEPROM not formatted	
	A corrupted memory area becomes obvious when reading the EEPROM.	
	Error code display:	902 EEPROM not formatted Enter
	Error code status menu:	902 EEPROM not Formatted
	Error handling:	Press [enter]-key to acknowledge error message – the factory settings will be loaded
		You have to reenter your dispensing parameters
		In case the error appears again, send the MDC to VERMES Microdispensing or to your supplier
	Valve:	Valve remains unchanged. If the error message appears during the start of the MDC, the valve is open, otherwise it is closed.

903	903 EEPROM Write Error			
	The problem can occur when writing data to the EEPROM.			
	Error code display:	903 EEPROM Write Error pr. Enter		
	Error code status menu:	903 EEPROM Write Error		
	Error handling:	Press [enter] key to acknowledge error message.		
		If the problem arises when modifying program parameters, the new values are not saved in the EEPROM. After restart of the MDC, the former values of the EEPROM will be loaded.		
		In case the error appears again, send the MDC to VERMES Microdispensing or to your supplier		
	Valve:	Valve remains unchanged. If the error message appears during the start of the MDC, the valve is open, otherwise it is closed.		

904	904 Setup Save Error				
	The storing procedure for a setup, initiated by [save] key, fails.				
	Error code display:	904 Setup Save Error pr. Enter			
	Error code status menu:	904 Setup Save Error			
	Error handling:	 Press [enter] key to acknowledge error message. After restart of the MDC, the factory settings will not be loaded. 			
		You have to reenter your dispensing parameters.			
		 In case the error appears again, send the MDC to VERMES Microdispensing or to your supplier. 			
	Valve:	Valve is closed			

905	905 Setup Load Error
	This problem may arise during the retrieval of a setup by [recall] key.



Error code display:	905 Setup Load Error pr. Enter
Error code status menu:	905 Setup Load Error
Error handling:	Press [enter] key to acknowledge error message
	Repeat the procedure. If the problem persists, you have to enter new data to the corresponding memory position.
	 In case the error appears again, send the MDC to VERMES Microdispensing or to your supplier
Valve:	Valve remains unchanged. If the error message appears during the start of the MDC, the valve is open, otherwise it is closed.

999	999 Error in Errorlist				
	The problem cannot be assigned to any other error code from the list. This error only appears while browsing through the error list in the status menu.				
	Error code display:	999 Error in Errorlist			
	Error code status menu: 999 Error in Errorlist				
	Error handling:	Move on in the error list or leave the submenu "Error".			
	Valve:	Valve is closed			



11.3 Status Messages

The following table lists all the status messages you could encounter when using this system (see Tab. 34). Status messages can appear while you plug IN or OUT a heater or a cooling valve, as well as in connection with the calibration of a heater (see paragraph 7.13.2, page 83).

INFORMATION

Status messages are not stored

Status messages disappear after approx. 2 s from the display. They are not saved. A special case is a calibration gone wrong. Then you get three times in a row the alternating messages "Wrong calibration" and "Please try again!", separated by approx. 1.5 s.

Status message	Concerns	Notes
Cooler connected	Cooling	Cooling valve connected successfully
Cooler could not be activated	Cooling	Cooling valve could not be activated (e.g. because the flow control valve is not connected correctly or because the wrong device is connected)
Cooler is disconnected	Cooling	Cooling valve was disconnected during operation
Heater connected	Heater	Heater connected successfully
Heater could not be activated	Heater	Heater could not be activated (e.g. because the heater is not connected correctly or because the wrong device is connected)
Heater is disconnected	Heater	Heater was disconnected during operation
Please try again!	Calibration	Calibration was not finished successfully (e.g. because calibrator was connected twice). Please try again.
Wrong calibration	Calibration	Calibration of the heater (or of heater and cooling) not correct

Tab. 34: List of status messages

12 Transport, Storage and Disposal

12.1 Transport

For shipment, the system is packed in an appropriate case. Preserve it for further transport procedures in the future. The necessity can never be excluded, e.g. for purposes of maintenance. Observe the following measures.

- If the original packaging is no longer available, select a suitable material for the package.
- Pack in a way that protects the delivery against shock and vibrations.
- Fill empty spaces with appropriate material (e.g. paper, insulating air cushion, Styrofoam).
- Decontaminate the system completely before shipping it.
- Fill out the corresponding form completely (see paragraph 14.8, page 190). Attach it, clearly visible, at the exterior of the package.

A CAUTION

Decontamination

The customer is liable for all consequences resulting from insufficient decontamination of the system (health of transport personnel)!

12.2 Storage


The environmental conditions in the room intended for storage should fulfill the requirements of the system.

Observe the following storage conditions.

- The room should be sufficiently ventilated and free of dust
- Admissible temperature: Between +5 °C and +30 °C
- Rel. humidity < 50 %
- The system should not be stored together with fuel, solvents, lubricants, acids and other
 chemicals able to develop vapors, which may aggress to the surface of the components.

Air-tight foil sheathing with included desiccants may be useful.

12.3 Recycling and Disposal

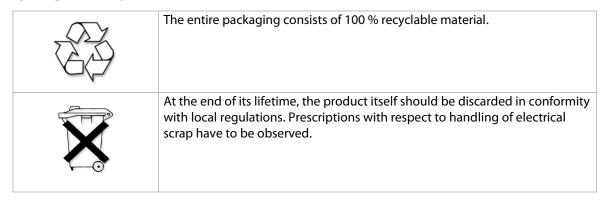



13 Spare Parts and Tools

Here are some of the most important spare and extra parts as well as tools. For the latest and complete list, please check our homepage at www.vermes.com.

13.1 Nozzle Fixation Nuts



Tab. 35: Nozzle Fixation Nuts

13.2 Tappets

Tappet rod CTF	Tappet rod TTF	Tappet rod SNTF		
CTF 4 Order no. 1013126 CTF 7 Order no. 1013125 CTF10 Order no. 1013124 CTF15 Order no. 1012884	TTF 4 Order no. 1012892 TTF 7 Order no. 1012891 TTF10 Order no. 1012890 TTF15 Order no. 1012889 TTF20 Order no. 1013185 TTF23.5 Order no. 1015125 TTF30 Order no. 1016497	SNTF 4 Order no. 1014240 SNTF 7 Order no. 1014243 SNTF10 Order no. 1014244 SNTF15 Order no. 1014245 SNTF23.5 Order no. 1015752		
Tappet rod 2G CTF	Tappet rod 2G TTF	Tappet rod 2G SNTF		
2G CTF 4 Order no. 1015241 2G CTF 7 Order no. 1015242 2G CTF10 Order no. 1015243 2G CTF15 Order no. 1015244	2G TTF 4 Order no. 1015235 2G TTF 7 Order no. 1015236 2G TTF10 Order no. 1015218 2G TTF15 Order no. 1015217	2G SNTF 4 Order no. 1015253 2G SNTF 7 Order no. 1015254 2G SNTF10 Order no. 1015255 2G SNTF15 Order no. 1015256		
Tappet rod 2G CTF + 10 mm	Tappet rod 2G TTF + 10 mm	Tappet rod 2G SNTF + 10 mm		
2G CTF 4 +10 mm Order no. 1015644 2G CTF 7 +10 mm Order no. 1015645 2G CTF 10 +10 mm Order no. 1015646 2G CTF 15 +10 mm Order no. 1015647 (only compatible with 1015316)	2G TTF 4 +10 mm Order no. 1015639 2G TTF 7 +10 mm Order no. 1015640 2G TTF 10 +10 mm Order no. 1015641 2G TTF 15 +10 mm Order no. 1015642 (only compatible with 1015316)	2G SNTF 4 +10 mm Order no. 1015648 2G SNTF 7 +10 mm Order no. 1015649 2G SNTF 10 +10 mm Order no. 1015650 2G SNTF 15 +10 mm Order no. 1015651 (only compatible with 1015316)		
Boood				
Tappet spring	Tappet centering screw BY	Tappet Grease TF		
TF-PR Order no. 1014620 SN Order no. 1017165	BY (stainless steel) Order no. 1014228 HM-BY (carbide) Order no. 1014679 23.5 BY Order no. 1014709 2G BY Order no. 1015221	1 ml Order no. 1014637 10 ml Order no. 1014636 310 ml Order no. 1014635		




Tappet centering screw 2G BY +10 mm	
Order no. 1015316	

Tab. 36: Tappets



13.3 Sealings

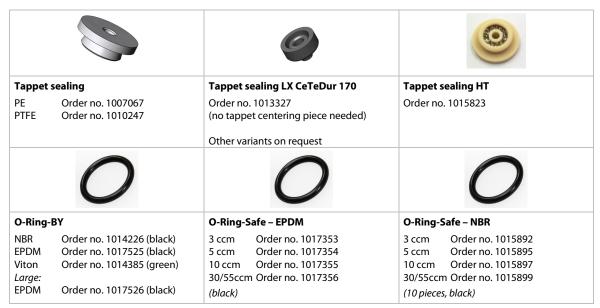

Tab. 37: Sealings

13.4 Supply Unit







Tab. 38: Supply unit



13.5 Heaters and Heater Controllers



Tab. 39: Heaters and Heater Controllers

13.6 Cleaning Tools



Tab. 40: Cleaning Tools



13.7 Tools



Tab. 41: Tools



13.8 Nozzle Inserts





N34-100 Order no.: 1015231		
N34-120 Order no.: 1015454		
N34-150 Order no.: 1015455		
N34-200 Order no.: 1015230		
N34-250 Order no.: 1015456		
N34-300 Order no.: 1015228		
N34-350 Order no.: 1015696		
N34-400 Order no.: 1015229		
Nozzle Insert N80	Nozzle Insert N85	Nozzle Insert N90
N80-100 Order no.: 1016693	N85- 70 Order no.: 1016976	N90- 70 Order no.: 1017271
100-100 Order 110 1010093	N85-150 Order no.: 1017444	1090-70 Older 110 1017271
Nozzle Insert N92		
N92-100 Order no.: 1017315		_
Nozzle Insert J01	Nozzle Insert J02	Nozzle Insert J03
J01-100 Order no.: 1011463	J02-50 Order no.: 1013032	J03- 200 Order no.: 1012885
J01-120 Order no.: 1012997	J02-70 Order no.: 1012878	
J01-150 Order no.: 1013016		
J01-200 Order no.: 1012863		
J01-300 Order no.: 1014838		
J01-400 Order no.: 1012883		
Nozzle Insert J04	Nozzle Insert J17	Nozzle Insert J28
Nozzle Insert J04 J04-200 Order no.: 1012936	Nozzle Insert J17 J17-100 Order no.: 1014340	Nozzle Insert J28 J28- 150 Order no.: 1016936
J04-200 Order no.: 1012936		
J04-200 Order no.: 1012936 J04-300 Order no.: 1015149		

Tab. 42: Nozzle Inserts

13.9 Other Parts

		}		6	
Flow Control Valve FCV		Connection Cable for FCV M12 MDC		Heater	Cable 48 V
FCV-AC 3.5 M12 FCV-AC 6.0 M12	Order no. 1016480 Order no. 1016265	2 m	Order no. 1016252 Order no. 1017052	2 m	Order no. 1014064 Order no. 1013970
FCV-AC 6.0 M12 FCV-HF 7.0 M12	Order no. 1016266	5 m	Order no. 1017052 Order no. 1017154	5 m	Order no. 1013970 Order no. 1014033
		10 m	Order no. 1017053	7 m	Order no. 1014008
		15 m	Order no. 1017133	10 m	Order no. 1014188

Tab. 43: Other Parts

180	VTK-TR-BA-173e-1 - User Manual MDS 3581-V



14 Attachments

14.1 EU Declaration of Conformity

EU Declaration of Conformity

VERMES

EU Declaration of Conformity according to European directives In Accordance with DIN EN ISO/IEC 17050-1:2018-08

Company Name:

VERMES Microdispensing GmbH

Address:

Rudolf-Diesel-Ring 2 83607 Holzkirchen

Product Name:

Microdispensing Systems (MDS 3581-V Series)

Model Number:

System	Control Unit	Valve	
MDS 3581-V	MDC 3500-V	MDV 3581-V	

We declare that these products are specified to the relevant EC Guidelines.

The Conformity is approved by the following guidelines and harmonized

standards:

Directive 2014/30/EU

Electromagnetic Compatibility Directive

EMC)

Directive 2011/65/EU (with EU 2015/863)

Restriction of Hazardous Substances (RoHS 2) (with amendment)

EN 61326-1 EN 55011

EN 61000-3-2 EN 61000-3-3 EN 61000-6-2 EN 61010-1

fol Eqir Sx 15/14/25
Place and date of issue

Stefan Hirte Managing Director

VTK-GF-VT-079e-1

1/1

9: EU Declaration of Conformity

14.2 Dimensional Drawing MDC 3500-V

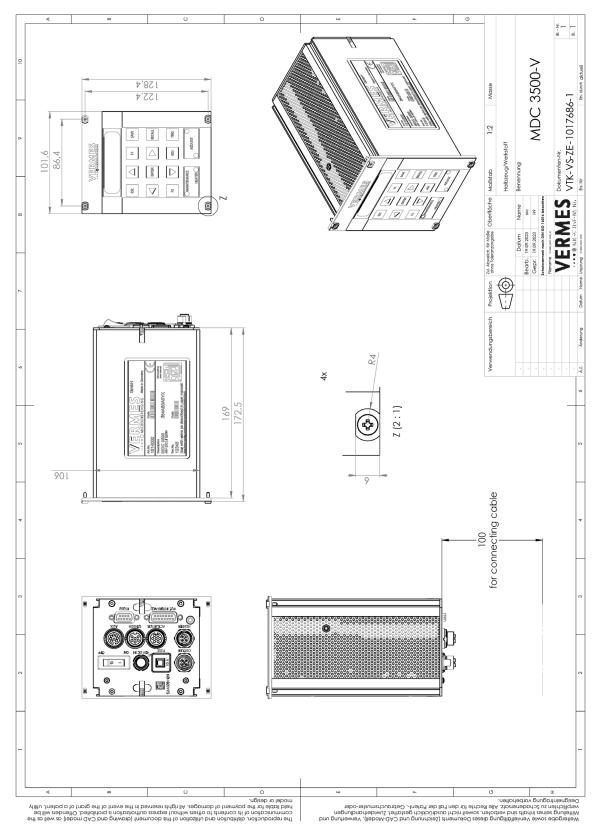


Fig. 80: Dimensional Drawing MDC 3500-V

14.3 Dimensional Drawing MDV 3581-V

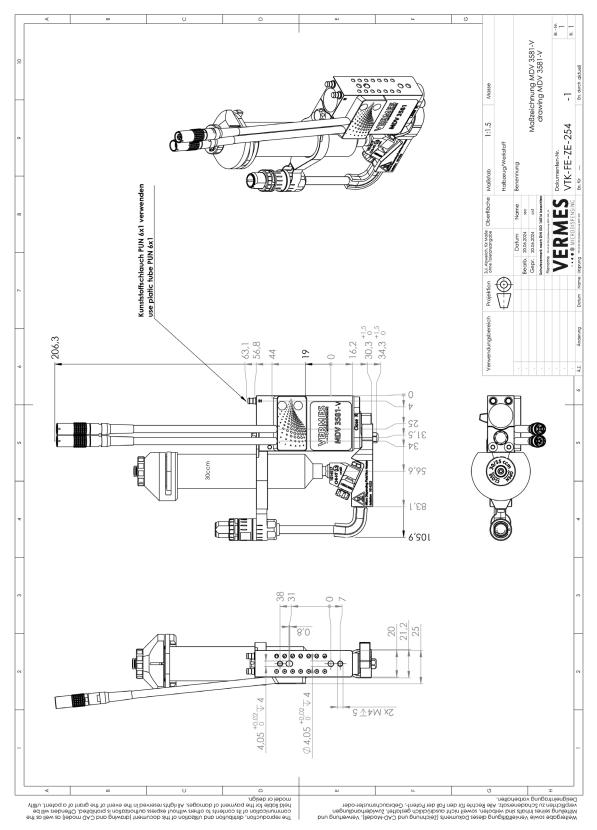


Fig. 81: Dimensional Drawing MDV 3581-V

14.4 Connection Diagram PLC-interface


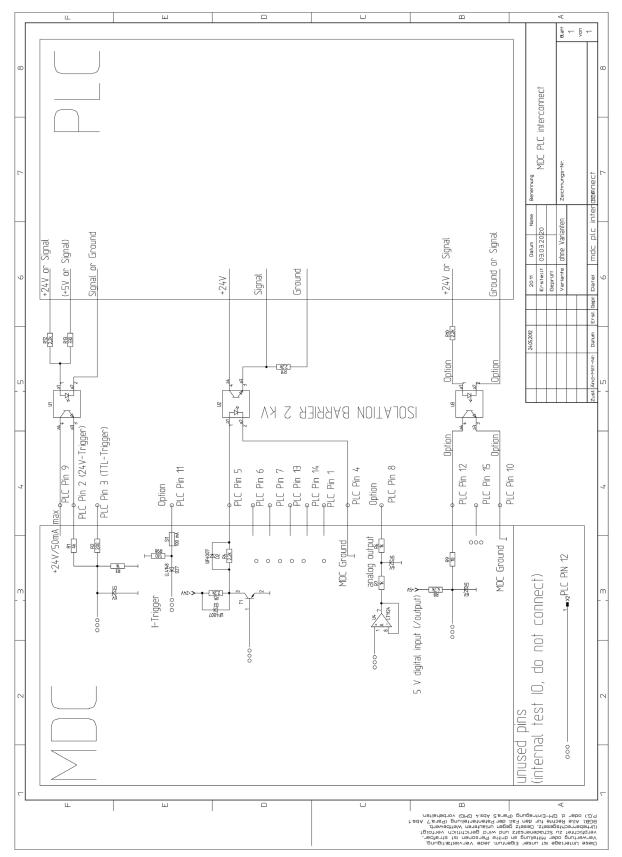


Fig. 82: Connection Diagram PLC-interface



14.5 Overview of the MDC Menu

For a more detailed description of the menus and submenus, see paragraph 4.5, page 27.

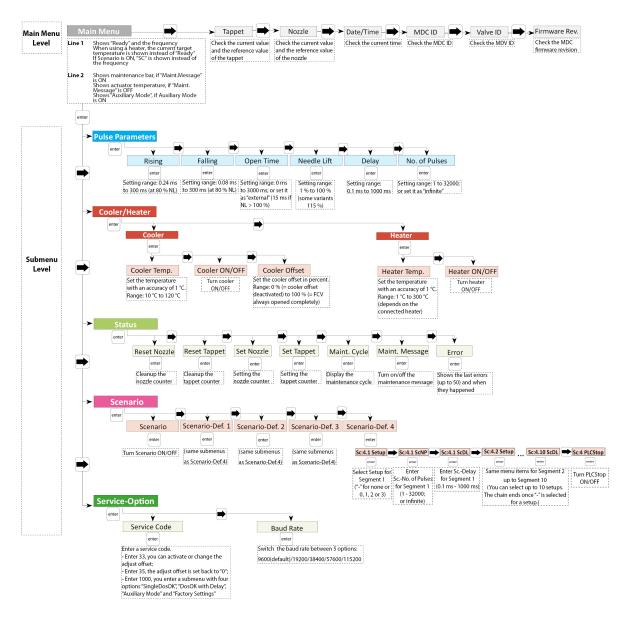

- Press [enter]-key or []]-key in the main menu level, you enter the submenu level that starts with the submenu "Pulse Parameters".

 Press [enter]-key or []]-key in any submenu, you reach the submenu items.

 At each submenu item, press [enter]-key or []]-key to reach the page where you can change the settings.

 Use arrow keys to change the value or switch between optional settings.

 Confirm the change with [enter]-key. Quit the change with [esc]-key (MDC returns to the respective menu item).

- Press [esc]-key in any submenu item, MDC returns to the next higher menu for appox. 1 sec, then directly jumps back to the main menu. Press [†]-key in any submenu item, MDC returns to the next higher menu.

 If you do not press any button for longer than 10 sec, the dispay jumps automatically back to the main menu.
- With [→]-key or [←]-key, you can switch around the items in any menu level. Menus are always "wrap-around", i.e. you can move on from the last item in a menu directly on to the first.
- Texts in dashed frames are not displayed.

Fig. 83: Overview of the MDC Menu



14.6 Overview of the Command Functions

Details of the commands listed below are explained in paragraph 8.1.2.3, page 95.

	RS-232C commands	Functions
1	*ESR? (e.g. 50 errors)	Check the latest error codes
2	*ESR2? (e.g. 50 errors)	Check the latest error codes with parameters
3	*IDN?	Check device information
4	*OPC?	Check the last trigger impulses
5	ADJUST:?	Check the adjust status
6	ADJUST:START	Initiate the adjust
7	ADJUST:OFFSET:?	Check current adjust offset value
8	ADJUST:OFFSET: <offset value=""></offset>	Set adjust offset value
9	ADJUST:CALIBRATION:?	Check the status of (remote) adjust
10	ADJUST: CALIBRATION:ON	Activate the adjust
11	HEATER:?	Check the heater status
12	HEATER:ID?	Check the information of the connected heater
13	HEATER:OFF	Turn off the connected heater
14	HEATER:ON	Turn on the connected heater
15	HEATER:TEMP: <target temperature=""></target>	Set the target temperature for the connected heater
16	HEATER:LIMITS: <min>,<max></max></min>	Set the limits for the temperature regulation
17	COOLER:?	Check the cooling status
18	COOLER:ID?	Check the information of the connected flow control valve
19	COOLER:OFF	Turn off the connected flow control valve
20	COOLER:ON	Turn on the connected flow control valve
21	COOLER:TEMP: <target temperature=""></target>	Set the target temperature for the cooling
22	COOLER:OFFSET: <offset></offset>	Set the cooler offset for the connected flow control valve
23	KEY:ENTER	Send ENTER signal to confirm error(s)
24	KEY:ESCAPE	Send ESCAPE signal
25	HELP	Check all RS-232C commands
26	LCD?	Check current content of the screen
27	MAINT:STATUS	Check accumulated amount of pulses (in %)
28	MAINT:MESSAGE:OFF	Deactivate the maintenance message
29	MAINT:MESSAGE:ON	Activate the maintenance message
30	SYSTEM:KLOCK:OFF	Unlock the keypad
31	SYSTEM:KLOCK:ON	Lock the keypad
32	SYSTEM:SHOW:CYCLES	Check the current cycle counter
33	SYSTEM:SHOW:VALVEID	Check the valve ID
34	SYSTEM:SHOW:CONTROLLERID	Check the MDC ID
35	SYSTEM:SHOW:STATUS	Check the status of KeyLock, DosOK with Delay, SingleDosOK, Auxiliary Mode and Multi Dot Mode
36	SYSTEM:SHOW:ACTTEMP	Check the actuator temperature
37	SYSTEM:DOSOKDELAY:OFF	Deactivate the DOSOK-Delay

	186	VTK-TR-BA-173e-1 - User Manual MDS 3581-V
--	-----	---



38	RS-232C commands SYSTEM:DOSOKDELAY:ON	Functions Activate the DOSOK-Delay
39	SYSTEM:SINGLEDOSOK:SETUP	Set the Single-DOSOK signal to "Setup"
40	SYSTEM:SINGLEDOSOK:PULSE	Set the Single-DOSOK signal to "Pulse"
41	SYSTEM:PASSWORD: <your password=""></your>	Send the password for unlocking the keypad
42	SYSTEM:PASSWORD:OFF	Deactivate the password for unlocking the keypad
43	SYSTEM:PASSWORD:ON	Activate the password for unlocking the keypad
		, , , , , , , , , , , , , , , , , , ,
44	SYSTEM:PASSWORD:SET: <your password=""></your>	Set the password for unlocking the keypad
45	SYSTEM:AUXILIARYMODE:OFF	Deactivate the auxiliary mode
46	SYSTEM:AUXILIARYMODE:ON	Activate the auxiliary mode
47	SYSTEM:MULTIDOT:OFF	Deactivate the multi dot mode
48	SYSTEM:MULTIDOT:ON	Activate the multi dot mode
49	TRIGGER:SET:?	Check the pulse parameters in the RAM
50	TRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri>	Change the pulse parameters in the RAM ("Rising": 1/10 ms) (MDC returns "OK")
51	TRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl< td=""><td>Change the pulse parameters in the EEPROM</td></dl<></np></nl></fa></ot></ri>	Change the pulse parameters in the EEPROM
	>,1	("Rising": 1/10 ms) (MDC returns "OK")
52	TRIGGER:ASET:?	Check the pulse parameters in the RAM
53	TRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,<d< td=""><td>Change the pulse parameters in the RAM</td></d<></np></nl></fa></ot></ri>	Change the pulse parameters in the RAM
	L>	("Rising": 1/100 ms) (MDC returns "OK")
54	TRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,<d< td=""><td>Change the pulse parameters in the EEPROM</td></d<></np></nl></fa></ot></ri>	Change the pulse parameters in the EEPROM
	L>,1	("Rising": 1/100 ms) (MDC returns "OK")
55	STRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<d< td=""><td>Change the pulse parameters in the RAM</td></d<></np></nl></fa></ot></ri>	Change the pulse parameters in the RAM
	L>	("Rising": 1/10 ms) (MDC returns the saved parameters)
56	STRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<d< td=""><td>Change the pulse parameters in the EEPROM</td></d<></np></nl></fa></ot></ri>	Change the pulse parameters in the EEPROM
	L>,1	("Rising": 1/10 ms) (MDC returns the saved parameters)
57	STRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,< DL></np></nl></fa></ot></ri>	Change the pulse parameters in the RAM
		("Rising": 1/100 ms) (MDC returns the saved parameters)
58	STRIGGER:ASET: <ri>,<ot>,<fa>,<nl>,<np>,< DL>,1</np></nl></fa></ot></ri>	Change the pulse parameters in the EEPROM
50		("Rising": 1/100 ms) (MDC returns the saved parameters)
59	VALVE:UP	Open the valve
60	VALVE:DOWN	Close the valve
61	VALVE:AOPEN	Initiate a dispensing cycle with current parameters (MDC returns "OK")
62	VALVE:AOPEN: <ri>,<ot>,<fa>,<nl>,<np>,<d< td=""><td>Initiate a dispensing cycle with given parameters</td></d<></np></nl></fa></ot></ri>	Initiate a dispensing cycle with given parameters
	L>	(MDC returns "OK")
63	VALVE:AOPENS <setup no.=""></setup>	Initiate a dispensing cycle with selected setup
		(MDC returns "OK")
64	SVALVE:AOPEN	Initiate a dispensing cycle with current parameters
	SVALVE AGREN SI GE ET TIL TIL	(MDC returns the saved parameters)
65	SVALVE:AOPEN: <ri>,<ot>,<fa>,<nl>,<np>,< DL></np></nl></fa></ot></ri>	Initiate a dispensing cycle with given parameters
66		(MDC returns the saved parameters)
66	SVALVE:AOPENS <setup no.=""></setup>	Initiate a dispensing cycle with selected setup (MDC returns the saved parameters)



	RS-232C commands	Functions
67	WRITE:LCD: <text></text>	Write an ASCII text on the display
68	TAPPET:SET: <value></value>	Set tappet maintenance counter
69	TAPPET:CLEAR	Clear tappet maintenance counter
70	NOZZLE:SET: <value></value>	Set nozzle maintenance counter
71	NOZZLE:CLEAR	Clear nozzle maintenance counter
72	SCENARIO:STATUS	Check the status of scenarios and PLCstops
73	SCENARIO:OFF	Deactivate the use of scenarios
74	SCENARIO:ON	Activate the use of scenarios
75	SCENARIO:PLCSTOP:1:OFF	Deactivate the PLC-Stop
76	SCENARIO:PLCSTOP:1:ON	Activate the PLC-Stop
77	SCENARIO:SAVE: <scenario no.="">:<values></values></scenario>	Save the parameters for selected scenario
78	SCENARIO:READ: <scenario no.=""></scenario>	Check the parameters of selected scenario
79	SETUP:ASAVE: <setup no.>:<ri>,<ot>,<fa>,<nl>,<np>,<dl></dl></np></nl></fa></ot></ri></setup 	Save parameters in a setup
80	SETUP:AREAD: <setup no.=""></setup>	Check the parameters of a setup
81	BAUDRATE:0/1/2/3/4	Change the baud rate
82	GETTD	Check the current time
83	MDC:RESTART	Restart the MDC



14.7 Connection Diagram MDS 358x

This diagram shows the connections of an MDS 3581-V.

Connection diagram MDS 3581-V

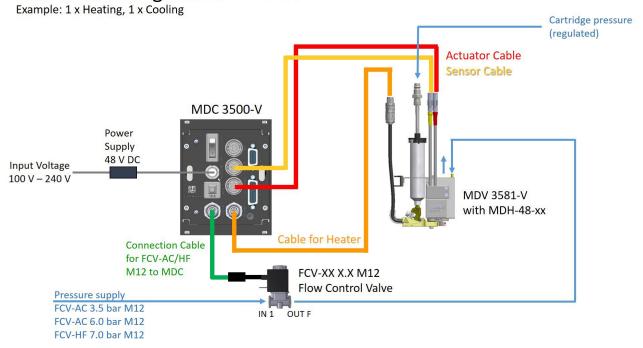


Fig. 84: Connection Diagram MDS 3581-V



14.8 Declaration Concerning Decontamination of Shipped Equipment

Before returning Microdispensing Systems for purposes of inspection, maintenance and repair, be sure that the equipment is in a completely decontaminated state. You have to fill out the following form correctly; otherwise, the order will not be processed. Upon request, VERMES Microdispensing performs the required decontamination after receipt of the corresponding safety data sheet. This work will be calculated separately.

Only authorized and responsible personnel may fill out and sign this declaration!

Serial No.:	MDV SN#		
	MDV SN#		
2 Legally Binding Declaration			
The signer declares that the microdispensing system decontaminated system is shipped according to leg			
Company:			
Address:			
Name:			
Phone:	Fax:		
E-Mail:			
Date:	Signature:		
Company Stamp:			

3 Note for Shipment

In order to prevent damage to the equipment, the manufacturer recommends using the original packaging material for return. Instructions about transport have to be observed (see paragraph 12.1, page 172). The manufacturer is not liable for any damage resulting from inadequate packaging or transport.

190

15 List of Figures

Fig. 1:	Front Side 21
Fig. 2:	Back Side 23
Fig. 3:	Connection for power supply 48 V DC – pin functions 24
Fig. 4:	Main menu
Fig. 5:	Menu structure
Fig. 6:	Display main menu
Fig. 7:	Submenu "Pulse Parameters" 29
Fig. 8:	Message "Heater connected - press enter" 30
Fig. 9:	Submenu "Cooler/Heater" 30
Fig. 10:	Submenu "Cooler"31
Fig. 11:	Submenu "Heater"
Fig. 12:	Before reaching the target temperature 32
Fig. 13:	The target temperature is reached32
Fig. 14:	Submenu "Status"
Fig. 15:	Submenu "Scenario"
Fig. 16:	Submenu "Scenario-Def. 1"
Fig. 17:	Submenu "Service-Option"
Fig. 18:	Composition
Fig. 19:	Explosion view valve 42
Fig. 20:	Content
Fig. 21:	Distance of the bores 45 mm 53
Fig. 22:	Connecting the actuator cable – step 1 54
Fig. 23:	Connecting the actuator cable – step 2 54
Fig. 24:	Connector actuator cable - grip 54
Fig. 25:	Connecting the sensor cable – step 155
Fig. 26:	Connecting the sensor cable – step 2 55
Fig. 27:	Connector sensor cable - grip 56
Fig. 28:	Switching Power Supply 48 V 4 A Push-Pull and its connector 56
Fig. 29:	Heater MDH-48-BY 57
Fig. 30:	Heater cable 48 V 57
Fig. 31:	Flow Control Valve FCV-AC 6.0 M1257
Fig. 32:	Connection Cable for FCV-AC/HF M12 to MDC58
Fig. 33:	Connection diagram of MDS 3581-V58
Fig. 34:	Valve with air cooling connected 59
Fig. 35:	Screwing tight the nozzle fixation nut 60
Fig. 36:	Adjust – Press [ADJ] 61
Fig. 37:	Message Adjust Screw OUT 61
Fig. 38:	Screw open adjust screw 61
Fig. 39:	Adjust – Press [ENTER]61
Fig. 40:	Message 500 Shots – Please Wait 62

Fig. 41:	Message Please wait	
Fig. 42:	Message Adjust Screw IN – until green LED	62
Fig. 43:	Message Screw further IN	62
Fig. 44:	Arrows displayed	63
Fig. 45:	Message press enter – 0, the green adjust LED is ON	63
Fig. 46:	Adjust – Press Enter	63
Fig. 47:	Message Adjust Screw OUT – X <<<<, the red adjust LED is ON .	63
Fig. 48:	System behavior	68
Fig. 49:	Select Pins	72
Fig. 50:	Schematic of usage of select pins, example	72
Fig. 51:	Circuit diagram	73
Fig. 52:	Scenarios of an MDC	74
Fig. 53:	Select Pins	76
Fig. 54:	Schematic of usage of select pins	76
Fig. 55:	Multi Dot Mode ON	77
Fig. 56:	Multi Dot Mode OFF	77
Fig. 57:	Multi Dot dispensing – PLC-Stop ON	78
Fig. 58:	Multi Dot dispensing – PLC-Stop OFF	78
Fig. 59:	Submenu Service-Option	81
Fig. 60:	MDH-48-BY	82
Fig. 61:	Submenu Heater	83
Fig. 62:	Calibrator Set	84
Fig. 63:	FCV-AC 6.0 M12	86
Fig. 64:	Submenu Cooler	87
Fig. 65:	Serial interface	89
Fig. 66:	PLC-Interface: 15-pin, Sub-D	27
Fig. 67:	Single-Shot Mode	29
Fig. 68:	Burst Mode (Example with Three Shots)1	29
Fig. 69:	External Mode1	30
Fig. 70:	Infinite Mode1	30
Fig. 71:	PLC signals with Scenario OFF 1	31
Fig. 72:	PLC signals with Scenario ON1	31
Fig. 73:	Screw open adjust screw 1	33
Fig. 74:	AUX socket	35
Fig. 75:	Circuit diagram1	35
Fig. 76:	Example - TTF Tappet (consists of tappet rod and tappet spring)1	54
Fig. 77:	Example - Tappet Sealing PE1	54
Fig. 78:	Example - Nozzle Insert N11	54
Fig. 79:	EU Declaration of Conformity	81
Fig. 80:	Dimensional Drawing MDC 3500-V	82
Fig. 81:	Dimensional Drawing MDV 3581-V1	83
Fig. 82:	Connection Diagram PLC-interface	84
Fig. 83:	Overview of the MDC Menu	85

Fia	84:	Connection Diagram M	IDS 3581-	V	18	9
гіч.	OT.	Connection Diagram ivi	יו סככ כעו	· V	10	"

16 List of tables

1 ab. 1:	Available products 2
Tab. 2:	Protective Equipment and Safety Clothing12
Tab. 3:	Danger levels 13
Tab. 4:	Illustration convention13
Tab. 5:	Abbreviations14
Tab. 6:	MDT 301 - Universal Tool (Order no. 1010208) 16
Tab. 7:	MDT 303 - Nozzle Insert Changing Tool (Order no. 1007083) 16
Tab. 8:	MDT 307 - Adjust Tool TA Hot Melt Handle (Order no. 1014143)16
Tab. 9:	MDT 316 - Nozzle Insert Cleaning Tool (Order no. 1013324) 17
Tab. 10:	MDT 323 - Nozzle Insert – Squeezing Out Tool TA (Order no. 1014283)17
Tab. 11:	MDT 324 - Nozzle Insert Cleaning Holder (Order no. 1014310) 17
Tab. 12:	MDT 327 - Multi-Function Tool (Order no. 1014440) 18
Tab. 13:	MDT 328 - Tappet Sealing Changing Tool (Order no. 1014503). 18
Tab. 14:	Hexagon Key Set (Order no. 1012993) 18
Tab. 15:	MDT 306 - Torque Wrench Tool VM (Order no. 1015062) 19
Tab. 16:	Torques (in cN.m)
Tab. 17:	List of service codes 37
Tab. 18:	Options in the submenu of service code 1000 37
Tab. 19:	Assembling of the valve 51
Tab. 20:	Parameters for dispensing 69
Tab. 21:	Minimum and maximum parameter limits70
Tab. 22:	Select Pin settings for the setups73
Tab. 23:	Select Pin settings76
Tab. 24:	Factory settings of the setups79
Tab. 25:	Factory settings of the scenarios79
Tab. 26:	Calibration of the heater85
Tab. 27:	Characters in the command "TRIGGER:SET: <ri>,<ot>,<fa>,<nl>,<np>,<dl>"</dl></np></nl></fa></ot></ri>
Tab. 28:	Heat Resistance of Sealing Materials137
Tab. 29:	Compatibility between Sealing Material and Selected Media 138
Tab. 30:	Disassembling of the valve144
Tab. 31:	Clean all components by hand148
Tab. 32:	Two-Finger-Seesaw-Test149
Tab. 33:	Assembling of the valve152
Tab. 34:	List of status messages171
Tab. 35:	Nozzle Fixation Nuts173
Tab. 36:	Tappets174
Tab. 37:	Sealings 175
Tab. 38:	Supply unit 176
Tab. 39:	Heaters and Heater Controllers177

Tab. 40:	Cleaning Tools	177
Tab. 41:	Tools	178
Tab. 42:	Nozzle Inserts	180
Tab. 43:	Other Parts	180

17 Index

[↑]-key 25,71	adjust screw 41
[→]-key 26, 71	remote adjust 132
[\]-key 25, 71	top adjust 60
[←]-key 26, 71	adjust control lamps 21, 22
[adj]-key 25	Adjust Offset 81
[enter]-key 25	adjust screw 41
[esc]-key 25	Adjust Tool TA 15
[F1]-key 26	Adjustgrip (part of Universal Tool) 16
[F2]-key 26	Adjust-Offset 37
[recall]-key 25	air cooling 59
[save]-key 25	assembling the valve 48
[trig]-key 25	Attachments 181
10 A fuse 24	AUX socket 23, 72, 75, 135
101 Incorr. Valve 158	AUX socket pin 3 72
	AUX socket pin 5 72, 75
102 Incorrect Piezo Type 158 104 Sensor Communication Error 158	AUX socket pin 6 72
190 Incorrect Valve Data 159	AUX socket pin 8 72, 75
	Auxiliary Mode 80
191 NozzleTappet Load Err. 159 199 Valve Error 160	Back Side 23
	baud rate 37
301 No Valve Present Error 161	Baud Rate (menu item) 37
302 Actuator Connection Error 161	Bits 19
303 Adjust Error 161	Burst Mode 67, 129
501 Valve Defect Error 162	cable 53
502 MDV TempHigh 163	cable connection 42
601 USART Buffer Overflow 164	Calibration of the Heater 83
701 Valve Driver Defect 164	carriage return 90
702 Watchdog TimeOut 164	cartridge holder 19
703 RS Power Supply 165	CeTeDur 137
810 communication error 165	Cleaning 136
820 incorrect heater data 165	CTK Cleaning Toolkit 136
830 wrong heater 165	fine purification 144
835 heating temp out of range 166	Pre-purifying 139
838 heater time out 166	purifying agent 140
840 heater unplugged 166	simpler cleaning method 145
850 MDC not calibrated! 167	Cleaning Methods 139
855 incorrect bus data 167	Cleaning Toolkit See CTK Cleaning Toolkit
860 incorrect cooler data 167	Cleaning Tools 177
870 wrong cooler 167	command extensions 76, 78
875 wrong cooler PT100-signal 168	commands 90
880 cooler unplugged 168	Communication Interfaces 89
890 cooler not calibrated 168	compatibility 138
901 RAM Data Error 168	Compatibility between Sealing Materials and
902 EEPROM not Formatted 169	Selected Media 138
903 EEPROM Write Error 169	Composition of the Valve 40
904 Setup Save Error 169	compressed air 10
905 Setup Load Error 170 999 Error in Errorlist 170	compressed air connections 42
Abbreviations 14	connection 55
	connection diagram 58
actuator cable 53	Connection Diagram MDS 358x 189
actuator socket 24	Connection Diagram PLC-interface 184
actuator system 41	connector 54,55
adjust offset 81	Contracted Use 9
adjust offset 81	control lamp for service request 21

VTK-TR-BA-173e-1 - User Manual MDS 3581-V

and a literature of the control of t	Proceedings of the Process of the Pr
control lamp for status of heating 22	dispensing process 65
control lamps 20	dispensing time 28
control unit	Dispensing with a Cooling Valve 86
10 A fuse 24	Dispensing with a Heater 82
actuator socket 24	display 21, 28
AUX socket 23	DosOK 129
control lamp for service request 21	DT See dispensing time
control lamp for status of heating 22	EEPROM 39
control lamps 20	electronics module 41
Dimensional Drawing MDC 3500-V 182	Error (menu item) 34
display 21, 28	error during calibration 85
firmware revision 90	Error Messages 156
installation of the MDC 52	EU Declaration of Conformity 181
keypad 21	Explanations 95
LC display 21	Explanations of Error Messages 158
maintenance bar 29	Explosion View Valve 42
maintenance indicator 153	External Mode 67, 130
manual trigger key 25	Factory Settings 37, 79
MDC front panel 19	factory settings of the scenarios 79
MDC ID 27	factory settings of the setups 79
memories 39	Falling 69
ON/OFF switch 23	FCV-AC 6.0 M12 30, 86
PLC interface 24	Fine Purification 144
power connection 23	Firmware Rev (menu item) 27
real time clock 27	firmware revision 90
RS-232C interface 23	First Assembling of the Valve 48
Select Pins 72,75	flexibility 45
sensor socket 23	flow control valve 86
socket for cooling 24	fluid box 40
socket for heating 24	Fluid box connector Luer-Lock 19
softkeys 21	frequency 28
weight 20	Front Side 21
Control Unit MDC 20	
	Function Keys 25 fuse <i>Siehe</i> 10 A fuse
cooler 31 Cooler connected 171	
	gearing 19
Cooler could not be activated 171	gearing VM-A 19
Cooler is disconnected 171	General Instructions 13
Cooler Offset 87	heat resistance 137
cooling 10, 86	Heat Resistance of Sealing Materials 137
activate the cooling 87	heater 30, 82
FCV-AC 6.0 M12 30	activate the heater 83
flow control valve 86	control lamp for status of heating 22
submenu "Cooler" 31	danger 82
coupler plug KS4-CK-6 65	dangers 30
coupler socket KD4-1/2-A 65	dispensing with a heater 82
CTK Cleaning Toolkit 136	heating time 30
Cycle Count 153	MDH-48-BY 30, 31, 82
danger level 13	nozzle heater 31, 82
Date/Time (menu item) 27	socket for heating 24
Declaration Concerning Decontamination of Shipped	submenu "Heater" 30
Equipment 190	Heater and Heater Controller 177
Delay 69	Heater connected 171
delete a scenario 124	Heater could not be activated 171
Delivery 47	Heater is disconnected 171
Dimensional Drawing MDC 3500-V 182	Heating and adjust 60
Dimensional Drawing MDV 3581-V 183	Heating and remote adjust 132
Dispensing and Positioning of Dots (Modes) 67	heating time 30
dispensing parameters 66	Hexagon Key Set 15



Infinite Mode 67, 130 Initial Liquid Supply 65 Initial Liquid Supply 65 Initial Liquid Supply 65 Initial Liquid Supply 65 Installation of the control unit 52 Installation of the control unit 52 Installation of the walve 52 Interfaces 89 AUX socket 23 Boud rate 37 Connection Diagram PLC-interface 184 Pin Functions RS-232C interface 89 PLC Interface 127 response to commands 90 RS-232C interface 89 Select Pins 72,75 serial 89 Select Pins 72,75 serial 89 Select Rys 72,75 serial 89 Introduction 7 KD4-1/2-A 65 KGyapad 21 KS4-CK6 65 LEMO Connector 54 LEMO Connector 54 Line feed 90 List of Figures 191 List of tables 194 Logical 0 68 Logical 1 68 Logical 1 68 Logical 1 68 Long tingger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 mains cable 57 Maint. Cycle (menu item) 34, 153 Maint. Message (menu Item) 34 Maintenance needed 162 Moute 194 Moute 194 Moute 27 Moute 29 Moute 29 Moute 39 Memories of the MDC 39 Me	Illustration convention 13	MDT 327 See Multi-Function Tool
Initial Liquid Supply 65 Initial Operation 47 Input of Values 71 Installation of the control unit 52 Installation of the Microdispensing System 52 Installation of the Microdispensing System 52 Installation of the Microdispensing System 52 Installation of the Wire 52 Installation of the Microdispensing System 52 Installation of the Microdispensing System 52 Installation of the Microdispensing System 52 Installation of the Wire 52 Installation of the Wire 52 Installation of the Microdispensing System 52 Installation of the Micro		
Initial Operation 47 Input of Values 71 Installation of the control unit 52 Installation of the Microdispensing System 52 Installation of the Wiler 53 Installation of the Viller 53 Installation of the Operator 8 Installation of the Viller 53 Installation of t		
Input of Values 71 Installation of the control unit 52 Installation of the control unit 52 Installation of the Microdispensing System 52 installation of the Wicrodispensing System 52 interfaces 89 AUX socket 23 baud rate 37 Connection Diagram PLC-interface 184 Pin Functions IS-232C interface 89 PLC interface 127 response to commands 90 ScP1 standard 89 ScP2 Standard 89 ScP1 standard 89 Select Pins 72, 75 serial 89 Introduction 7 Service Gode 37, 80 SCP1-1/2-A 65 Keypad 21 KS4-CK-6 65 LC display 21 LCD See LC display lane feed 90 List of Figures 191 List of Figures 191 List of Figures 191 List of Figures 194 Lory See Tappet Sealing LX Main Menu 28 mains cable 57 Maint. Cycle menu item) 34 Maintenance 153 maintenance bar 29 Maintenance needed 162 Maintenance needed 162 Maintenance needed 162 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 manual trigger key		•
Installation of the Control unit 52 Installation of the Microdispensing System 52 Installation of the Walve 52 Interfaces 89 AUX socket 23 baud rate 37 Connection Diagram PLC-interface 184 Pin Functions R5-232C interface 89 PLC interface 127 response to commands 90 R5-232C interface 89 SCPI standard 89 SCPI standard 89 SCPI standard 89 Select Pins 72, 75 serial 89 Introduction 7 KD4-112-A 65 keypad 21 KS4-CK-6 65 LC display 21 LCD See LC display leakage 65 LC display 21 LEMO connector 54 line feed 90 List of Figures 191 List of Tables 194 logical 0 68 logical 1 68 long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 mains cable 57 Maint. Cycle face 70 Maint Cycle (menu item) 34, 153 Maint Message (menu item) 34 Maintenance 153 maintenance bar 29 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 mainterials 45, 137, 138 MDC 5500-V 182 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 301 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 305 See Adjust Tool TA MDT 315 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 315 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 315 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 315 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 315 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 315 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 315 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 317 See Nozzle Insert Cleaning Tool MDT 318 See Nozzle Insert Clea	•	
Installation of the Microdispensing System 52 interfaces 89 AUX socket 23 baud rate 37 Connection Diagram PLC-interface 184 Pin Functions RS-232C interface 89 PLC interface 127 response to commands 90 RS-232C interface 89 PLC interface 187 Select Pins 72, 75 serial 89 SCPI standard 89 Select Pins 72, 75 serial 89 Introduction 7 KD4-1/2-A 65 Keypad 21 KS-4-CK-6 65 LC display 21 LCD See LC display leakage 65 LEMO connector 54 line feed 90 List of Figures 191 List of Tables 194 logical 0 68 logical 1 68 long trigger signal 134 LX sealing See Tappet Sealing LX Main Message (menu item) 34, 153 Maint. Message (menu item) 34 Maint Message (menu item) 34 Maintenance neaded 162 Maintenance neaded 163 MDC front panel 19 MDC flo (menu item) 27 MDH-48-BY 30, 31, 82 MDC 303 See Nozzel Insert Changing Tool MDT 303 See Nozzel Insert Cleaning Tool MDT 305 See Nozzel Insert Cleaning Tool MDT 305 See Nozzel Insert Cleaning Tool Obligations of the Custom	•	
installation of the valve 52 innerfaces 89 Memories 39 interfaces 89 AUX socket 23 baud rate 37 Baud rate 37 Baud rate 37 Date/Time 27 Error 34 Pin Functions R5-232C interface 89 PLC interface 127 response to commands 90 Firmware Rev 27 Factory Settings 37 Firmware Rev 27 R5-232C interface 89 Factory Settings 37 Firmware Rev 27 Maint. Cycle 34 Maint. Message 34 Select Pins 72, 75 serial 89 MoDC ID 27 serial 89 Nozzle 27 Introduction 7 Service Code 37, 80 Tappet 27 Valve ID 27 Valve		
interfaces 89 AUX socket 23 baud rate 37 Connection Diagram PLC-interface 184 Pin Functions R5-232C interface 89 PLC interface 127 response to commands 90 R5-232C interface 89 PLC interface 89 SCP1 standard 89 SCP1 standard 89 SCP1 standard 89 Select Pins 72,75 serial 89 Introduction 7 Service Code 37,80 KD4-1/2-A 65 keypad 21 KS4-CK-6 65 LC display 1 LCD See LC display 1 List of Figures 191 List of tables 194 Logical 0 68 logical 1 68 long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 mains cable 57 Maint. Cycle (menu item) 34 Maint. Message (menu item) 34 Maint. Message (menu item) 34 Maintenance 153 Maint. Message (menu item) 34 Maintenance needed 162 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 5500-V 182 MDC font panel 19 MDC flot panel 19 MD	· · · · · · · · · · · · · · · · · · ·	
AUX socket 23 baud rate 37 Connection Diagram PLC-interface 184 Pin Functions R5-232C interface 89 PLC interface 127 response to commands 90 R5-232C interface 89 SCPI standard 89 Select Pins 72, 75 serial 89 Introduction 7 KD4-1/2-A 65 Keypad 21 KS4-CK-6 65 LC display 21 LC Dise LC display 21 LCD See LC display 31 list of Figures 191 List of Figures 191 List of Figures 191 List of Figures 191 List of Figures 194 LX sealing See Tappet Sealing LX Main Menu 28 Main Cycle (menu item) 34, 153 Maint Message (menu item) 34 Maint. Cycle (menu item) 34 Maint. Mcsage (menu item) 34 Maint. Mcsage (menu item) 34 Maint Message (menu item) 34 Maint Message (menu item) 34 Maint Message (menu item) 34 Maint menance of Tappet, Tappet Sealing and Nozzle Insert 154 Maintenance needed 162 Maintenance needed 162 Maintenance needed 162 Maintenance frappet, Tappet Sealing and Nozzle Insert 154 Malc Connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 5500-V 182 MDC front panel 19 MDC front panel 19 MDC font panel 1		
baud rate 37 Connection Diagram PLC-interface 184 Pin Functions RS-232C interface 89 PLC interface 127 response to commands 90 RS-232C interface 89 SCPI standard 89 Maint. Message 34 Mor ID 27 Scevice Code 37, 80 Tappet 27 Valve ID 27 Scevice Code 37, 80 Tappet 27 Valve ID 27 Scevice Code 37, 80 Morzule 27 Indianta Meximum Parameter Limits 70 modes 67 Import 27 Morcodispensing Valve 40 Minimum and Maximum Parameter Limits 70 modes 67 Burst Mode 67, 130 Infinite Mode 67		
Connection Diagram PLC-interface 184 PIn Functions RS-232C interface 89 PLC interface 127 response to commands 90 RS-232C interface 89 Select Pins 72, 75 serial 89 Select Pins 72, 75 serial 89 Introduction 7 RD4-1/2-A 65 RS-232C interface 89 Introduction 7 RD4-1/2-A 65 RS-232C interface 89 Introduction 7 RD4-1/2-A 65 RS-232C interface 89 Introduction 7 RS-23C interface 89 Introduction 7 RS-24 interface 89 Introduction 7 RS-25 interface 89		
Pin Functions RS-232C interface 89 PLC interface 127 response to commands 90 RS-232C interface 89 RS-232C interface 89 RS-213C interface 87 RS-213C interfac		
PLC interface 127 response to commands 90 RS-232C interface 89 SCPI standard 89 Nozzle 27 Nozzle 27 Introduction 7 Service Code 37, 80 KD4-1/2-A 65 Keypad 21 KS4-CK-6 65 Keypad 21 KCS-CK-6 65 Keypad 21 KS4-CK-6 65 Menu Structure 27 LCD See LC display leakage 65 LEMO connector 54 line feed 90 Screamin Mode 67, 129 External Mode 67, 130 List of Figures 191 List of tables 194 logical 0 68 Solid 1 68	——————————————————————————————————————	
response to commands 90 RS-232C interface 89 SCPI standard 89 Select Pins 72, 75 serial 89 Introduction 7 KD4-1/2-A 65 keypad 21 KS4-CK-6 65 LC display 21 LCD See LC display 21 LCD See LC display 21 leakage 65 LEMO connector 54 line feed 90 List of Figures 191 List of tables 194 logical 0 68 logical 1 68		
RS-232C interface 89 SCPI standard 89 Select Pins 72, 75 serial 89 Introduction 7 Service Code 37, 80 KDC-1D 27 KD4-1/2-A 65 Keypad 21 KS4-CK-6 65 Keypad 21 KS4-CK-6 65 Keypad 21 LCD See LC display LEMO connector 54 Infeded 90 List of Figures 191 List of Figures 191 List of Figures 191 List of Figures 191 List of Figures 194 logical 0 68 logical 1 68 log		· -
SCPI standard 89 Select Pins 72, 75 Serial 89 Introduction 7 KD4-1/2-A 65 Keypad 21 KS4-CK-6 65 LC display 21 LCD See LC display 21 LCD See LC display 21 Inifered 90 List of Figures 191 List of figures 191 List of figures 191 List of figures 191 Logical 0 68 Logical 1 68 Logical 1 68 Logical 1 68 Logical 2 68 Logical 5 68 Logical 6 69 Logical 6 68 Logical 6 69 Logical 6 68 Logical 6 69 Logical 6 69 Logical 1 68 Logica	·	
Select Pins 72, 75 serial 89 Introduction 7 KD4-1/2-A 65 keypad 21 KS4-CK-6 65 LC display 21 LCD See LC display 21 LCD See LC display 21 LCD See LC display 30 List of Figures 191 List of tables 194 Logical 0 68 Logical 1 68 LX sealing See Tappet Sealing LX Main Menu 28 mains cable 57 Maint. Cycle (menu item) 34, 153 Maint. Cycle (menu item) 34 Maintenance 153 Maintenance bar 29 Maintenance Indicator 153 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Case Mozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Case Mozzle Insert Case Mozzle Insert Case Mozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Case Mozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle Mozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Case Mozzle	RS-232C interface 89	Maint. Cycle 34
serial 89 Introduction 7 Service Code 37, 80 KD4-1/2-A 65 Keypad 21 KS4-CK-6 65 Keypad 21 KS4-CK-6 65 Menu Structure 27 LCd isplay 21 LCD See LC display leakage 65 LEMO connector 54 line feed 90 List of Figures 191 List of figures 191 List of tables 194 logical 0 68 Sogical 1 68 logical 1 68 logical 1 68 logical 1 68 logical 1 68 Nain Menu 28 mains cable 57 Maint. Cycle (menu item) 34, 153 Maint. Message (menu item) 34 Maintenance 153 Maint. Message (menu item) 34 Maintenance 1653 Maintenance 1616 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDC 10 (menu item) 27 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Cleaning Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool TA MDT 316 See Nozzle Insert Cleaning Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool TA MDT 316 See Nozzle Insert Cleaning Tool TA MDT 317 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool TA Open Time 68	SCPI standard 89	Maint. Message 34
Introduction 7 KD4-1/2-A 65 KD4-1/2-A 65 Keypad 21 KS4-CK-6 65 LC display 21 LC display 21 LCD See LC display leakage 65 LEMO connector 54 line feed 90 List of figures 191 List of fables 194 logical 0 68 logical 1 68 logical 1 68 long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 mains cable 57 Maint. Cycle (menu item) 34, 153 Maintenance 153 Maintenance bar 29 Maintenance had cables 154 Maintenance needed 162 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Caspen Tool MDT 303 See Nozzle Insert Cleaning Tool TA MDT 316 See Nozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Cleaning Tool TA MDT 316 See Nozzle Insert Cleaning Tool TA MDT 316 See Nozzle Insert Squeezing Out Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA Open Time 68	Select Pins 72, 75	MDC ID 27
KD4-1/2-A 65 keypad 21 KS4-CK-6 65 LC display 21 LCD See LC display leakage 65 LEMO connector 54 line feed 90 List of Figures 191 List of tables 194 logical 0 68 logical 1 69 logical 1 68 logical 1 69 logical 1 68 logical 1 69 logical 1 69 logical 1 68 logical 1 69	serial 89	Nozzle 27
keypad 21 KS4-CK-6 65 KS4-CK-6 65 Menu Structure 27 LCD See LC display 21 LCD See LC display Minimum and Maximum Parameter Limits 70 modes 67 LEMO connector 54 line feed 90 List of Figures 191 List of tables 194 Logical 0 68 Logical 1 68 Logical 2 67 Logical 2 7 Logical 3 7 Logical 4 7 Logic	Introduction 7	Service Code 37, 80
KSÁ-CK-6 65 LC display 21 Microdispensing Valve 40 LCD See LC display leakage 65 LEMO connector 54 line feed 90 List of Figures 191 List of fables 194 logical 0 68 logical 1 68 long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 Maint. Cycle (menu item) 34, 153 Maint. Message (menu item) 34 Maintenance 153 maintenance 153 maintenance bar 29 Maintenance lodicator 153 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 manual trigger key 25 manual trigger key 25 manual trigger key 25 more and the more of Manual Control TA MDT 310 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Cleaning Tool TA MDT 310 S	KD4-1/2-A 65	Tappet 27
LCd isplay 21 LCD See LC display leakage 65 LEMO connector 54 line feed 90 List of Figures 191 List of Figures 194 logical 0 68 logical 1 68 logical 1 68 logical 2 68 logical 1 68 logical 1 68 logical 2 68 mains cable 57 Maint. Cycle (menu item) 34, 153 Maintenance 153 Maintenance 153 Maintenance lodicator 153 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 Maintenance 154 Maintenance 155 Moc 3 1000 150 Maintenance 156 Maintenance 157 Maintenance 158 Maintenance 159 Maintenance 159 Maintenance 150 Maintenance 150 Maintenance 151 Maintenance 152 Maintenance 153 Mozzle fixation nut 19 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 Male connector 54, 55 Male connector 54, 55 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDT 301 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 307 See Adjust Tool TA MDT 307 See Adjust Tool TA MDT 307 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA Open Time 68	keypad 21	Valve ID 27
LCD See LC display leakage 65 LEMO connector 54 LEMO connector 54 line feed 90 List of Figures 191 List of tables 194 logical 0 68 logical 1 68 logical 1 68 logical 1 68 LX sealing See Tappet Sealing LX Main Menu 28 Maint. Cycle (menu item) 34 Maint. Message (menu item) 34 Maintenance 153 Maint. Message (menu item) 34 Maintenance lodicator 153 Maintenance lodicator 153 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 MDC front panel 19 MDC 3500-V 182 MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Nozzle Insert Cleaning Tool MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cle	KS4-CK-6 65	Menu Structure 27
leakage 65 LEMO connector 54 Line feed 90 List of Figures 191 List of tables 194 Logical 0 68 Logical 1 68 Logical 1 68 Logical 2 68 Logical 3 68 Logical 3 68 Logical 4 68 Logical 5 68 Logical 5 68 Logical 6 67, 130 Logical 6 68 Logical 6 67, 130 Logical 6 68 Logical 6 67, 130 Logical 6 67 Logical 6 67, 130 Logical 6 68 Logical 6 67, 130 Logical 6 67, 130 Logical 6 68 Logical 6 67, 130 Logical 6 67 Logical 6 67, 130 Logical 6 68 Logical 6 67, 130 Logical 6 68 Logical 6 67, 130 Logical 6 68 Logical 6 67 Logical 6 67, 130 Logical 6 68 Logical 6 67, 130 Logical 6 68 Logical 6 68 Logical 6 67 Logical 6 68 Logical	LC display 21	Microdispensing Valve 40
LEMO connector 54 line feed 90 List of Figures 191 List of Figures 194 logical 0 68 logical 1 68 logical 1 68 logical 2 Scenario Mode 67, 129 long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 Main Menu 28 Maint. Cycle (menu item) 34, 153 Maint. Message (menu item) 34 Maintenance 153 Maintenance 153 Maintenance lofticator 153 Maintenance lofticator 153 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 materials 45, 137, 138 MDC 3500-V 182 MDT 301 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA Open Time 68	LCD See LC display	Minimum and Maximum Parameter Limits 70
line feed 90 List of Figures 191 List of Figures 191 List of tables 194 Multi Dot Mode 76 logical 0 68 logical 1 68 Single-Shot Mode 67, 129 long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 Mains cable 57 Maint. Cycle (menu item) 34, 153 Maintenance 153 Maintenance 153 Maintenance 153 Maintenance bar 29 Maintenance lndicator 153 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 male connector 54, 55 materials 45, 137, 138 MDC 3500-V 182 MDC 3500-V 182 MDT 301 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA Obligations of the Operator 8 MDT 307 See Nozzle Insert Cleaning Tool MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 304 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 306 See Nozzl	leakage 65	modes 67
List of Figures 191 List of tables 194 List of tables 194 logical 0 68 Scenario Mode 67 logical 1 68 Single-Shot Mode 67, 129 long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 Mains cable 57 Maint. Cycle (menu item) 34, 153 Maintenance 153 Maintenance 153 Maintenance bar 29 Maintenance lndicator 153 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 male trigger key 25 male itinger key 25 Mace of Tappet, 138 MDC 3500-V 182 MDC 3500-V 182 MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 307 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool ON/OFF switch 23 Open Time 68	LEMO connector 54	Burst Mode 67, 129
List of tables 194 logical 0 68 logical 1 68 logical 1 68 logical 1 68 long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 Mains cable 57 Maint. Cycle (menu item) 34, 153 Maintenance 153 Maintenance bar 29 Maintenance bar 29 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 Male connector 54, 55 Male connector 54, 55 Manual trigger key 25 Mac Sool-V 182 MDC front panel 19 MDC ID (menu item) 27 MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert - Squeezing Out Tool TA MDT 316 See Nozzle Insert - Squeezing Out Tool TA Single-Shot Mode 67 Scenario Mode 67 Scenario Mode 67 Scenario Mode 67 Scenario Mode 67 Single-Shot Mode 67 Multi-Function Mode 67 Multi-Function Mode 67 Multi-Function Tool 18 Multi Dot Mode 76 Multi-Function Tool 18 Multi-Function Tool 18 Multi Dot Mode 76 Multi-Function Tool 18 Multi-Function Tool 18 Multi Dot Mode 76 Multi-Function Tool 18 Multi Dot Mode 76 Lisel Fixed Fool 18 Nozele Lisel Lisel 19 Nozele Insert Claning Tool 15 Noze	line feed 90	External Mode 67, 130
logical 0 68 logical 1 68 logical 2 68 logical 3 68 logical 4 68 logical 6 7 logical 6 8 logical 6 7 logical 6 8 logical 1 68 logical 6 7 logical 1 68 logical 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	List of Figures 191	Infinite Mode 67, 130
logical 1 68 logical 1 69 lo	List of tables 194	Multi Dot Mode 76
long trigger signal 134 LX sealing See Tappet Sealing LX Main Menu 28 mains cable 57 Maint. Cycle (menu item) 34, 153 Maint. Message (menu item) 34 Maintenance 153 Maintenance bar 29 Maintenance lndicator 153 Maintenance Indicator 153 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 Male connector 54, 55 Male connector 54, 55 Male connector 54, 55 Mozzle Insert 40, 41 Martenals 45, 137, 138 Mozzle Insert Changing Tool 15 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 305 See Adjust Tool TA MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 306 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool	logical 0 68	Scenario Mode 67
LX sealing See Tappet Sealing LX Main Menu 28 mains cable 57 Maint. Cycle (menu item) 34, 153 Maint Message (menu item) 34 Maint Message (menu item) 34 Maintenance 153 Maintenance bar 29 Maintenance Indicator 153 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MIT 306 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Clean	logical 1 68	Single-Shot Mode 67, 129
Main Menu 28 mains cable 57 Maint. Cycle (menu item) 34, 153 Maint. Message (menu item) 34 Maint. Message (menu item) 34 Maint. Message (menu item) 34 Maintenance 153 Maintenance bra 29 Maintenance lndicator 153 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 male connector 54, 55 manual trigger key 25 male connector 54, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 305 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool MDT 305 See Nozzle Insert Cleaning Tool MDT 306 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool ON/OFF switch 23 MDT 323 See Nozzle Insert - Squeezing Out Tool TA Open Time 68	long trigger signal 134	Multi Dot Mode 76
mains cable 57 Maint. Cycle (menu item) 34, 153 Maint. Message (menu item) 34 Maint. Message (menu item) 34 Maintenance 153 maintenance bar 29 Maintenance lndicator 153 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 malul trigger key 25 malul trigger key 25 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 305 See Adjust Tool TA MDT 307 See Adjust Tool TA MIN See nozzle insert Normally Open 11, 45 Norzle (menu item) 27 Nozzle (menu item) 27 Nozzle fixation nut 19 Nozzle fixation nut 19 Nozzle Fixation Nuts 173 Nozzle heater 82 nozzle heater 82 nozzle insert 40, 41 Nozzle Insert - Squeezing Out Tool TA 15 Nozzle Insert Changing Tool 15 Nozzle Insert Cleaning Holder 15 Nozzle Insert Cleaning Tool 15 Nozzle Insert Squeezing Out Tool TA Obligations of the Operator 8 MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool TA Open Time 68	LX sealing See Tappet Sealing LX	Multi-Function Tool 18
Maint. Cycle (menu item) 34, 153 Maint. Message (menu item) 34 Maint. Message (menu item) 34 Maintenance 153 maintenance 153 maintenance bar 29 Maintenance Indicator 153 Maintenance needed 162 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 304 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool MDT 325 See Nozzle Insert Cleaning Tool MDT 326 See Nozzle Insert Cleaning Tool MDT 327 See Nozzle Insert Cleaning Tool MDT 328 See Nozzle Insert Cleaning Tool MDT 329 See Nozzle Insert Cleaning Tool MDT 320 See Nozzle Insert Cleaning Tool MDT 320 See Nozzle Insert Cleaning Tool MDT 320 See Nozzle Insert Cleaning Tool ON/OFF switch 23 Open Time 68	Main Menu 28	NAK 90
Maint. Message (menu item) 34 Maintenance 153 maintenance bar 29 Maintenance Indicator 153 Maintenance leded 162 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool TA MDT 305 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 323 See Nozzle Insert Cleaning Tool TA Open Time 68	mains cable 57	Needle Lift 69
Maintenance 153 maintenance bar 29 Maintenance Indicator 153 Maintenance Indicator 153 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 305 See Adjust Tool TA MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool MDT 324 See Nozzle Insert Cleaning Tool MDT 325 See Nozzle Insert Cleaning Tool MDT 326 See Nozzle Insert Cleaning Tool MDT 327 See Nozzle Insert Cleaning Tool MDT 328 See Nozzle Insert Cleaning Tool MDT 329 See Nozzle Insert Cleaning Tool MDT 329 See Nozzle Insert Cleaning Tool MDT 320 See Nozzle Insert Cleaning Tool MDT 321 See Nozzle Insert Cleaning Tool MDT 322 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool MDT 326 See Nozzle Insert Cleaning Tool MDT 327 See Nozzle Insert Cleaning Tool MDT 328 See Nozzle Insert Cleaning Tool MDT 329 See Nozzle Insert Cleaning Tool MDT 320 See Nozzle Insert Cleaning Tool MDT 320 See Nozzle Insert Cle	Maint. Cycle (menu item) 34, 153	
maintenance bar 29 Maintenance Indicator 153 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 303 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 307 See Adjust Tool TA MDT 303 See Nozzle Insert Cleaning Tool MDT 303 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert	Maint. Message (menu item) 34	Normally Open 11, 45
Maintenance Indicator 153 Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 Male connector 54, 55 Male connector 54, 55 Mozzle insert 40, 41 Mozzle Insert - Squeezing Out Tool TA 15 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool YM MDT 307 See Adjust Tool TA MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MD	Maintenance 153	not acknowledged <i>See</i> NAK
Maintenance needed 162 Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 Insert 154 Insert 155 Insert 155 Insert 156 Insert 157 Insert 157 Insert 158 Insert 159 Inser	maintenance bar 29	Nozzle (menu item) 27
Maintenance of Tappet, Tappet Sealing and Nozzle Insert 154 male connector 54, 55 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 304 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert - Squeezing Out Tool TA Open Time 68	Maintenance Indicator 153	
Insert 154 male connector 54, 55 male connector 54, 55 manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 304 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 308 See Nozzle Insert Cleaning Tool MDT 309 See Nozzle Insert Cleaning Tool MDT 301 See Nozzle Insert Changing Tool MDT 302 See Nozzle Insert Changing Tool MDT 303 See Nozzle Insert Changing Tool MDT 304 See Torque Wrench Tool VM Obligations of the Customer 8 MDT 305 See Nozzle Insert Cleaning Tool MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert - Squeezing Out Tool TA Open Time 68	Maintenance needed 162	
male connector 54, 55 manual trigger key 25 Mozzle Insert - Squeezing Out Tool TA 15 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool VM MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert - Squeezing Out Tool TA Open Time 68	Maintenance of Tappet, Tappet Sealing and Nozzle	Nozzle Fixation Nuts 173
manual trigger key 25 materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert - Squeezing Out Tool TA Nozzle Insert Cleaning Tool Nozzle Insert Cleaning Tool Number of Pulses 70 Obligations and Liability 8 Obligations of the Customer 8 Obligations of the Operator 8 ON/OFF switch 23 Open Time 68		nozzle heater 82
materials 45, 137, 138 MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 323 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert - Squeezing Out Tool TA Nozzle Insert Changing Tool 15 Nozzle Insert Cleaning Tool 15 Nozzle Insert Cle	male connector 54, 55	
MDC 3500-V 182 MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Out Tool TA Nozzle Insert Cleaning Tool Number of Pulses 70 Obligations and Liability 8 Obligations of the Customer 8 Obligations of the Operator 8 ON/OFF switch 23 Open Time 68	manual trigger key 25	Nozzle Insert – Squeezing Out Tool TA 15
MDC front panel 19 MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert - Squeezing Out Tool TA Nozzle Insert Cleaning Tool Number of Pulses 70 Number of Pulses 70 Obligations and Liability 8 Obligations of the Customer 8 Obligations of the Operator 8 ON/OFF switch 23 Open Time 68		Nozzle Insert Changing Tool 15
MDC ID (menu item) 27 MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert – Squeezing Out Tool TA Nozzle Inserts 179 Number of Pulses 70 Obligations and Liability 8 Obligations of the Customer 8 Obligations of the Operator 8 ON/OFF switch 23 Open Time 68	MDC 3500-V 182	Nozzle Insert Cleaning Holder 15
MDH-48-BY 30, 31, 82 MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert – Squeezing Out Tool TA Number of Pulses 70 Obligations and Liability 8 Obligations of the Customer 8 Obligations of the Operator 8 ON/OFF switch 23 Open Time 68	MDC front panel 19	Nozzle Insert Cleaning Tool 15
MDT 301 See Universal Tool MDT 303 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert – Squeezing Out Tool TA Number of Pulses 70 Obligations and Liability 8 Obligations of the Customer 8 Obligations of the Operator 8 ON/OFF switch 23 Open Time 68	MDC ID (menu item) 27	Nozzle Inserts 179
MDT 303 See Nozzle Insert Changing Tool MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert – Squeezing Out Tool TA Obligations and Liability 8 Obligations of the Customer 8 Obligations of the Operator 8 ON/OFF switch 23 Open Time 68	MDH-48-BY 30, 31, 82	NP 70
MDT 306 See Torque Wrench Tool VM MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert – Squeezing Out Tool TA Obligations of the Customer 8 Obligations of the Operator 8 ON/OFF switch 23 Open Time 68		
MDT 307 See Adjust Tool TA MDT 316 See Nozzle Insert Cleaning Tool MDT 323 See Nozzle Insert – Squeezing Out Tool TA Obligations of the Operator 8 ON/OFF switch 23 Open Time 68		
MDT 316 See Nozzle Insert Cleaning Tool ON/OFF switch 23 MDT 323 See Nozzle Insert – Squeezing Out Tool TA Open Time 68	•	
MDT 323 See Nozzle Insert – Squeezing Out Tool TA Open Time 68	·	· · · · · · · · · · · · · · · · · · ·
MDT 324 See Nozzle Insert Cleaning Holder Operation 67		•
	MDT 324 See Nozzle Insert Cleaning Holder	Operation 67

O-ring 41	Retrieving Parameter Sets 71
Other Parts 180	Rising 68
Overview 92	RS-232C Commands 90
Overview of the Command Functions 186	RS-232C interface 23, 89
Overview of the MDC Menu 185	RS-232C standard 89
Parameter Input and Start 66	RTC 27
parameter limits 29, 70	Safety Notes 8
parameters 68	Saving Parameter Sets 71
Delay 69	saving parameter setups 39
dispensing parameters 66	ScDL See Scenario-Delay
Falling 69	Scenario (submenu) 35
limits 70	scenario delay 35
Needle Lift 69	Scenario Mode 67
NP 70	Scenario OFF 131
Number of Pulses 70	Scenario ON 131
Open Time 68	Scenario-Def. (submenu) 35
parameter limits 29	Scenario-Delay 74
parameter sets 71	Scenarios 35, 74
Retrieving parameter sets 71	basics 74
Rising 68	delete a scenario 124
Saving parameter sets 71	scenario delay 35
saving parameter setups 39	Scenario-Def 35
Parameters for the Dispensing Process 68	Scenario-Delay 74
PE 45	ScNP 75
PEEK 45	segment 74
Pin Functions 89, 128	submenu 35
PLC interface 128	ScNP 75
RS-232C interface 89	SCPI standard 89
PLC interface 24, 127	sealing materials 137
PLC-interface 184	sealings 46, 137, 138, 175
PLC-Interface 15-pin, Sub-D 127	CeTeDur 137
PLC-Signals 129	sealing materials 137
PLCStop 35, 74	Tappet Sealing LX 41
Please try again! 171	Tappet Sealing PE 41
Polyetheretherketone (PEEK) 45	Tappet Sealing PTFE 41
Polyethylene (PE) 45	Sealmounter (part of Universal Tool) 16
Polytetrafluoroethylene (PTFE) 45	segment 74
power connection 23	select pin settings 73
Power Supply 56	Select Pins 72, 75
Preliminary Notes 136	Select_I 72,75
Pre-purifying 139	Select_II 72,75
Protective Equipment and Safety Clothing 12	Select_III 72
PTFE 45	Select_IV 72
Pull-Ups to 24 V 72, 75	sensor cable 55
Pulse Parameters (submenu) 29	sensor socket 23
purifying agent 140	serial commands 90
Qualifications of Operators and Maintenance	serial interface 89
Personnel 11	Serial Interface RS-232C 9-Pin Sub-D 89
Quality class 10	Service Code (menu item) 37, 80
RAM 39	Service-Code 37, 80
reaction times 90	Set Nozzle 153
Ready 28	Set Tappet 153
real time clock 27	Setup 0 74
Recycling and Disposal 172	short trigger signal 133
Removing Air Inclusions from the Fluid Box 65	simpler cleaning 145
Reset ALL 26, 37	SingleDosOK 129
Residual Risks 8	Single-Shot Mode 67, 129
response to commands 90	socket for cooling 24



socket for heating 24	Nozzle Insert Cleaning Tool 1/
Spare Parts and Tools 173	Sealmounter 16
Special Features of the Valve 45	Tappet Sealing Changing Tool 18
Specification and Technical Notes 10	Torque Wrench Tool VM 19
Standard Commands for Programmable Instruments	Torques 19
See SCPI standard	Universal Tool 16
Status Messages 171	top adjust 60
Storage 172	Torque Wrench Tool VM 15, 19
Submenu 29, 30, 34, 35, 37	Torques 19
Submenu Cooler 31	transformation factor 70
Submenu Heater 31	Transport 172
submenus 27	Transport, Storage and Disposal 172
Cooler 31	TRIGGER commands 91
Heater 30, 32	trigger delay 127
Pulse-Parameters 29	trigger impulse 67
Scenario 35	trigger signal 133
Scenario-Def. 35	Triggering a Dispense Sequence 67
Service-Option 37	Universal Tool 15
Status 34	UTC 27, 34
Supply Unit 175	valve 40
suppress maintenance messages 153	actuator system 41
Switching OFF the Microdispensing System 88	adjust screw 41
System behavior 68	assembling 48
Table of Error Messages 157	cable connection 42
tappet	compressed air connections 42
Tappet (menu item) 27	cooling 10
Tappet (menu item) 27	Dimensional Drawing 183
tappet centering screw 19	dimensions 44
tappet guidance 41	electronics module 41
tappet sealing 41	explosion view 42
Tappet Sealing LX 41	first assembling 48
Tappet Sealing PE 41	installation of the valve 52
Tappet Sealing PTFE 41	media supply 41
Tappets 173	temperature limits 10
Technical Data 20, 44	valve body 40
Technical Support 7	Valve ID 27
temperature limit of the actuator system 10	Valve Passport 158
temperature limit of the valve body 10	weight 44
The Adjust Process 60	Valve
Tightening screw 19	with air cooling 59
Tools 15, 178	valve body 40
Adjust Tool TA 16	Valve ID (menu item) 27
Adjustgrip 16	Valve Passport 158
Bits 19	Valves with Air cooling 59
Hexagon Key Set 18	Warnings 10
MDTS 1 - Torque Wrench Tool Set 19	wearing parts 154
Multi-Function Tool 18	wiring 53
Nozzle Insert – Squeezing Out Tool TA 17	working configuration 39
Nozzle Insert – Squeezing Out 1001 1A 17 Nozzle Insert Changing Tool 16	wrap-around 27
Nozzle Insert Changing 1001-10 Nozzle Insert Cleaning Holder 17	Wrong calibration 171
MOZZIE IIISER CIEGIIII I I I I I I I I	vviolig calibration 171